

GOT	GT37	GT27	GT25	GT16	GT15
15"	17.5 (0.69)	10 (0.39)	-	6.5 (0.26)	8 (0.31)
12.1"	17.5 (0.69)	10 (0.39)	10 (0.39)	5(0.20)	5 (0.20)
10.4"	17.5 (0.69)	10 (0.39)	10 (0.39)	8(0.31)	8(0.31)
8.4"	17.5 (0.69)	10 (0.39)	10 (0.39)	10 (0.39)	10 (0.39)
5.7"	-	10 (0.39)	-	10 (0.39)	10 (0.39)


Unit : mm(inch)

TRANSPORTATION PRECAUTIONS	
<div style="text-align: center;"> CAUTION </div> <ul style="list-style-type: none"> Make sure to transport the GOT main unit and/or relevant unit(s) in the manner they will not be exposed to the impact exceeding the impact resistance described in the general specifications of the User's Manual for the GOT used, as they are precision devices. Failure to do so may cause the unit to fail. Check if the unit operates correctly after transportation. 	



Referenced Standard
GB/T 15969.2 (Requirement of Chinese standardized law)

Select the used bus connection unit according to the connection target and connection position.

(1) Select the bus connection unit according to the connection target.

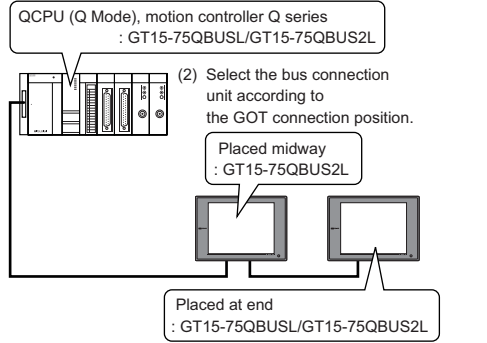

 (4) Fasten the bus connection unit by tightening its mounting screws (4 places) with tightening torque 0.36 to 0.48 N•m.

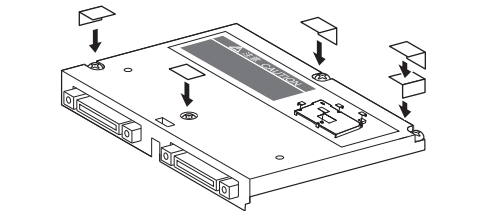

⚠ For safe use

- Before using the product for special purposes such as nuclear power, electric power, aerospace, medicine or passenger movement vehicles, consult with Mitsubishi Electric.
- This product has been manufactured under strict quality control. However, when installing the product where major accidents or losses could occur if the product fails, install appropriate backup or failsafe functions in the system.

Mitsubishi Electric Automation, Inc.
500 Corporate Woods Parkway, Vernon Hills, IL 60061, U.S.A.
Tel: +1-847-478-2100

Mitsubishi Electric do Brasil Comercio e Servicos Ltda.
Avenida Adelson Cardana, 293, 21 andar, Bethaville, Barueri SP, Brazil
Tel: +55-11-4689-3000

Mitsubishi Electric Automation, Inc. Mexico Branch
Boulevard Miguel de Cervantes Saavedra 301, Torre Norte Piso 5, Ampliación Granada,
Miguel Alemán, Ciudad de Mexico, Mexico, C.P.11520
Tel: +52-55-3697-7512

Mitsubishi Electric-Electrical-Palitz 1, 4002, Klangenfurt, Germany
Tel: +49-2102-486-0
Mitsubishi Electric Europe B.V. UK Branch
Travellers Lane, UK-Hatfield, Hertfordshire, AL10 8XB, U.K.
Tel: +44-1707-28-8780
Mitsubishi Electric Europe B.V. Italian Branch
Centro Direzionale Colonna - Palazzo Sirio, Viale Colonna 7, 20864 Agrate Brianza (MB), Italy
Tel: +39-039-60531
Mitsubishi Electric Europe B.V. Spanish Branch
Carretera de Ruba, 76-80-Apdo. 420, E-08190 Sant Cugat del Valles (Barcelona), Spain
Tel: +34-093-65-3131
Mitsubishi Electric Europe B.V. French Branch
25, Boulevard des Bouvets, 92741 Nanterre Cedex, France
Tel: +33-1-55-68-55-68
Mitsubishi Electric Europe B.V. Czech Branch
Pekarska 621/7, 155 00 Praha 5, Czech Republic
Tel: +420-255 719 200
Mitsubishi Electric Turkey A.S. Uremy Branch
Serfilal Mahallesi Nutuk Sokak No: 19, TR-34775 Uremy / Istanbul, Turkey
Tel: +90-216-528-3990
Mitsubishi Electric Europe B.V. Polish Branch
ul. Krakowska 48, 32-063 Balice, Poland
Tel: +48-12-347-65-00

Asia-Pacific
Mitsubishi Electric Automation (China) Ltd.
Mitsubishi Electric Automation Center, No.1386 Hongqiao Road, Shanghai, China
Tel: +86-21-2322-3030

Mitsubishi Electric Automation Korea Co., Ltd.
7F to 9F, Gangseo Hangang Xi-tower A, 401, Yangcheon-ro, Gangseo-Gu, Seoul 07528, Korea
Tel: +82-2-3660-9569

Mitsubishi Electric Asia Pte. Ltd.
307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943
Tel: +65-6473-2308

Tel: +66-2682-6522 to 31
PT. Mitsubishi Electric Indonesia
Gedung Jaya 8th Floor, JL. MH. Thamrin No.12, Jakarta Pusat 10340, Indonesia

Tel: +84-28-3910-5945
Mitsubishi Electric India Pvt. Ltd. Pune Branch
Emerald House, EL-3, J Block, M.I.D.C., Bhosari, Pune - 411026, Maharashtra, India
Tel: +91-20-2710-2000
MITSUBISHI ELECTRIC AUSTRALIA PTY. LTD.
348 Victoria Road, P.O. Box 11, Rydalmere, N.S.W 2116, Australia
Tel: +61-2-9684-7777

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.
Printed in Japan, December 2025.