

INVERTER E800
INVERTER SAFETY GUIDELINE
FR-E820-0008(0.1K) to 0900(22K)
FR-E840-0016(0.4K) to 0440(22K)
FR-E820S-0008(0.1K) to 0110(2.2K)
FR-E810W-0008(0.1K) to 0050(0.75K)



IB-0600857ENG-K(2508)MEE
Specifications subject to change without notice.

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE: TOKYO BUILDING 2-7-3, MARUNOUCHI, CHYODA-KU, TOKYO 100-8310, JAPAN

Manual name	Manual number	Model code	Details
FR-E800 Instruction Manual (Connection)	IB-060085ENG	1AJ048	Manuals describing installation, wiring, specifications, outline dimensions, standards, and how to connect options.
FR-E800 Instruction Manual (Function)	IB-060086ENG	1AJ045	Manual describing details of the functions.
FR-E800 Instruction Manual (Communication)	IB-0600871ENG	1AJ051	Manual describing details of the communications.
FR-E800 Instruction Manual (Maintenance)	IB-0600874ENG	1AJ054	Manual describing how to identify causes of faults and warnings.
FR-E800 Instruction Manual (Functional Safety)	BCN-A23488-000	1AJ030	Manual describing the functional safety.
FR Configurator2 Instruction Manual	IB-0600519ENG	—	Manual describing details of the software used to set inverter parameters using a personal computer.
PLC Function Programming Manual	IB-0600492ENG	—	Manual describing details of the PLC function.

Safety Information
Do not attempt to install, operate, maintain or inspect this product until you have read through this Safety Guideline and supplementary documents carefully to use the equipment correctly. Do not use the product until you have full knowledge of the product mechanism, safety information and instructions.
Installation, operation, maintenance and inspection must be performed by qualified personnel. Here, qualified personnel means a person who meets all the following conditions:
• A person who possesses a certification in regard with electric appliance handling, or person took a proper engineering training. Such training may be available at your local Mitsubishi Electric office. Contact your local sales office for schedules and locations.
• A person who can access operating manuals for the protective devices (for example, light curtain) connected to the safety control system, or a person who has read these manuals thoroughly and familiarized themselves with the protective devices.

Read this Guideline before use. In addition, scan the 2D code below to download the FR-E800 Instruction Manual (Connection) and read "Safety Instructions". The PDF manual can also be downloaded from the Mitsubishi Electric FA Global Website.



1 INVERTER INSTALLATION AND PRECAUTIONS

When installing the inverter on the enclosure surface, remove the front cover and wiring cover to fix the inverter.


- Install the inverter on a strong surface securely with screws.
- Leave enough clearances and take cooling measures.
- Avoid places where the inverter is subjected to direct sunlight, high temperature and high humidity.
- Install the inverter on a nonflammable wall surface.
- When tightening screws into the upper mounting holes, tilt the screwdriver seven to ten degrees (FR-E820-0050(0.75K) or lower, FR-E820S-0030(0.4K) or lower, FR-E810W-0030(0.4K) or lower).




2 INSTALLATION AND WIRING

2.1 Removal and reinstallation of covers


◆ Removal of the front cover

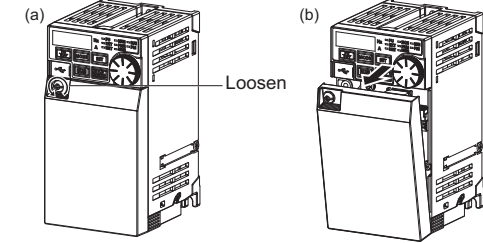


◆ Reinstallation of the front cover

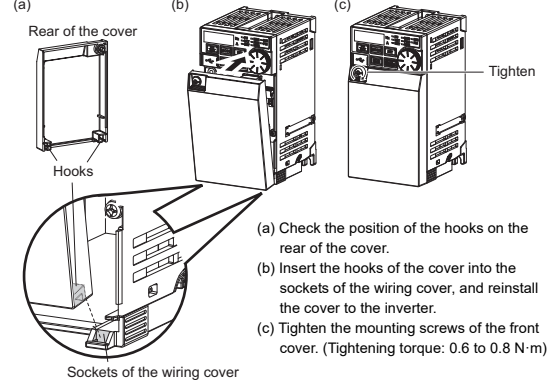


◆ Removal of the lower front cover (FR-E820-0240(5.5K) or higher, FR-E840-0230(11K) or higher)

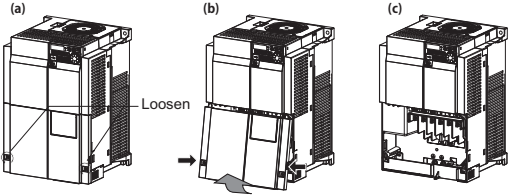


◆ Reinstallation of the lower front cover (FR-E820-0240(5.5K) or higher, FR-E840-0230(11K) or higher)

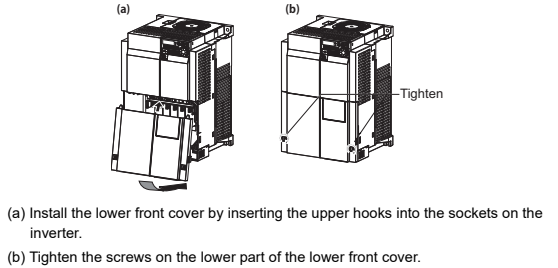


◆ Removal of the wiring cover (FR-E820-0050(0.75K) or lower, FR-E820S-0030(0.4K) or lower, FR-E810W-0030(0.4K) or lower))

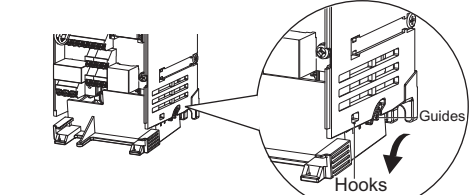


◆ Removal of the wiring cover (FR-E820-0080(1.5K) to FR-E820-0175(3.7K), FR-E840-0016(0.4K) to FR-E840-0095(3.7K), FR-E820S-0050(0.75K) or higher, FR-E810W-0050(0.75K))

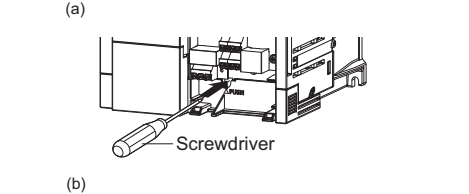


◆ Reinstallation of the wiring cover (FR-E820-0050(0.75K) or lower, FR-E820S-0030(0.4K) or lower, FR-E810W-0030(0.4K) or lower))

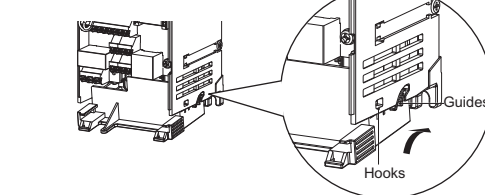


◆ Reinstallation of the wiring cover (FR-E820-0080(1.5K) to FR-E820-0175(3.7K), FR-E840-0016(0.4K) to FR-E840-0095(3.7K), FR-E820S-0050(0.75K) or higher, FR-E810W-0050(0.75K))

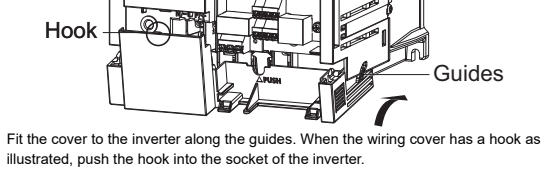


◆ Removal of the wiring cover (FR-E820-0240(5.5K) to 0600(15K), FR-E840-0230(11K), FR-E840-0300(15K))

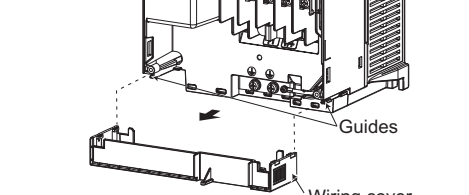


◆ Reinstallation of the wiring cover (FR-E820-0240(5.5K) to 0600(15K), FR-E840-0230(11K), FR-E840-0300(15K))

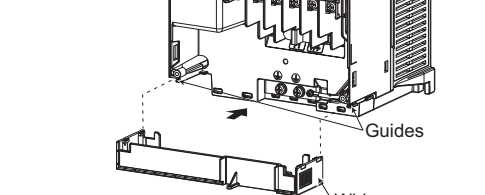


◆ Removal of the wiring cover (FR-E820-0760(18.5K), FR-E820-0900(22K), FR-E840-0120(5.5K), FR-E840-0170(7.5K))

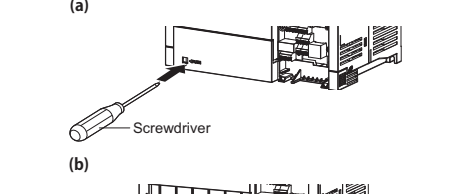


◆ Reinstallation of the wiring cover (FR-E820-0760(18.5K), FR-E820-0900(22K), FR-E840-0120(5.5K), FR-E840-0170(7.5K))

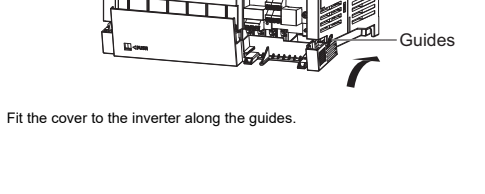

◆ Removal of the wiring cover (FR-E820-0760(18.5K), FR-E820-0900(22K), FR-E840-0380(18.5K), FR-E840-0440(22K))


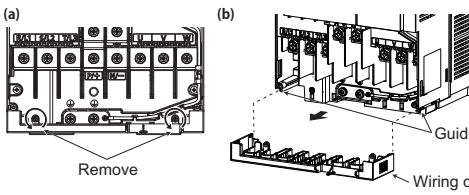


◆ Reinstallation of the wiring cover (FR-E820-0760(18.5K), FR-E820-0900(22K), FR-E840-0380(18.5K), FR-E840-0440(22K))

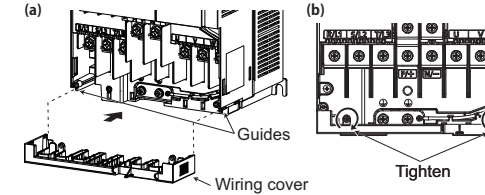


2.2 Main circuit terminal layout and wiring to power supply and motor

◆ Three-phase 200/400 V class

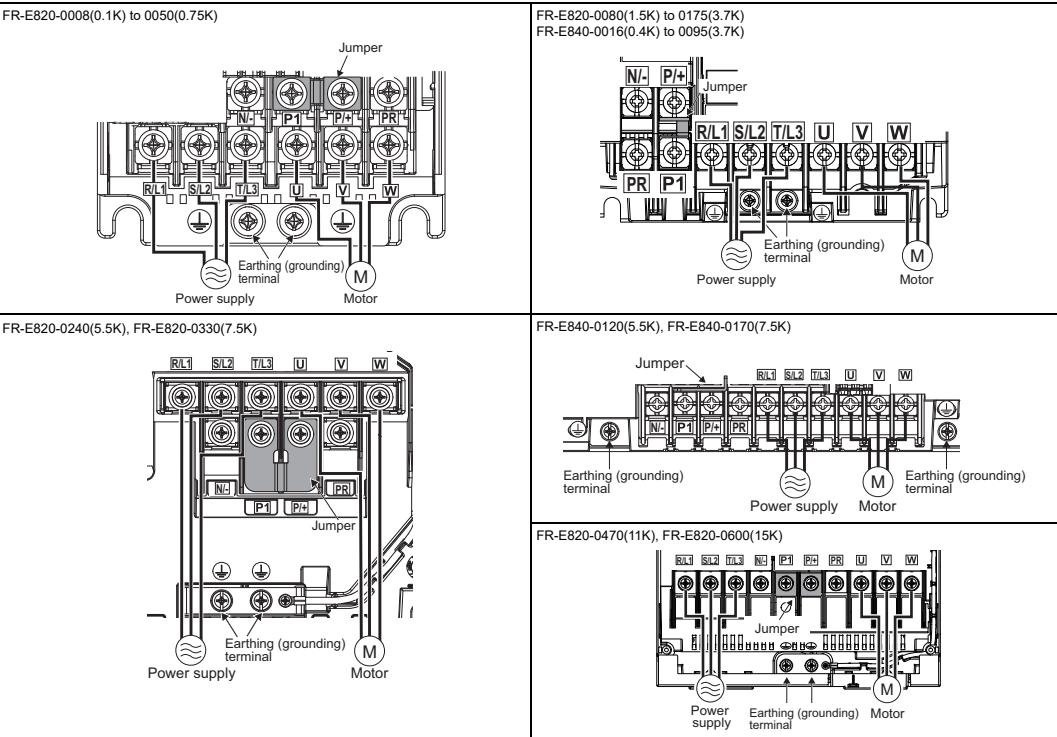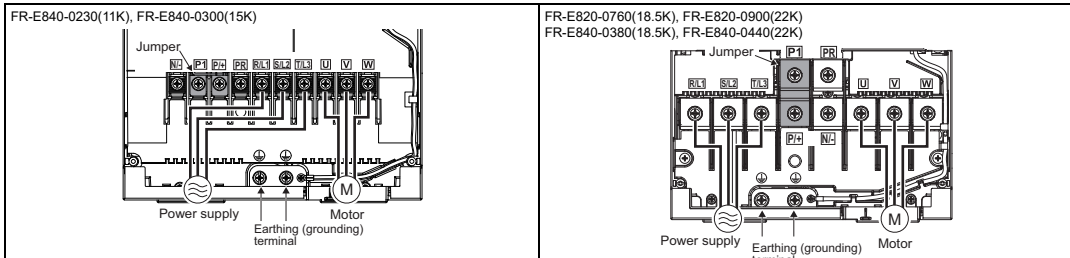

◆ Single-phase 200 V class / Single-phase 100 V class

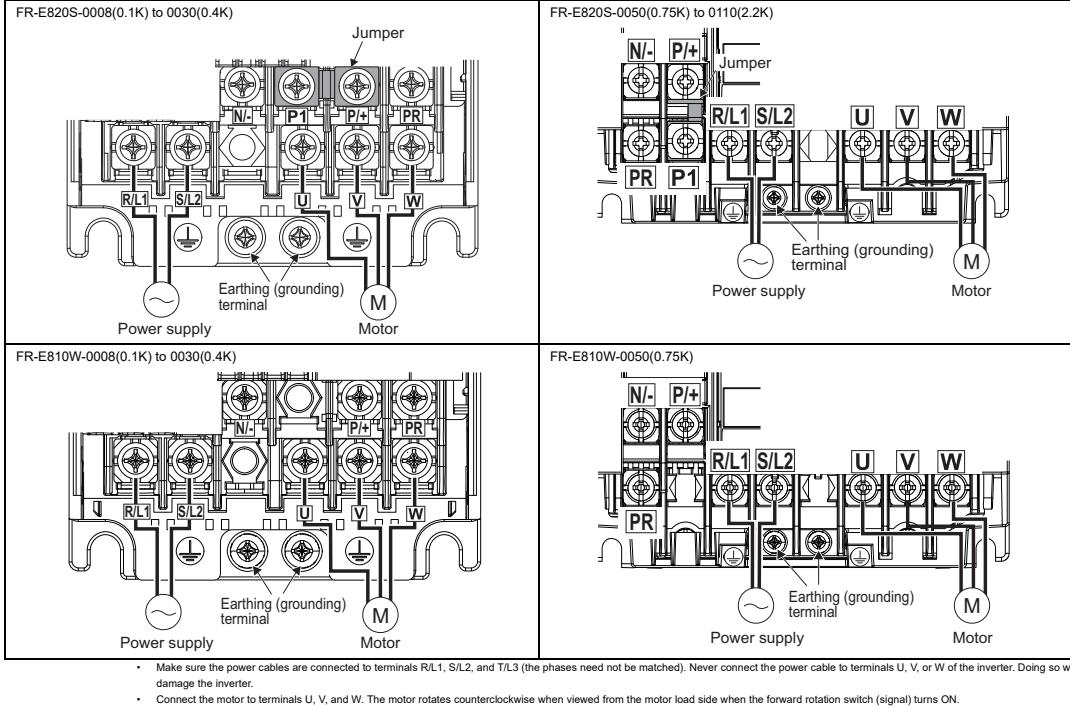

2.3 Applicable cables and wiring length

Select cables of recommended gauge size to ensure that the voltage drop will be 2% or less. If the wiring distance is long between the inverter and motor, the voltage drop in the main circuit will cause the motor torque to decrease especially at a low speed. The following table shows a selection example for the wiring length of 20 m at the ND rating. When using the inverter with the LD rating, refer to the FR-E800 Instruction Manual (Connection).

Applicable inverter model	Terminal screw size *4	Tightening torque N·m	Crimp terminal R/L1, S/L2, T/L3 *5	Cable gauge									
				U, V, W	HV cables, etc. (mm ²) *1	AWG *2	PVC cables, etc. (mm ²) *3	Earth (grounding) cable	U, V, W	Earth (grounding) cable	U, V, W	Earth (grounding) cable	Earth (grounding) cable
FR-E820-0008(0.1K) to 0050(0.75K)	M3.5	1.2	2-3.5	2-3.5	2	2	2	14	14	2.5	2.5	2.5	2.5
FR-E820-0080(1.5K), FR-E820-0110(2.2K)	M4(M3.5)	1.5	2-4	2-4	2	2	2	14	14	2.5	2.5	2.5	2.5
FR-E820-0175(3.7K)	M4(M3.5)	1.5	5-5.4	5-5.4	3.5	3.5	3.5	12	12	4	4	4	4
FR-E820-0240(5.5K)	M5	2.5	5-5.5	5-5.5	5.5	5.5	5.5	10	10	6	6	6	6
FR-E820-0300(7.5K)	M5	2.5	14-6	8-5	14	8	5.5	8	8	16	10	10	10
FR-E820-0470(11K)	M5	2.5	14-6	14-6	14	14	8	8	8	16	16	16	16
FR-E820-0600(15K)	M6(M5)	4.4	22-6	22-6	22	22	14	4	4	25	25	25	25
FR-E820-0760(18.5K)	M6(M5)	7.8	38-8	38-8	38	38	38	2	2	35	35	35	35
FR-E820-0900(22K)	M6(M5)	7.8	38-8	38-8	38	38	38	2	2	35	35	35	35
FR-E840-0016(0.4K) to 0095(3.7K)	M4	1.5	2-4	2-4	2	2	2	14	14	2.5	2.5	2.5	2.5
FR-E840-0120(5.5K)	M4	1.5	5-5.4	2-4	3.5	3.5	3.5	12	14	4	2.5	4	2.5
FR-E840-0170(7.5K)	M4	1.5	5-5.4	5-5.4	3.5	3.5	3.5	12	12	4	4	4	4
FR-E840-0230(11K)	M4	1.5	5-5.4	5-5.4	5.5	5.5	5.5	10	10	6	6	6	6
FR-E840-0300(18.5K)	M5	2.5	8-5	8-5	8	8	5.5	8	8	10	10	10	10
FR-E840-0380(18.5K)	M6	4.4	14-6	8-6	14	8	14	8	8	16	10	16	16
FR-E840-0440(22K)	M6	4.4	14-6	14-6	14	14	22	14	6	8	16	16	16
FR-E820S-0008(0.1K) to 0030(0.4K)	M3.5	1.2	2-3.5	2-3.5	2	2	2	14	14	2.5	2.5	2.5	2.5
FR-E820S-0050(0.75K), FR-E820S-0080(1.5K)	M4	1.5	2-4	2-4	2	2	2	14	14	2.5	2.5	2.5	2.5
FR-E820S-0110(2.2K)	M4	1.5	5-5.4	2-4	3.5	2	2	12	14	4	2.5	2.5	2.5
FR-E810W-0008(0.1K) to 0030(0.4K)	M3.5	1.2	2-3.5	2-3.5	2	2	2	14	14	2.5	2.5	2.5	2.5
FR-E810W-0050(0.75K)	M4	1.5	5-5.4	2-4	3.5	2	2	14	14	2.5	2.5	2.5	2.5

- *1 HV cable (600 V grade heat-resistant PVC insulated wire) with a continuous maximum permissible temperature of 75°C. It is assumed that the cables will be used in a surrounding air temperature of 50°C or less and the wiring distance of 20 m or shorter.
- *2 THHN cable with a continuous maximum permissible temperature of 75°C. It is assumed that the cables will be used in a surrounding air temperature of 40°C or less and the wiring distance of 20 m or shorter. (For use in the United States or Canada, refer to the section "2 Instructions for U.S. and CAN.")
- *3 PVC cable with a continuous maximum permissible temperature of 75°C. It is assumed that the cables will be used in a surrounding air temperature of 40°C or less and the wiring distance of 20 m or shorter. (See the section "2 Instructions for U.S. and CAN.")
- *4 The screw size for terminals R/L1, S/L2, T/L3, U, V, W, PR, P+, N-, and P1 and the earthing (grounding) terminal is shown. For the single-phase 200 V power input models, the screw size for terminals R/L1, S/L2, U, V, W, PR, P+, and N-, and the earthing (grounding) terminal is shown. The screw size for earthing (grounding) the FR-E820-0080(1.5K) to 0175(3.7K) or FR-E820-0008(0.1K) to FR-E820-0050(0.75K) is indicated in parentheses.
- *5 When using a single-phase power input model, terminals are R/L1 and S/L2.


The line voltage drop can be calculated by the following formula:
Line voltage drop [V] = $\sqrt{3} \times$ wire resistance [mΩ/m] $\times$ wiring distance [m] $\times$ current [A] / 1000
Use a larger diameter cable when the wiring distance is long or when it is desired to decrease the voltage drop (torque reduction) in the low speed range.

◆ Total wiring length									
Connect one or more motors within the total wiring length (sum of the wiring lengths of the motor and the inverter) shown in the following table.									
Cable type	Pr.72 setting (carrier frequency)	Voltage class	0.1K	0.2K	0.4K	0.75K	1.5K	2.2K	3.7K or higher
Shielded *1	1 (1 kHz) or lower	100 V, 200 V	50 m (200 m)	50 m (200 m)	75 m (300 m)	100 m (500 m)	100 m (500 m)	100 m (500 m)	100 m (500 m)
		400 V	—	—	50 m (200 m)	50 m (200 m)	75 m (300 m)	100 m (500 m)	100 m (500 m)
	2 (2 kHz) or higher	100 V, 200 V	10 m (30 m)	25 m (100 m)	50 m (200 m)	75 m (300 m)	100 m (500 m)	100 m (500 m)	100 m (500 m)
		400 V	—	—	10 m (30 m)	25 m (100 m)	50 m (200 m)	75 m (300 m)	100 m (500 m)

*1 The value in the parentheses is the total wiring length when unshielded cables are used.

When driving a 400 V class motor by the inverter, surge voltages attributable to the wiring constants may occur at the motor terminals, deteriorating the insulation of the motor. In this case, use a "400 V class inverter-driven insulation-enhanced motor" and set Pr.72 PWM frequency selection according to the wiring length: "14.5 kHz or less" when the wiring length is 50 m or shorter, "8 kHz or less" when the wiring length is from 50 m to 100 m, or "2 kHz or less" when the wiring length is longer than 100 m.

2.4 Terminal connection diagram

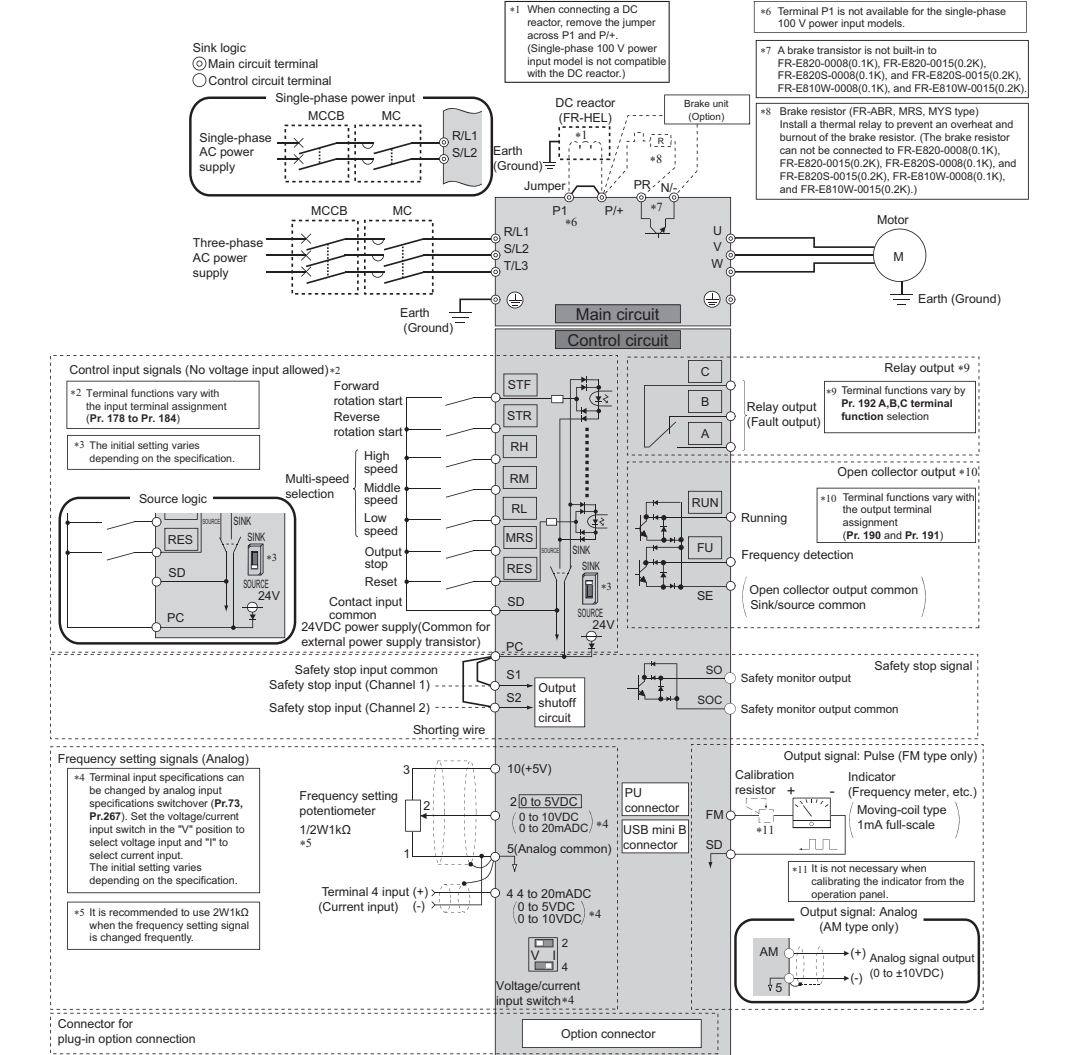

2.5 Details on the main circuit terminals and the control circuit terminals

Type	Terminal symbol	Common	Terminal name	Terminal function description
Main circuit	R/L1, S/L2, T/L3 *1	—	AC power input	Connected to the commercial power supply. Do not connect anything to these terminals when using the high power factor converter (FR-HC2) or the multifunction regeneration converter (FR-FC) in common bus regeneration mode.
	U, V, W	—	Inverter output	Connected to a three-phase squirrel cage motor or a PM motor.
	P+, PR	—	Brake resistor connection	Connect an optional brake transistor (MRS, MYS, FR-ABR) between terminal P+ and PR. (Not available for FR-E820-0008(0.1K), FR-E820-0015(0.2K), FR-E820S-0008(0.1K), FR-E810W-0008(0.1K), and FR-E810W-0015(0.2K).)
	P+, N-, Ni	—	Brake unit connection	Connect the brake unit (FR-BU2, FR-BU, or BU), high power factor converter (FR-HC2), power regeneration common converter (FR-CV), or multifunction regeneration converter (FR-FC) to these terminals.
	P+, P+1	—	DC reactor connection	Remove the jumper across terminals P+ and P1, and connect a DC reactor. (A DC reactor cannot be connected to the single-phase 100 V power input models.) When a DC reactor is not connected, the jumper across terminals P+ and P1 should not be removed.
Control input	—	—	Earth (ground)	For earthing (grounding) the inverter chassis. Be sure to earth (ground) the inverter.
	STF *3	—	Forward rotation start	Turn ON the STF signal to start forward rotation and turn it OFF to stop.
	STR *3	SD (sink (negative common))	Reverse rotation start	Turn ON the STR signal to start reverse rotation and turn it OFF to stop.
	RH, RM, RL	—	Multi-speed selection	Multi-speed can be selected according to the combination of RH, RM and RL signals.
	MRS *3	PC (source (positive common))	Output stop	Turn ON the MRS signal (5 ms or more) to stop the inverter output. Use this signal to shut off the inverter output when stopping the motor with an electromagnetic brake.
Input signal	RES *3	—	Reset	Use this signal to reset a fault output provided when a protective function is activated. Turn ON the RES signal for 0.1 second or longer, then turn it OFF. In the initial setting, reset is always enabled. By setting Pr.75, reset can be enabled only at an inverter fault occurrence. The inverter will restart about 1 second after reset.
	10	5	Power supply for a frequency setting potentiometer	Used as the power supply for an external frequency setting (speed setting) potentiometer.
	2	5	Frequency setting (voltage)	Inputting 0 to 5 VDC (or 0 to 10 VDC) provides the maximum output frequency at 5 V (or 10 V) and makes input and output proportional. Use Pr.73 to switch among input 0 to 5 VDC (initial setting), 0 to 10 VDC, and 0 to 20 mA.
	3	5	Frequency setting (current)	Inputting 0 to 20 mADC (or 0 to 5 VDC, 0 to 10 VDC) provides the maximum output frequency at 20 mA and makes input and output proportional. This input signal is valid only when the AU signal is ON (terminal 2 input is invalid).
	4	5	Frequency setting (current)	Use the terminal A (current input at initial setting), assign "4" to any parameter from Pr.178 to Pr.184 (input terminal function selection) before turning ON the AU signal. The initial setting varies depending on the specification.
Relay	A, B, C	—	Relay output (fault output)	1 changeover contact output indicates that the inverter protective function has activated and the outputs are stopped. Fault: discontinuity across B and C (continuity across A and C). Normal: continuity across B and C (discontinuity across A and C).
	RUN	SE	Inverter running	The output is in LOW state when the inverter output frequency is equal to or higher than the starting frequency (initial value: 0.5 Hz). The output is in HIGH state during stop or DC injection brake operation. *4
	FU	SE	Frequency detection	The output is in LOW state when the inverter output frequency is equal to or higher than the preset detection frequency, and is in HIGH state when it is less than the preset detection frequency. *4
	FM *5	SD	For indication on external meters	Among several monitor items such as output frequency, select one to output it via these terminals.
	AM *5	5	Analog voltage output	(The signal is not

