



Mitsubishi Electric Industrial Robot

CR800 series controller

ADDITIONAL AXIS FUNCTION INSTRUCTION MANUAL

Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

 **CAUTION** All teaching work must be carried out by an operator who has received special training.
(This also applies to maintenance work with the power source turned ON.)
→Enforcement of safety training

 **CAUTION** For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan.
(This also applies to maintenance work with the power source turned ON.)
→Preparation of work plan

 **WARNING** Prepare a device that allows operation to be stopped immediately during teaching work.
(This also applies to maintenance work with the power source turned ON.)
→Setting of emergency stop switch

 **CAUTION** During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc.
(This also applies to maintenance work with the power source turned ON.)
→Indication of teaching work in progress

 **DANGER** Provide a fence or enclosure during operation to prevent contact of the operator and robot.
→Installation of safety fence

 **CAUTION** Establish a set signaling method to the related operators for starting work, and follow this method.
→Signaling of operation start

 **CAUTION** As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
→Indication of maintenance work in progress

 **CAUTION** Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
→Inspection before starting work

The points of the precautions given in the separate "Safety Manual" are given below.
Refer to the actual "Safety Manual" for details.

**DANGER**

When automatic operation of the robot is performed using multiple control devices (GOT, programmable controller, push-button switch), the interlocking of operation rights of the devices, etc. must be designed by the customer.

**CAUTION**

Use the robot within the environment given in the specifications. Failure to do so could lead to faults or a drop of reliability.
(Temperature, humidity, atmosphere, noise environment, etc.)

**CAUTION**

Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.

**CAUTION**

Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.

**CAUTION**

Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.

**CAUTION**

Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.

**CAUTION**

Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to errors or faults.

**WARNING**

Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.

**WARNING**

Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.

**CAUTION**

Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.

**WARNING**

When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.

**CAUTION**

Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.

**CAUTION**

After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.

**CAUTION**

Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.

**CAUTION**

Never carry out modifications based on personal judgments, non-designated maintenance parts. Failure to observe this could lead to faults or failures.

**WARNING**

When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

**CAUTION**

Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF. If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected. Also a dropped or coasted robot arm could collide with peripheral devices.

**CAUTION**

Do not turn OFF the robot controller's main power while rewriting the robot controller's internal information, such as a program and parameter. Turning OFF the robot controller's main power during automatic operation or program/parameter writing could break the internal information of the robot controller.

**DANGER**

Do not connect the Handy GOT when using the GOT direct connection function of this product. Failure to observe this may result in property damage or bodily injury because the Handy GOT can automatically operate the robot regardless of whether the operation rights are enabled or not.

**DANGER**

Do not connect the Handy GOT to a programmable controller when using an iQ Platform compatible product with the CR800-R/CR800-Q series. Failure to observe this may result in property damage or bodily injury because the Handy GOT can automatically operate the robot regardless of whether the operation rights are enabled or not.

**DANGER**

Do not remove the SSCNET III cable while power is supplied to the multiple CPU system or the servo amplifier when using an iQ Platform compatible product with the CR800-R/CR800-Q series. Do not look directly at light emitted from the tip of SSCNET III connectors or SSCNET III cables of the Motion CPU or the servo amplifier. Eye discomfort may be felt if exposed to the light.
(Reference: SSCNET III employs a Class 1 or equivalent light source as specified in JIS C 6802 and IEC60825-1 (domestic standards in Japan).)

**DANGER**

Do not remove the SSCNET III cable while power is supplied to the controller. Do not look directly at light emitted from the tip of SSCNET III connectors or SSCNET III cables. Eye discomfort may be felt if exposed to the light.
(Reference: SSCNET III employs a Class 1 or equivalent light source as specified in JIS C 6802 and IEC60825-1 (domestic standards in Japan).)

**DANGER**

Attach the cap to the SSCNET III connector after disconnecting the SSCNET III cable. If the cap is not attached, dirt or dust may adhere to the connector pins, resulting in deterioration connector properties, and leading to malfunction.

**CAUTION**

Make sure there are no mistakes in the wiring. Connecting differently to the way specified in the manual can result in errors, such as the emergency stop not being released. In order to prevent errors occurring, please be sure to check that all functions (such as the teaching box emergency stop, customer emergency stop, and door switch) are working properly after the wiring setup is completed.

**CAUTION**

Use the network equipments (personal computer, USB hub, LAN hub, etc) confirmed by manufacturer. The thing unsuitable for the FA environment (related with conformity, temperature or noise) exists in the equipments connected to USB. When using network equipment, measures against the noise, such as measures against EMI and the addition of the ferrite core, may be necessary. Please fully confirm the operation by customer. Guarantee and maintenance of the equipment on the market (usual office automation equipment) cannot be performed.

**CAUTION**

To maintain the security (confidentiality, integrity, and availability) of the robot and the system against unauthorized access, DoS^{*1} attacks, computer viruses, and other cyberattacks from unreliable networks and devices via network, take appropriate measures such as firewalls, virtual private networks (VPNs), and antivirus solutions. Mitsubishi Electric shall have no responsibility or liability for any problems involving robot trouble and system trouble by unauthorized access, DoS attacks, computer viruses, and other cyberattacks.

^{*1} DoS: A denial-of-service (DoS) attack disrupts services by overloading systems or exploiting vulnerabilities, resulting in a denial-of-service (DoS) state.

■ History

Print date	Instruction manual No.	Revision content
2017-05-23	BFP-A3504	<ul style="list-style-type: none"> • First print.
2018-02-01	BFP-A3504-A	<ul style="list-style-type: none"> • The CR800-Q controller was added.
2020-10-30	BFP-A3504-B	<ul style="list-style-type: none"> • Amended the precautions regarding the prevention of unauthorized access. • Corrected other mistakes and changed some sections.
2021-09-30	BFP-A3504-C	<ul style="list-style-type: none"> • Added the following parameters: MnSRVON, MnSRVOFF • Corrected other mistakes and changed some sections.
2023-09-14	BFP-A3504-D	<ul style="list-style-type: none"> • Added the CR860 controller.
2024-09-24	BFP-A3504-E	<ul style="list-style-type: none"> • Added (6) to "6.2. Parameter setting of servo amplifier". • Corrected other mistakes and changed some sections.
2025-01-31	BFP-A3504-F	<ul style="list-style-type: none"> • Corrected other mistakes and changed some sections.
2026-01-30	BFP-A3504-G	<ul style="list-style-type: none"> • Added support for MR-J5-B. • Changed some sections.

■ Preface

Thank you for purchasing Mitsubishi Electric Industrial Robot.

The additional axis interface is a general-purpose servo amplifier control interface in combination with CR800 series controller.

Before use, be sure to read this manual for sufficient understanding. Then use the additional axis interface.

In this manual, the CR800 series indicates the CR800 and CR860 controllers.

The CR800 controller indicates the CR800-D, CR800-Q, or CR800-R controller.

The CR860 controller indicates the CR860-D, CR860-Q, or CR860-R controller.

Contents

1. How to use the instruction manual.....	1
1.1 Content of instruction manual.....	1
1.2 Codes of instruction manual	1
1.3 Terms used in instruction manual	2
2. Flow of works	3
2.1 Flow of works	3
3. Additional axis function	4
3.1 What is the additional axis function?	4
3.2 System configuration example of additional axis function	5
3.3 Additional axis interface functions	7
3.4 Additional axis function specifications	7
4. Confirmation of product.....	9
4.1 Necessary products.....	9
5. Connection and Wiring.....	10
5.1 Connection of Robot CPU and servo amplifier.....	10
5.2 Synchronize the power supply of the robot controller	12
5.2.1 Conceptual diagram of an additional axis system (CR800 controller).....	12
5.2.2 The power supply synchronization, the main circuit power supply control for addition axes.(Example).	13
5.3 Installation of noise filter to power cable	17
5.3.1 EMC filter (recommended)	17
5.3.2 Line noise filters	18
5.4 Connection example of servo amplifier and servo motor	19
5.5 Installing the Servo System.....	19
6. Servo system setting.....	20
6.1 Servo amplifier setting.....	20
6.2 Parameter setting of servo amplifier.....	20
7. Setting, Operation and Command Explanation of Robot Additional Axis.....	21
7.1 Description of parameters	21
7.1.1 Parameter list	22
7.1.2 Details of parameters	24
7.1.3 About using the linear servo motor	32
7.2 Confirmation of connection.....	34
7.3 Try to use the robot additional axis	35
7.3.1 Turn ON the power supply	35
7.3.2 Move the robot additional axis	35
7.3.3 Set the origin	36
7.3.4 Create a program	37

7.3.5 Execute a program	37
7.3.6 End the operation	37
7.4 Operation of the Robot's Additional Axis	38
7.4.1 Brake release	38
7.4.2 Origin setting	38
7.4.3 Servo ON/OFF	38
7.4.4 Jog operation	39
7.4.5 Operation of position variable	40
7.4.6 MDI (Manual Data Input) compensation of robot additional axis	41
7.4.7 Operation	41
7.4.8 Stop	42
7.4.9 Error resetting	43
7.5 Explanation of commands	44
7.5.1 Interpolation commands	44
7.5.2 Synchronous control of robot additional axis (travel axis)	45
7.5.3 Position variables	48
7.6 Example of System Configuration of the Robot's Additional Axis	49
7.6.1 Travel axis system	49
8. User Mechanism Settings, Operation, and Commands	55
8.1 Procedure for Setting the Parameters of the User Mechanism	55
8.2 Description of parameters	55
8.2.1 Parameter list	56
8.2.2 Details of parameters	58
8.2.3 About using the linear servo motor	67
8.3 Confirmation of connection	69
8.4 Try to use the mechanical additional axis.	70
8.4.1 Turn ON the power supply	70
8.4.2 Move the user mechanism.	71
8.4.3 Setting the Origin	72
8.4.4 Create a program	73
8.4.5 Execute a program	73
8.4.6 End the operation	73
8.5 Operation of the User Mechanism	74
8.5.1 Brake release	74
8.5.2 Origin setting	74
8.5.3 Servo ON/OFF	74
8.5.4 Jog operation	74
8.5.5 Operation of position variable	75
8.5.6 Operation	75

8.5.7 Stop.....	75
8.5.8 Error resetting	76
8.6 Explanation of commands	77
8.6.1 Position variables	77
8.6.2 Commands	78
8.6.3 Limitation when using user mechanism	85
8.7 Example of System Configuration of the User Mechanism	86
8.7.1 Rotation table system.....	86
8.7.2 System with multiple axes	94
9. Such a Case	103
10. Appendix	104
10.1 Error list	104
10.2 Add axis limit switch function.....	106
10.2.1 Outline.....	106
10.2.2 Setting	107
10.2.3 Error list.....	109

1. How to use the instruction manual

This manual describes the functions, which are added or changed in the additional axis interface. For the functions and their operation methods provided in the standard controller, refer to separate "Instruction Manual/ Controller setup, basic operation, and maintenance".
Moreover, for the functions and their operation methods prepared in the servo amplifier and servomotor, refer to "Instruction Manual for Servo Amplifier and Servomotor".

1.1 Content of instruction manual

Through the following configuration, this manual describes the functions, which are added or changed in the additional axis interface.

Table 1.2.1 Content of instruction manual

Chapter	Title	Content
1	How to use the instruction manual	This section describes how to use this document (Additional Axis Interface User's Manual).
2	Flow of works	This section describes the work required to build an additional axis system. Please follow the procedure completely.
3	Additional axis function	This section describes the functions and specifications of the additional axis interface.
4	Confirmation of product	Check whether all products required for building a system are available, and the version of the controller for compatibility.
5	Connection and Wiring	This section describes the connection and wiring of the controller and the servo system. Be sure to install the servo amplifier and the motor exactly as instructed in this section.
6	Servo system setting	This section describes how to set up the servo system.
7	Setting, Operation and Command Explanation of Robot Additional Axis	The case in which the additional axis is controlled in synchronization with the robot arm (mechanism No. 1) is described. A series of operation methods from the parameter setting, start to the end, and the added and changed commands are described.
8	User Mechanism Settings, Operation, and Commands	The case in which the additional axis is used as the multi mechanism (controlled asynchronously with the robot arm) is described. A series of operation methods from the parameter setting, start to the end, and the added and changed commands are described.
9	Such a Case	When the additional axis interface is used, a poor motion or error may occur. For the solving methods, refer to this chapter as necessary.
10	Appendix	Since the errors added to use the additional axis interface are herein described, refer to them as necessary. For the parameter error list and others not directly concerned with the commands and additional axis connection, refer to the items of "Instruction Manual for Robot Controller".

1.2 Codes of instruction manual

This manual uses the codes and their expression as shown in Table 1.2.1.

Table 1.2.1 Codes of instruction manual

Code	Meaning
[JOG]	If [] is added in the sentence as shown on the left, it means the key of the teaching pendant.
[SERVO] + [RESET] (A) (B)	It means that (B) key is pressed with (A) key pressed. This example means that [RESET] key is pressed with [00SERVO] pressed.
T/B	It means teaching pendant.

1.How to use the instruction manual

1.3 Terms used in instruction manual

The following terms are used in this manual.

(1) Additional axis interface

The additional axis interface means a general-purpose servo amplifier control interface which is used in combination with controller (CR800 series).

(2) Standard system

This means the system which does not use the additional axis interface, a configuration of controller and robot arm.

(3) Additional axis system

This means the system which uses the additional axis interface, a configuration of controller (CR800 series), robot arm and additional axis.

(4) Servo system

A total of the servo amplifier and servomotor is called the servo system.

(5) Additional axis

This means the axis, which is controlled with the additional axis interface. The robot additional axis and mechanical additional axis are generally called the additional axes.

(6) Robot additional axis

The robot additional axis means the axis, which is added to the robot in order to control the additional axis in synchronization with the robot arm (mechanism No. 1). As special, the axis used as the 7th axis of the robot is called the additional axis 1, and the axis used as the 8th axis is called the additional axis 2.

(7) User mechanism

When the additional axis is used as a multi-mechanism (controlled asynchronously with the robot arm), each axis of the mechanism is called a user mechanism.


(8) Multi mechanism

The multi mechanism means that plural robots (mechanism) are controlled from one controller.

2. Flow of works

The flow of the works for the additional axis interface is shown below. Referring to the following, proceed with the works without excess and shortage.

2.1 Flow of works

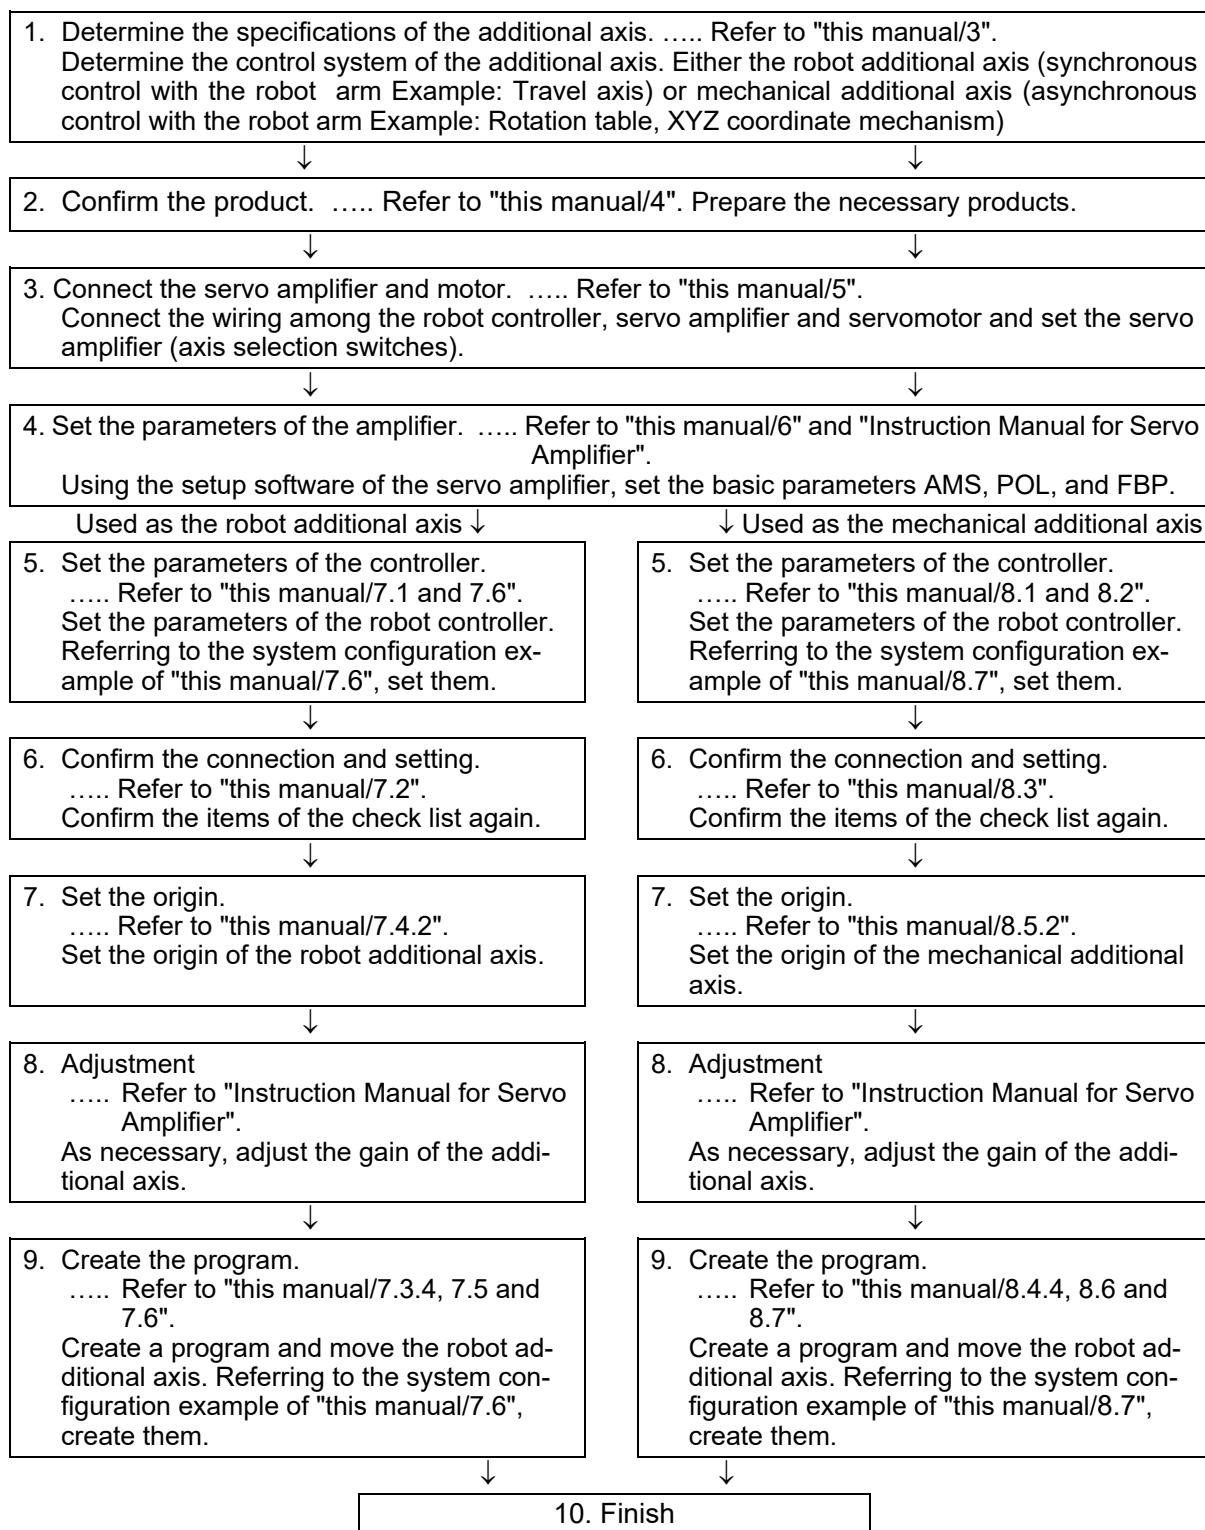

3. Additional axis function

3. Additional axis function

This section describes the functions and specifications of the additional axis.

3.1 What is the additional axis function?

The additional axis function is an function, which uses the general-purpose servo amplifier (Refer to "Table 3.1.) of Mitsubishi and the corresponding servomotors in order to allow the plural above servomotors to be controlled from the robot controller.

Table 3.1 Applicable servo systems

Maker name	Servo amplifier name	Type	Remarks
Mitsubishi Electric Corp.	MELSERVO-J4 series	MR-J4-□B (ABS specifications) MR-J4W□-□B (ABS specifications)	<ul style="list-style-type: none">• In this manual, the servo amplifiers with the model names shown on the left are collectively referred to as MR-J4-B.• It can be connected in a mixed configuration with the MR-J5-B shown below.
	MELSERVO-J5 series	MR-J5-□B (ABS specifications) MR-J5W□-□B (ABS specifications)	<ul style="list-style-type: none">• In this manual, the servo amplifiers with the model names shown on the left are collectively referred to as MR-J5-B.• It can be connected in a mixed configuration with the MR-J4-B shown above.• The MR-J5-B can be connected when controller software version E4 or later is used.• When connecting the MR-J5-B, set the AX-AMPMDL parameter.


Refer to "3.4. Additional axis function specifications" for the details of corresponding servo amplifier.

3.2 System configuration example of additional axis function

If the function of the additional axis is used, the following system can be configured.

- (1) Robot additional axis Like the travel axis, etc., the axis starts moving and stops moving (as a part of the robot) in synchronization with the robot arm.
- (2) Mechanical additional axis Like the rotation table, positioning device, etc., the axis is separately (asynchronously) controlled regardless of the robot arm.

"Fig. 3.2.1" shows the system in which the robot arm is arranged on the travel axis. In this case, the travel axis is a robot additional axis (controlled in synchronization with the robot arm).

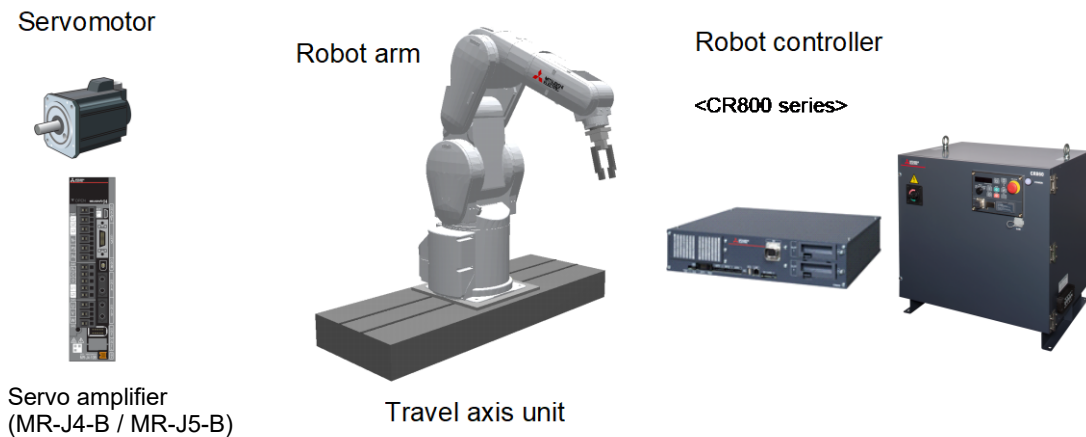


Note) The fig of the robot arm is the vertical multi-joint type 6 axis robot's example.

Fig. 3.2.1 Travel axis system (an example)

3.Additional axis function

"Fig. 3.2.2 " shows such an example as the rotation table is used as the mechanical additional axis (used as the multi mechanism).

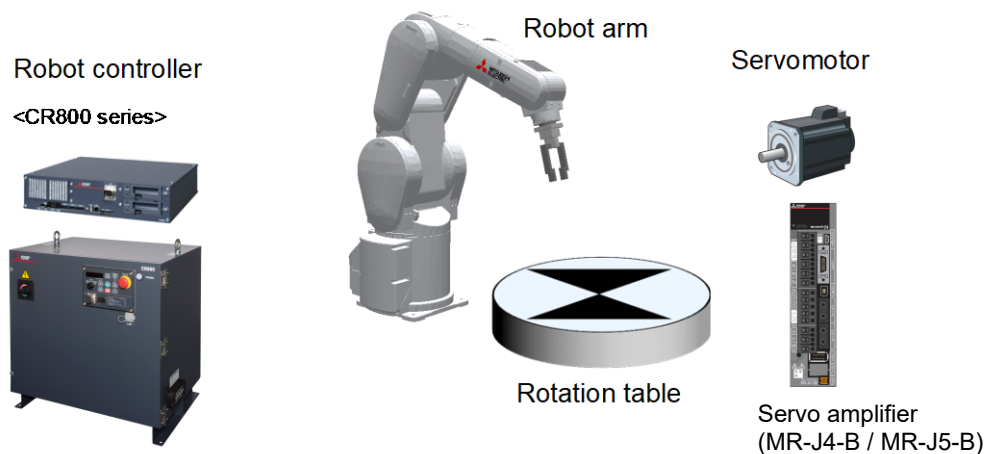

Note) The fig of the robot arm is the vertical multi-joint type 6 axis robot's example.

Fig. 3.2.2 Rotation table system (an example)

The figure below shows an example of a system consisting of a standard robot, a vertical moving axis and a rotary axis.

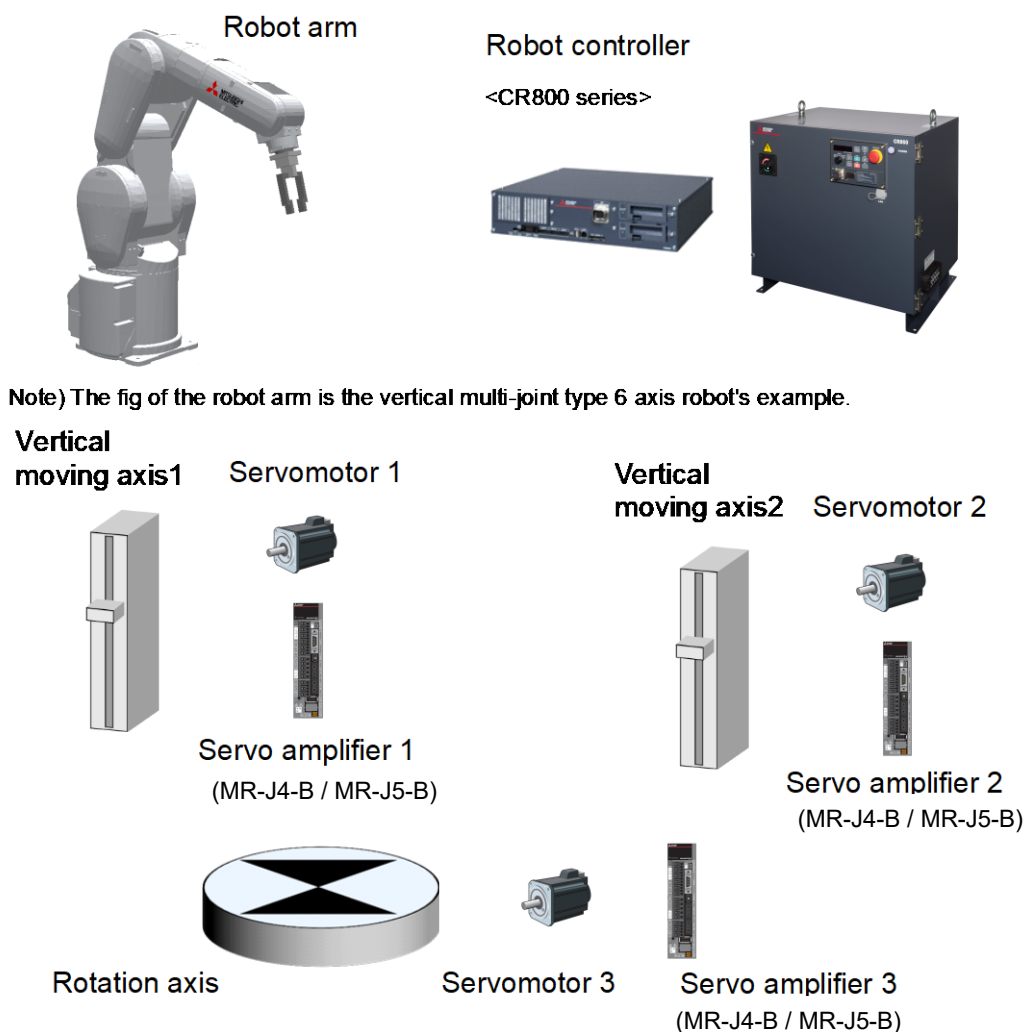


Fig. 3.2.3 Multiple axis system (an example)

3.3 Additional axis interface functions

The additional axis interface has the following functions.

- (1) The robot controller can control a maximum of 2 axes such the travel axis, etc., as the 7th and 8th axes of the robot arm.
- (2) The robot controller can control the rotation axis and linear drive axis as the multi mechanism. Here, a maximum of 2 mechanisms excluding the robot arm, and a maximum of 3 axes per mechanism can be controlled.
- (3) As for the user mechanism, a maximum of three axes per unit, i.e., the first, second and third axes, can be controlled.
- (4) The additional axes can be done the jog operation from the teaching pendant.
- (5) The additional axes can be programmed with MELFA-BASICVI and MELFA-BASICV language methods.
- (6) The robot and robot additional axis can be synchronously controlled
(Refer to "this manual/7.5.2Synchronous control of robot additional axis (travel axis) ").

3.4 Additional axis function specifications

The additional axis function specifications are as follows.

Table 3.4.1 Additional axis function specifications

Item	Unit	Specification of robot additional axis	Specification of user mechanism
Number of controllable robots (mechanisms)	Unit/Controller	3	
Number of control axes	Axis/Controller	8	
Number of control axes	Axis	2	3
Applicable amplifier		MELSERVO-J4 series ^{Note4)} MELSERVO-J5 series ^{Note4)}	
Applicable encoder		ABS method only ^{Note1)}	
Communication method		SSCNET III/H (differential communication) of Mitsubishi	
Program method		MELFA-BASICVI, MELFA-BASICV	
Control function		Synchronous interpolation control	
Path control method		CP control/PTP control	PTP control
Acceleration/ deceleration		The trapezoidal method/acceleration/deceleration time pattern can be set.	
Position control		Distance control/angle control can be selected. Actual value control with pitch/deceleration ratio setting	
Minimum command value	mm or deg	0.01 or 0.001 ^{Note2)}	
Maximum motion range	mm or deg	Max. -131072.00 to +131072.00 ^{Note3)}	

Note1) ABS means the absolute value encoder.

Note2) The minimum command value can be changed with the PRGDPNTM parameter. Specifying 2 will set two decimal places and specifying 3 will set three decimal places. Do not specify 1 or smaller value and 4 or larger value. When using values of ± 1000.0 or larger, specify two decimal places. However, the minimum command values for robots with mechanism numbers 2 and 3 will follow the minimum command value for robots or mechanisms with mechanism number 1.

Note3) Limit for each operation can be set at any position. However, the free plane limit cannot be used. The limit of movement range changes with the encoder resolution and the total reduction ratio. Refer to "set up the MEJAR" for details. ("(10) MEJAR (joint operating range)" in "7.1.2. Details of parameters", or "(10) MEJAR (joint operating range)" in "8.2.2. Details of parameters")

Note4) Refer to " Table 3.4.2 Servo amplifier which can be used " for the details of corresponding servo amplifier. Corresponding to absolute position detection system only.

3.Additional axis function

Table 3.4.2 Servo amplifier which can be used

Maker name	Servo amplifier name	Type	Remarks
Mitsubishi Electric Corp.	MELSERVO-J4	MR-J4-□B MR-J4W□-□B	<ul style="list-style-type: none"> • In this manual, the servo amplifiers with the model names shown on the left are collectively referred to as MR-J4-B. • It can be connected in a mixed configuration with the MR-J5-B shown below.
	MELSERVO-J5	MR-J5-□B MR-J5W□-□B	<ul style="list-style-type: none"> • In this manual, the servo amplifiers with the model names shown on the left are collectively referred to as MR-J5-B. • It can be connected in a mixed configuration with the MR-J4-B shown above. • The MR-J5-B can be connected when controller software version E4 or later is used. • When connecting the MR-J5-B, set the AXAMPMDL parameter.

- Only the absolute position detection system is supported.
- The fully closed control cannot be used.

4. Confirmation of product

This section explains the contents to confirm before using additional axis.

4.1 Necessary products

The products necessary in addition to the standard configuration are listed in "Table 4.1.1 Necessary products". For these main products, refer to "Instruction Manual for Servo Amplifier and Servomotor".

Table 4.1.1 Necessary Products

No.	Part name	Model name	Q'ty
1	Servo amplifier, servomotor, option, peripheral device	Refer to "Instruction Manual for Servo Amplifier and Servomotor".	—
2	Battery (for absolute position detection system)	A battery is required when using the MR-J4-B. ^{Note1)}	Amplifier quantity
3	Servo support software (MR Configurator2) (For setup the parameter of servo amplifier and the graph indication, etc.)	SW1DNC-MRC2-E	1
4	Communication cable (Communication cable between personal computer and servo amplifier for setup software)	MR-J3USBCBL3M	1
5	SSCNET III cable	MR-J3BUS*M (* is cable Length)	1

Note1) The MR-BAT6V1SET is required when using the MR-J4□-B.

The battery case (MR-BT6VCASE) and the battery (MR-BAT6V1) are necessary when using MR-J4W□-B.

5. Connection and Wiring

5. Connection and Wiring

This section explains the connection and wiring between the robot controller and the servo system.

5.1 Connection of Robot CPU and servo amplifier

Connect the robot controller and servo amplifier by the SSCNETIII cable. The connection diagram is shown in the following.

In addition, "Fig 5.1.1 Connection of controller and servo amplifier (CR800)" is the example which connects the two sets of servo amplifier.

For details of the contactor control output for the additional axis, refer to the separate "Standard specification manual".

<CR800 controller (front)>

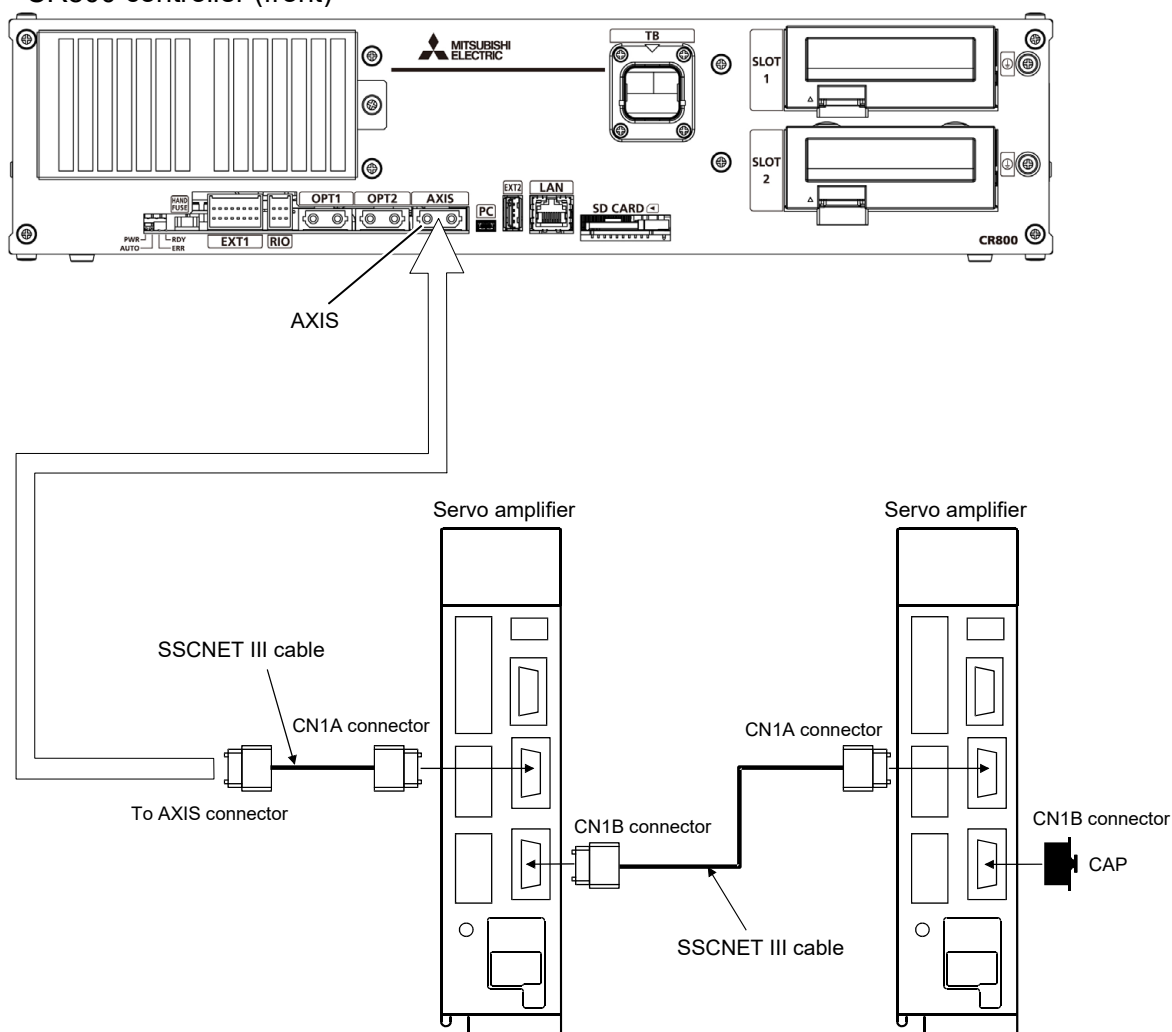


Fig 5.1.1 Connection of controller and servo amplifier (CR800)

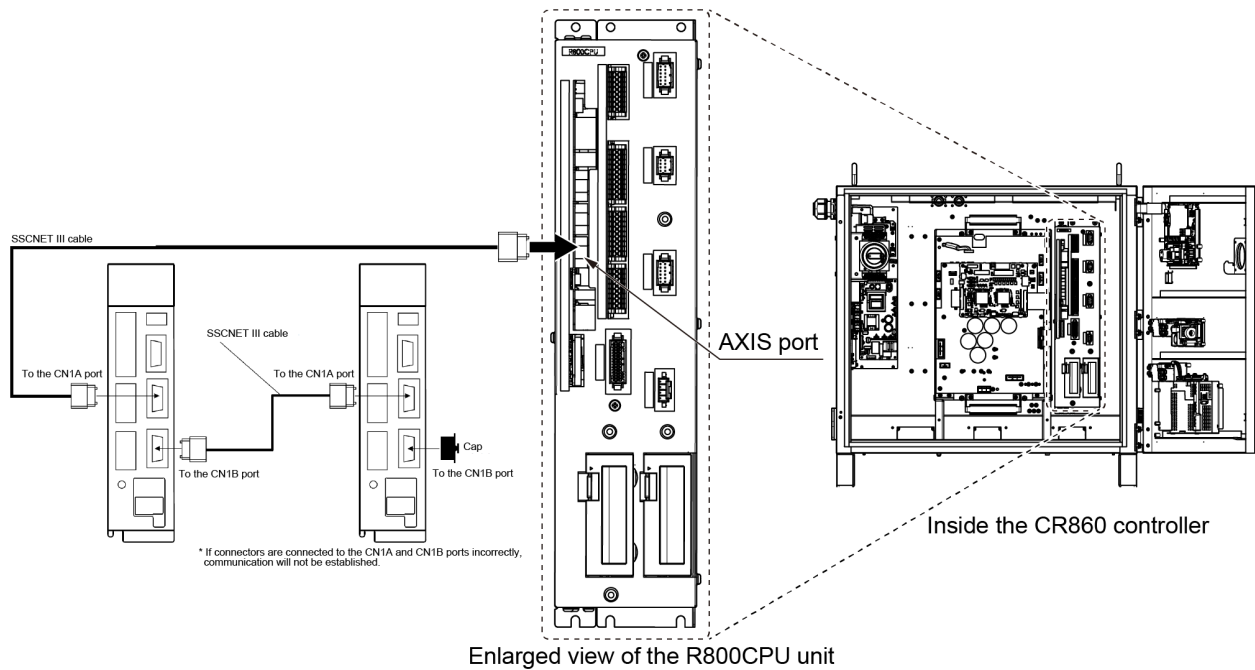


Fig 5.1.2 Connection of controller and servo amplifier (CR860)

To connect a cable to the additional axis port on the R800CPU unit, wire the cable through the cable entrance on the controller.

For details, refer to the "CR860 Controller Instruction Manual/Controller setup, basic operation, and maintenance".

⚠ CAUTION

Please install the connector cap to the connector for communication which does not connect the SSCNETIII cable. There is a possibility of malfunctioning if the cap is not installed. And, if the light from the connector for communication hits upon the eyes, there is a possibility of feeling the incompatibility for the eyes.

5.Connection and Wiring

5.2 Synchronize the power supply of the robot controller

How to synchronize the power supply of the robot controller and the servo amplifier for addition axes is shown.


The servo-ON/OFF status of the addition axis can be synchronized with the servo-ON/OFF status of the robot controller by using the output contact (AXMC).

Please synchronize the power supply of the robot and servo amplifier by the method shown in the following.

*However, this function is available only in the addition axis function, and it is unavailable in the user mechanism's system.

(The individual user mechanism's power supply control is impossible.)

5.2.1 Conceptual diagram of an additional axis system (CR800 controller)

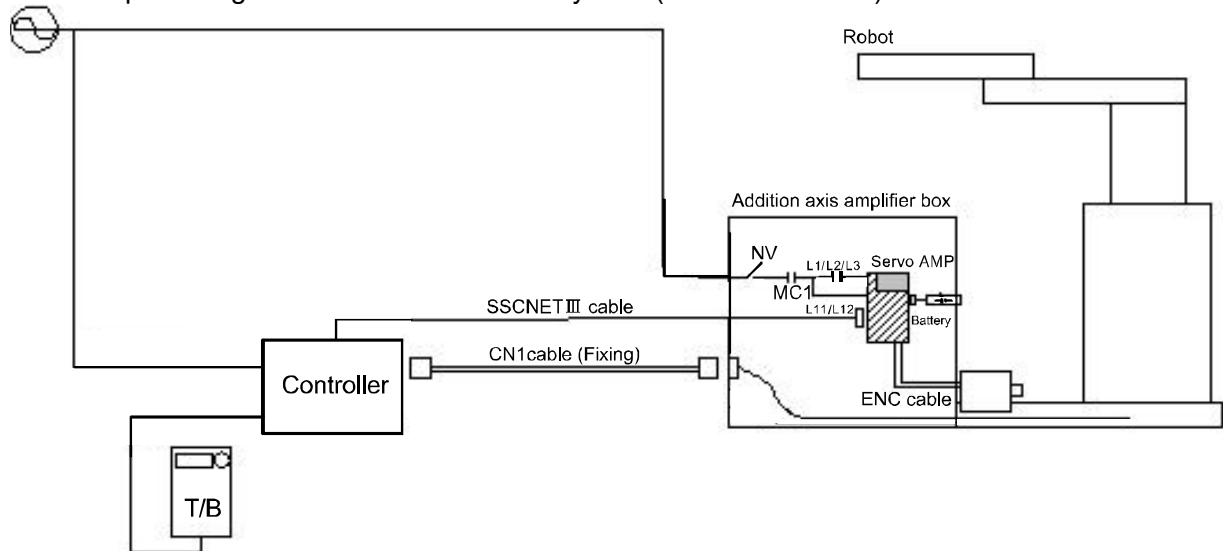

Please arrange the necessary electric parts to the good position, after reading carefully of the technical data of general-purpose servo amplifier.

5.2.2 The power supply synchronization, the main circuit power supply control for addition axes.(Example).

The following figure shows the layout drawings of the output contact (AXMC1). When you are using an additional axis, please perform appropriate circuit connections by referring to these drawings.


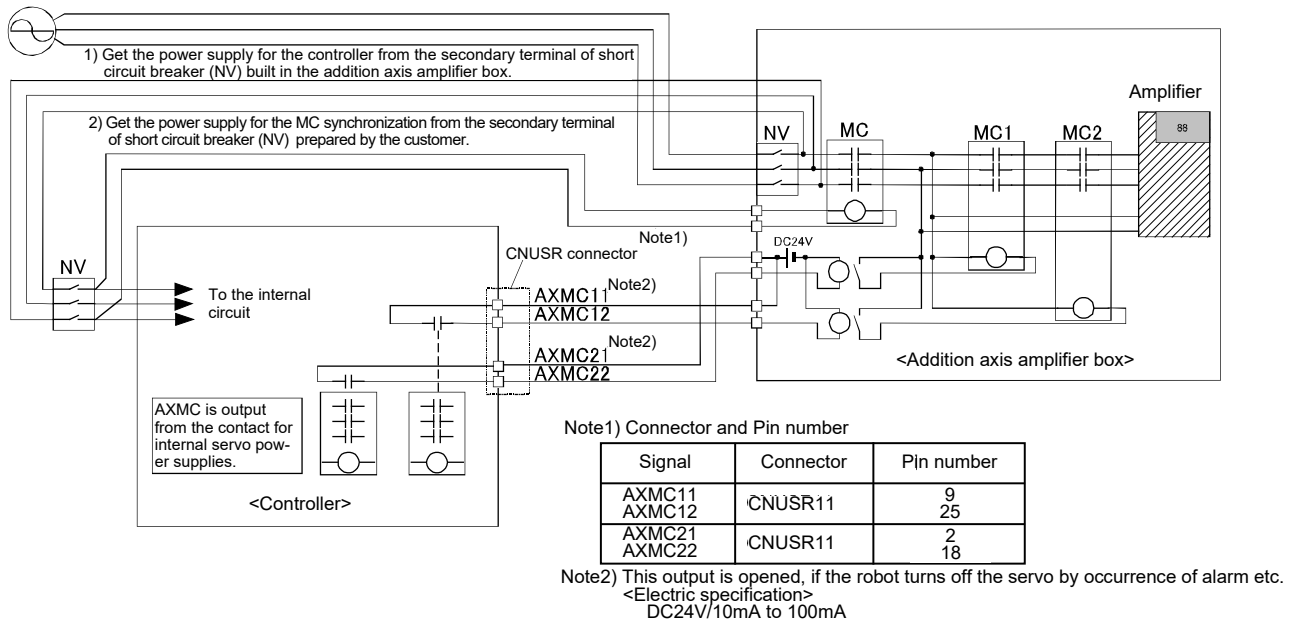


Fig 5.2.1 Example of the standard circuit (CR800 controller)

5.Connection and Wiring

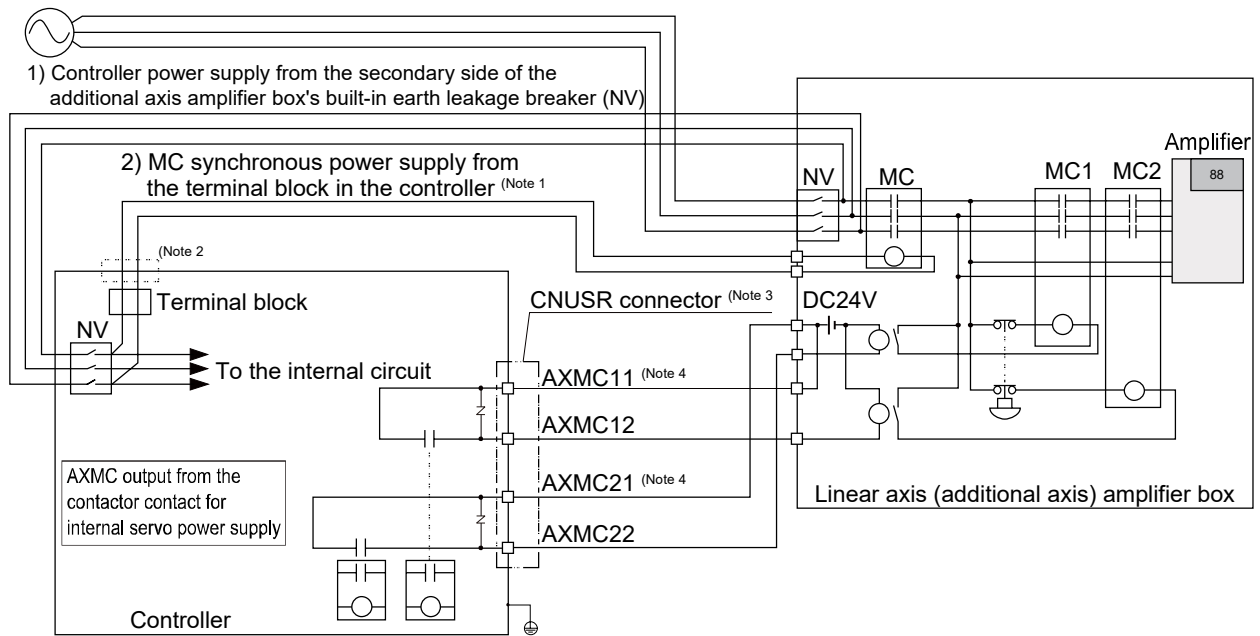

Note 1) Use the terminal block on the front side. Also fix the cable between the cable entrance and terminal block with the stud pin located at the bottom inside the controller.

Note 2) Wire the cable connected to the secondary side of the earth leakage breaker (NV) inside the controller to the outside of the controller through the cable entrance. For information on how to wire cables through the cable entrance, refer to the "CR860 Controller Instruction Manual/Controller setup, basic operation, and maintenance".

Note 3) The following table shows the connector and pin numbers.

Signal name	Connector	Pin No.
AXMC11	CNUSR13	4
AXMC12		12
AXMC21		8
AXMC22		16

Note 4) If the robot servos are turned off due to an alarm or other reasons, this output (contact) will open.
Contact capacity: 24V DC/10mA to 100mA

Fig 5.2.2 Example of the standard circuit (CR860 controller)

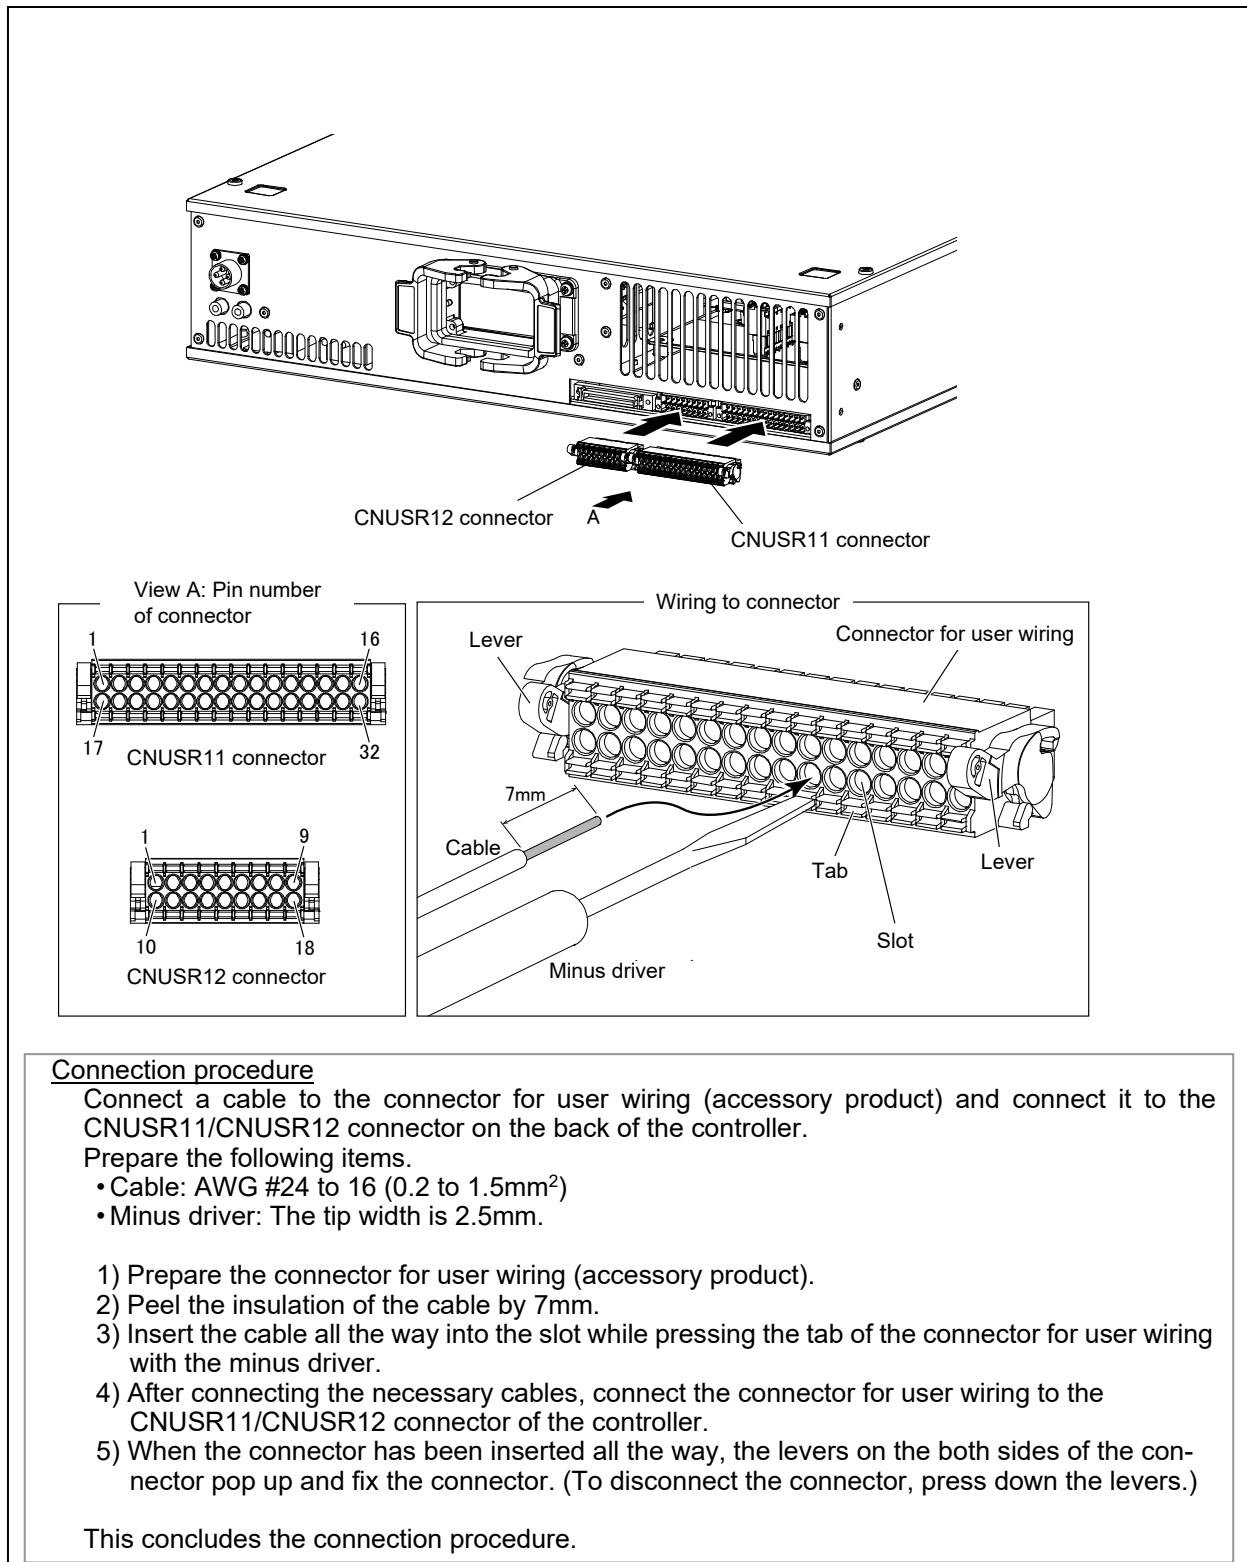


Fig 5.2.3 CNUSR11/CNUSR12 connector(CR800 controller)

5.Connection and Wiring

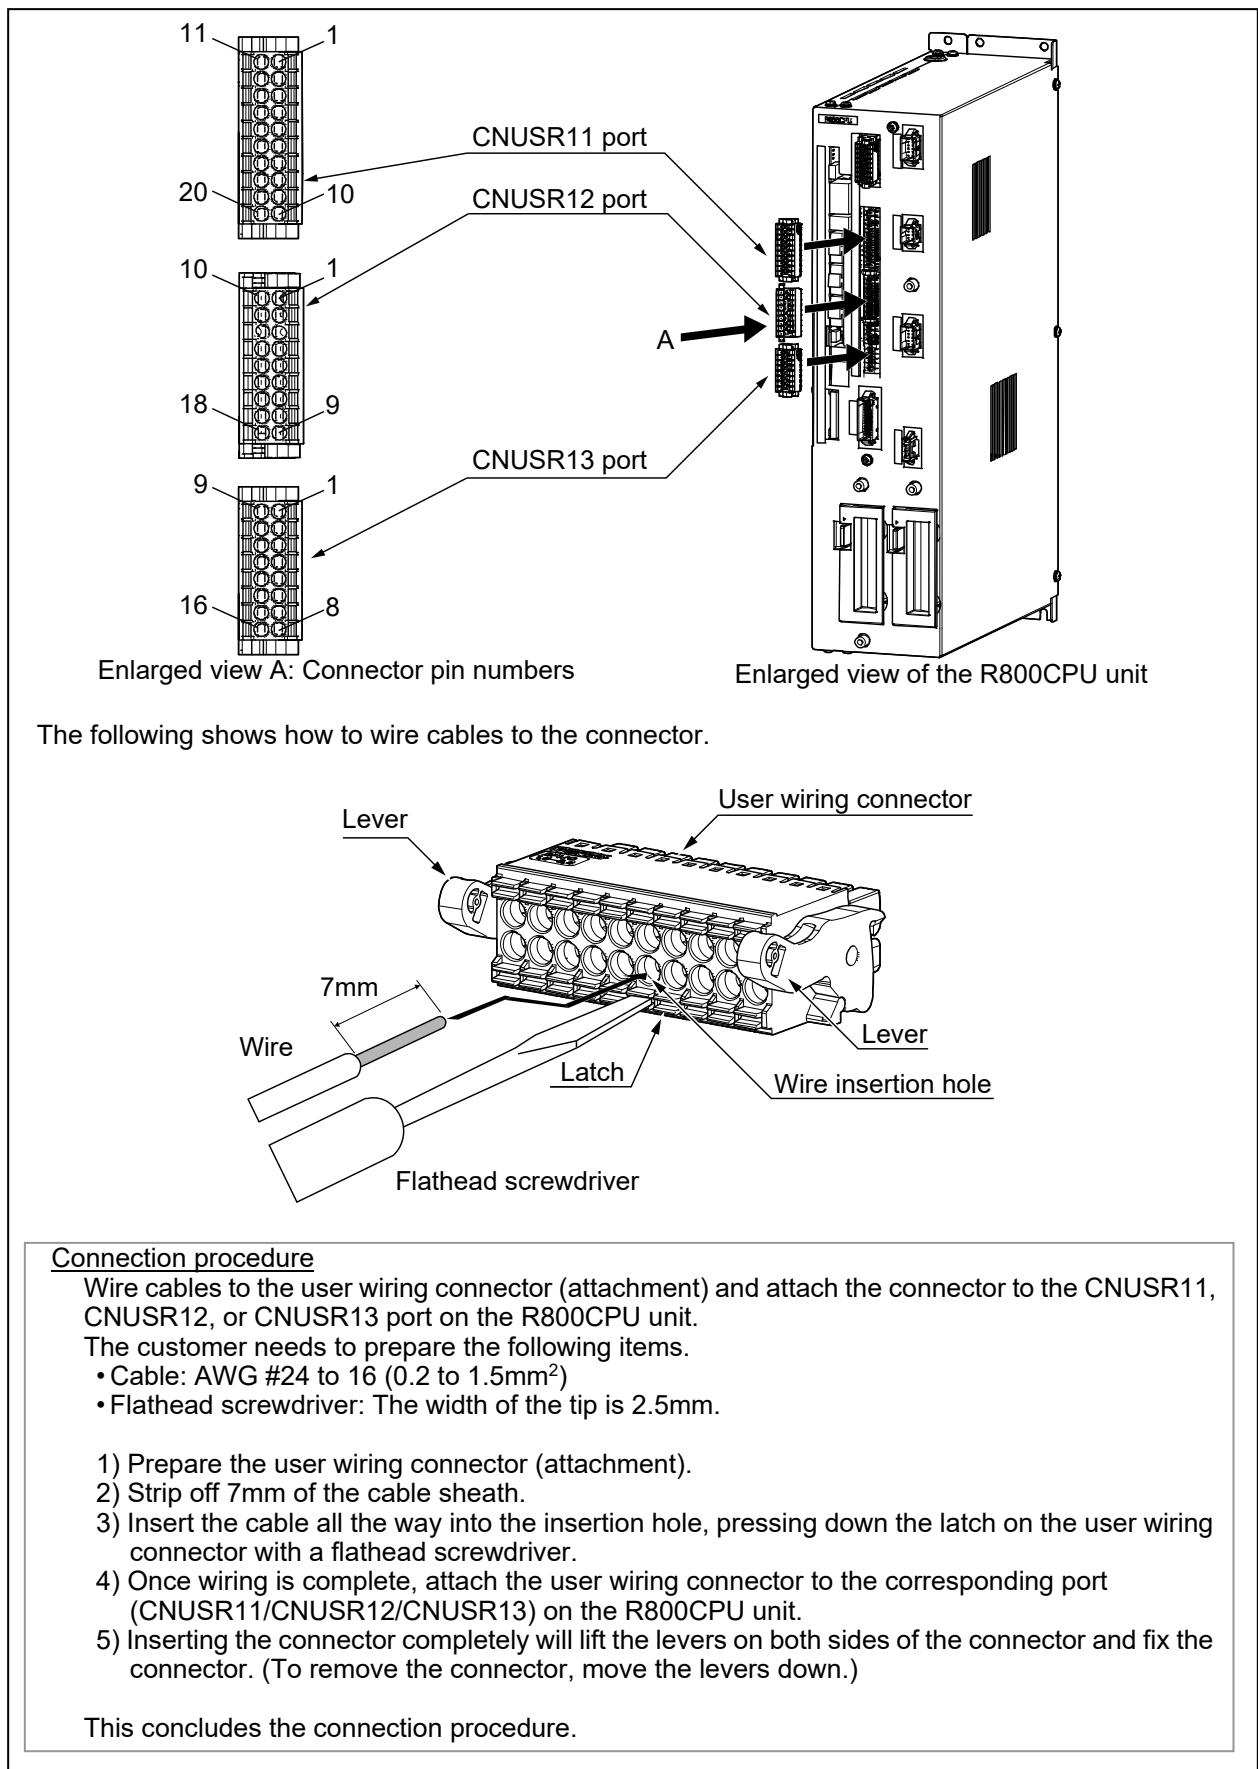


Fig 5.2.4 CNUSR11/CNUSR12/ CNUSR13 connector (CR860 controller)

5.3 Installation of noise filter to power cable

Install the noise filter in the power supply line of addition axis servo amplifier, and the example of connection which reduces the effect by the noise is shown.

Install the noise filter always and please use the robot safely, after confirming the details.

Note) Only the CR800 series controller conforms to the EMC directive.

5.3.1 EMC filter

To comply with the EN standard EMC Directive, it is recommended to use an EMC filter. Some EMC filters have high leakage current.

For information on EMC filters, refer to the manual of the servo amplifier used for the additional axis function.

MELSERVO-J4 SSCNET III/H Interface Servo Amplifier Instruction Manual (MR-J4□-B): SH-030106

MELSERVO-J4 SSCNET III/H Interface Servo Amplifier Instruction Manual (MR-J4W□-B): SH-030105

MELSERVO-J5 MR-J5 User's Manual (Hardware): SH-030298

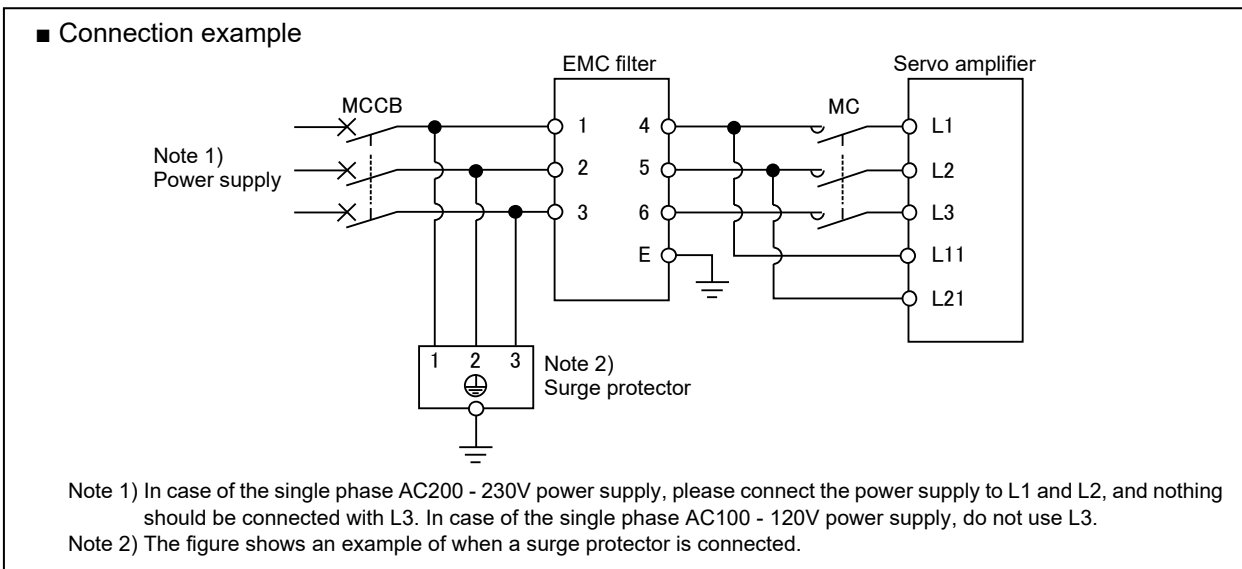
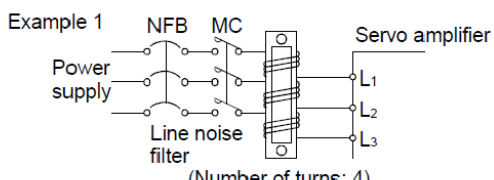
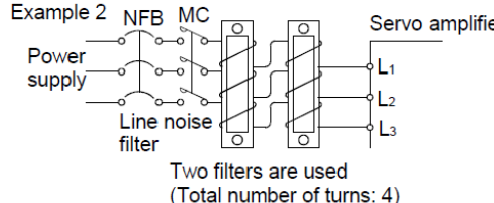
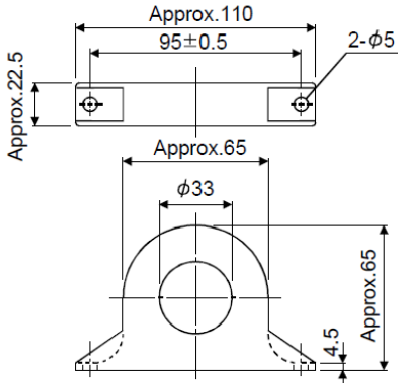
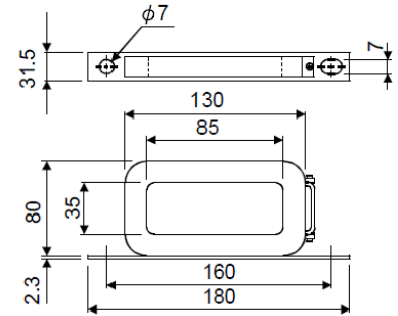


Fig. 5.3.1 Combination of the servo amplifier and the filter

5.Connection and Wiring

5.3.2 Line noise filters

This filter is effective in suppressing noises radiated from the power supply side and output side of the servo amplifier and also in suppressing high-frequency leakage current (zero-phase current) especially within 0.5MHz to 5MHz band.

Connection diagram	Outline drawing [Unit: mm]
<p>Use the line noise filters for wires of the main power supply ($L_1 \cdot L_2 \cdot L_3$) and of the motor power supply ($U \cdot V \cdot W$). Pass each of the 3-phase wires through the line noise filter an equal number of times in the same direction. For the main power supply, the effect of the filter rises as the number of passes increases, but generally four passes would be appropriate. For the motor power supply, passes must be four times or less. Do not pass the grounding (earth) wire through the filter, or the effect of the filter will drop. Wind the wires by passing through the filter to satisfy the required number of passes as shown in Example 1. If the wires are too thick to wind, use two or more filters to have the required number of passes as shown in Example 2. Place the line noise filters as close to the servo amplifier as possible for their best performance.</p> <p>Example 1</p>  <p>(Number of turns: 4)</p> <p>Example 2</p>  <p>Two filters are used (Total number of turns: 4)</p>	<p>FR-BSF01 (for wire size 3.5mm^2 (AWG12) or less))</p>  <p>FR-BLF (for wire size 5.5mm^2 (AWG10) or more))</p> 

5.4 Connection example of servo amplifier and servo motor

- (1) Connect the servo amplifier to the servomotor with the servomotor power cable and detector cable. For safety, securely ground them.
- (2) Connect the servomotor power cable to the motor power connector(CNP3) of the servo amplifier.
- (3) Connect the detector cable to the motor detector connector (CN2) of the servo amplifier.
- (4) Connect the ground wire to the ground terminal of the servo amplifier.

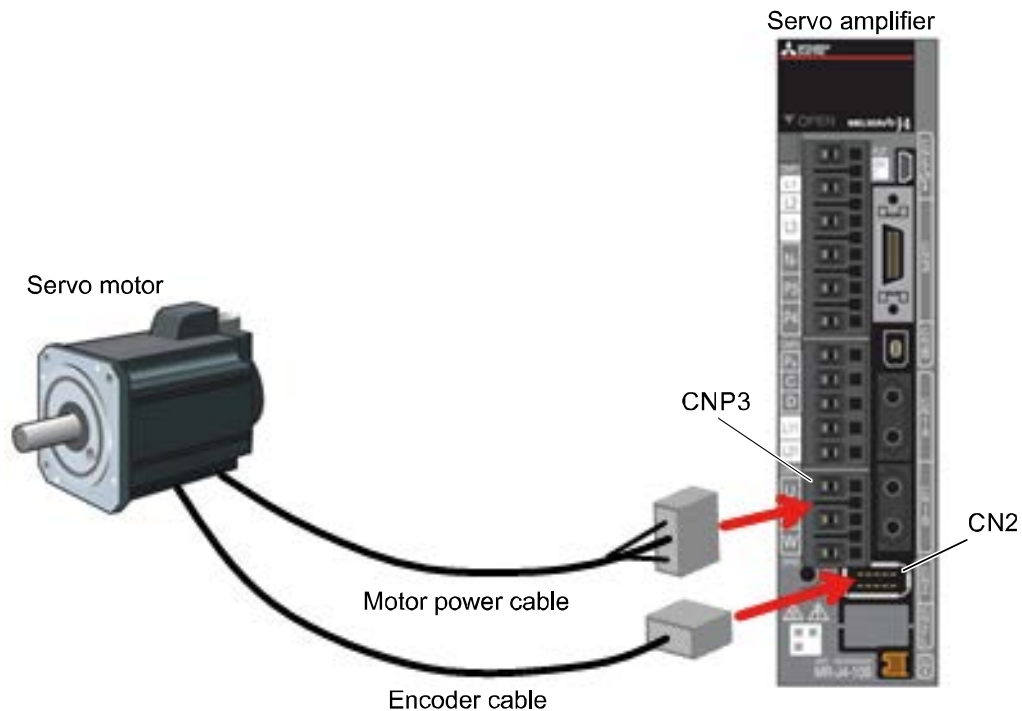


Fig. 5.4.1 Connection example of servo amplifier and servomotor

Note) For details of the connection, refer to "Instruction Manual for Servo Amplifier and Servomotor".



Every time after the motor, absolute position detector or other device is replaced, be sure to check the current position. If there is any displacement of the origin position, set the origin again.

5.5 Installing the Servo System

Install the servo system outside of the controller. For details on installation, refer to the Servo Amplifier Instruction Manual and the Servo Motor Instruction Manual.

6. Servo system setting

6. Servo system setting

6.1 Servo amplifier setting

Using the axis selection rotary switch (SW1) of the servo amplifier, set the axis No. of the servo. For an axis not used, set one of 8 to E. The correspondence between the control axis No. of the servo and the controller axis is determined by setting the parameter. Refer to "this manual/7.1.2Details of parameters" and "this manual/8.2.2Details of parameters". For details of the axis selection rotary switch (SW1) of the servo amplifier, refer to the instruction manual of the servo amplifier.

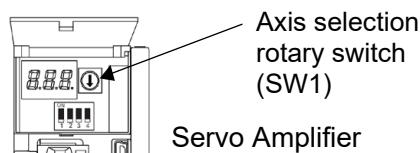


Fig. 6.1.1 Control axis selection switch

Table 6.1.1 Control axis No. of servo

Setting value of axis selection rotary switch (SW1)	Content
0	1st axis
1	2nd axis
2	3rd axis
3	4th axis
4	5th axis
5	6th axis
6	7th axis
7	8th axis
8	Not used.
9 to F	Do not set

6.2 Parameter setting of servo amplifier

Set the parameters of the servo amplifier with the servo support software. (Refer to "4.1 Necessary products" in this manual.) Please install to the personal computer previously and prepare.

- (1) The addition axis function does not support the incremental system. Please select the absolute position detection by parameter No.PA03.
- (2) Set the rotation direction (forward run/reverse run) of the motor from the robot controller. Be sure to set the rotation direction of the basic parameter No. 14 POL motor of the servo amplifier to "0" (CCW).
- (3) According to an target operated by the servomotor, set the parameters of the gain, etc. For the details of setting, refer to "Instruction Manual for Servo Amplifier".
- (4) The addition axis function does not support full closed system amplifier. Do not select "Fully closed control mode" in the operation mode selection of the basic setting parameter PA01. If "Fully closed control mode" is selected incorrectly, the movement according to instructions cannot be performed. (The initial setting value is "Standard control mode".)
- (5) When using the linear servo motor and the direct drive motor, it is necessary to use the test mode of operation of the amplifier and to do "magnetic pole position detection" in advance. And, change parameter No.PL01 to disable the magnetic pole detection after completing magnetic pole position detection. (Please refer to the instruction manual of servo amplifier for detail of the method)
- (6) Disabling the model adaptive control of the servo amplifier can improve the response and trajectory accuracy of the additional axes.

The model adaptive control of the servo amplifier can be disabled by setting the gain filter setting parameter PB25 to " _ _ _ 2". For details, refer to the "Servo Amplifier Instruction Manual".

7. Setting, Operation and Command Explanation of Robot Additional Axis

When the additional axis is controlled in synchronization with the robot arm (mechanism No. 1), the additional axis added to the robot is called the robot additional axis. This chapter describes a series of the operation methods from the parameter setting of the robot additional axis, start to end, and the added and changed commands.

7.1 Description of parameters

Before use, it is necessary to surely set the following parameters. The parameters set at the robot controller are shown in "Table 7.1.1 Parameter list". For the method to set the parameters, refer to separate "Instruction Manual/ Detailed explanations of functions and operations".



CAUTION

After changing the parameters, turn the power supply of the controller from OFF to ON. Unless this is done, the changed parameters will not be valid.



CAUTION

If any motor, absolute position detector, etc., is replaced or any parameter related to the mechanism and the axis configuration is changed, be sure to confirm the current position. If the origin is dislocated set the origin again. The parameters related to the axis configuration are the multi mechanism applied quantity (AXUNUM), mechanism No. designation (AXMENO), setting axis No. (AXJNT), unit system (AXUNT), rotation direction (AXSPOL) and encoder resolution (AXENCR).



CAUTION

Because to prevent the collision to peripheral equipment, the mechanical stopper, etc., sure set up the operating range (MEJAR) before moving the additional axis.

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.1.1 Parameter list

The parameters are listed in the following "Table 7.1.1 Parameter list". For details of the parameters, refer to "this manual/7.1.2Details of parameters".

Table 7.1.1 Parameter list

Parameter name	Content	Settable range	Number of elements	Number of elements per axis	Default value	Explanation
AXUNUM	Number of multi mechanisms used	0 to 2	1	—	0	Be sure to set "0".
AXMENO	Mechanism No. designation	0 to 3	16	1 Note1)	0	Input the mechanism No. to the element which corresponds to the servo control axis No. used and be sure to set "0" for the axis not used.
AXJNO	Setting axis No.	0 to 8	16	1 Note1)	0	Designate what number of the axis of the robot arm is used for the additional axis.
AXUNT	Unit system	0 or 1	16	1 Note1)	0	Unit system of additional axis 0 ... Angle (degree) 1 ... Length (mm) 2 ... Length (mm) Linear servo use (Set up "2", when using the linear servo)
AXSPOL	Rotation direction	0 or 1	16	1 Note1)	0	Set the rotation direction of the motor. 0 ... Forward run (CCW) 1 ... Reverse run (CW) Be sure to set "0" (CCW) at the "POL" parameter of the basic parameter No. 7 of the servo amplifier.
AXACC	Acceleration time	Positive real number	16	1 Note1)	0.20	Acceleration time (Unit: second) of additional axis
AXDEC	Deceleration time	Positive real number	16	1 Note1)	0.20	Deceleration time (Unit: second) of additional axis
AXGRTN	Total speed ratio numerator	Positive integer	16	1 Note1)	1	Total speed ratio numerator of additional axis
AXGRTD	Total speed ratio denominator	Positive integer	16	1 Note1)	10	Total speed ratio denominator of additional axis
AXMREV	Rated speed	Positive integer	16	1 Note1)	2000	Rated speed (Unit: r/min.) of motor or Rated speed (Unit: mm/s.) of linear motor
AXJMX	Maximum speed	Positive integer	16	1 Note1)	3000	Maximum speed (Unit: r/min.) of motor or Maximum speed (Unit: mm/s.) of linear motor
AXENCR	Encoder resolution	Positive integer	16	1 Note1)	4194304	Encoder resolution of motor (Unit: pulse/rev)
AXJOGTS	JOG smoothening time constant	Positive real number	16	1 Note1)	150.00	If it vibrates at JOG, set a larger value. (Unit: ms)
MEJAR	Joint operating range	A real number of -131072.00 to +131072.00	16	2 Note2)	-80000.0 , 80000.0	Motion range The minimum values and maximum values are described in this order. (Unit: degree or mm)
USERORG	User designated origin	A real number of -80000.00 to 80000.00	8	2 Note2)	0.00	Designate the origin position designated by the user. Set a value within the range set in MEJAR (joint operating range). (Unit: degree or mm)

7.Setting, Operation and Command Explanation of Robot Additional Axis

Parameter name	Content	Settable range	Number of elements	Number of elements per axis	Default value	Explanation
AXAMPMDL	Additional axis servo amplifier model designation	0 or 1	16	1 Note1)	0	Specify either the servo amplifier model used for the additional axis function or the force sense interface connection. 0: MR-J4-B or force sense interface connection 1: MR-J5-B This parameter can be set when controller software version E4 or later is used.
AXTRQLMT	Additional axis torque limit value	1 to 300	16	1 Note1)	300	Specify the torque limit value (default value) for the additional axis. (Unit: %) This parameter can be set when controller software version E4 or later is used. The torque limit value can be set only for the MR-J5-B. It cannot be set for the MR-J4-B.

Note1) Number of elements per servo control axis

Note2) Number of elements per robot axis

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.1.2 Details of parameters

Here, the parameters are described in details.

- (1) AXUNUM (number of multi mechanisms used)
- (2) AXMENO (mechanism No. designation)
- (3) AXJNO (Setting axis No.)
- (4) AXUNT (unit system)
- (5) AXSPOL (motor rotation direction)
- (6) AXACC (acceleration time) · AXDEC (deceleration time)
- (7) AXGRTN (total speed ratio numerator) · AXGRTD (total speed ratio denominator)
- (8) AXMREV (rated rotation speed) · AXJMX (maximum rotation speed) · AXENCR (encoder resolution)
- (9) AXJOGTS (JOG smoothening time constant)
- (10) MEJAR (joint operating range)
- (11) USERORG (user designated origin)
- (12) Added AXAMPMDL (servo amplifier model designation)
- (13) Added AXTRQLMT (additional axis torque limit value)

Parameters (2) to (9), (12), and (13) correspond to the servo control axis numbers and parameter elements as shown below. If you use RT ToolBox3 (software for robot program editing, parameter setting, various monitors, and other such functions), parameters (10) and (11) are placed under mechanical parameters, while the others are placed under common parameters.

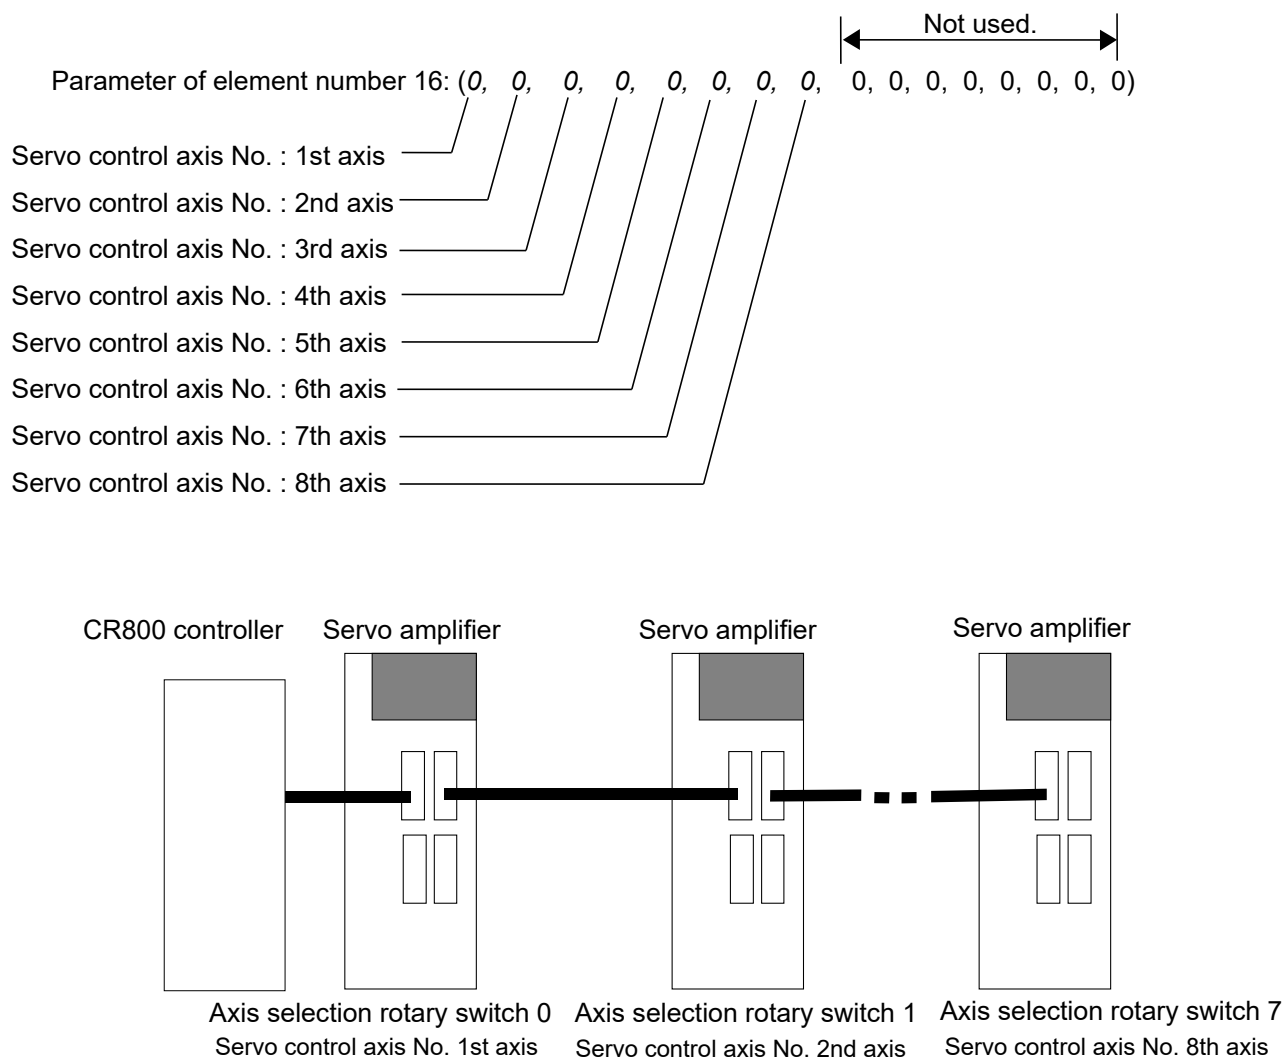


Fig. 7.1.1 Control No. and parameter element of servo

7.Setting, Operation and Command Explanation of Robot Additional Axis

(1) AXUNUM (number of multi mechanisms used)

This parameter designates how many mechanisms are connected when the additional axis is used as the multi mechanism. To control the additional axis in synchronization with the robot arm, be sure to set "0" at (robot additional axis).

When it is used as the robot additional axis,	0
---	---

(2) AXMENO (mechanism No. designation)

This parameter sets which mechanism the servomotor connected to the servo amplifier is connected to regarding each axis. To control the additional axis in synchronization with the robot arm, be sure to set "1" at (robot additional axis).

[Example]

When the servomotor set "Control axis No. of servo" as the 1st axis is controlled in synchronization with the robot arm (mechanism No. 1), set the AXMENO parameter as follows.

AXMENO = 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "1" to the 1st element.)

(3) AXJNO (Setting axis No.)

Regarding each axis, this parameter sets what number axis of the robot or mechanism the servomotor is used. To change an axis No. which has been set once (example: 7th axis → 8th axis), first set "0" at AXMENO and turn the power supply of the controller from OFF to ON. The default value is "0".

Additional axis 1	7
Additional axis 2	8

[Example]

When the servomotor set "Control axis No. of servo" as the 1st axis is used as the additional axis 1,

AXJNO = 7, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "7" to the 1st element.)

(4) AXUNT (unit system)

Regarding each axis, this parameter sets the unit system of the servomotor, which can be used.

Used as the rotation axis. (Unit: degree) (Default value)	0
Used as the linear drive axis (Unit: mm)	1
Use the linear servo (Unit: mm)	2

[Example]

When the servomotor set "Control axis No. of servo" as the 1st axis is used as the linear drive axis (Unit: mm),

AXUNT = 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "1" to the 1st element.)

When linear servo is connected to the axis which set to 2nd axis as the "Control axis No. of servo"

AXUNT = 0, 2, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "2" to the 2nd element.)

7.Setting, Operation and Command Explanation of Robot Additional Axis

(5) AXSPOL (motor rotation direction)

Regarding each axis, this parameter sets in which direction the servomotor is rotated when the joint position data is increased. The rotation direction is illustrated in the parameter details of "Instruction Manual for Servo Amplifier".

Moreover, set the rotation direction with the robot controller.

Forward run (CCW) (default value) as the value of the joint coordinate is increased	0
Reverse run (CW) as the value of the joint coordinate is increased	1

Here, be sure to set "POL" parameter of the basic parameter No. 7 of the servo amplifier to "0" (CCW).

[Example]

When the rotation direction of the servomotor set "Control axis No. of servo" as the 1st axis is reversed as the joint position data is increased,

AXSPOL = 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "1" to the 1st element.)

(6) AXACC (acceleration time) · AXDEC (deceleration time)

Regarding each axis, these parameters set the acceleration/deceleration time from the stop state to the maximum speed when the override of the servomotor which can be used is 100%. The default value is 0.20 (seconds).

[Example]

When the acceleration/deceleration time of the servomotor set "Control axis No. of servo" as the 1st axis is set as follows,

Acceleration time	0.40 (seconds)
Deceleration time	0.40 (seconds)

AXACC = 0.40, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
(Set "0.40" to the 1st element.)

AXDEC = 0.40, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
(Set "0.40" to the 1st element.)

(7) AXGRTN (total speed ratio numerator) · AXGRTD (total speed ratio denominator)

These parameters set the numerator and denominator of the total speed ratio of the servomotor which can be used. As the total speed ratio, set a fraction whose numerator and denominator are both integers. (When the ratio is 1/18.5, set 2/37.) The default value of AXGRTN is "1", and the default value of AXGRTD is "10". When using the linear servo motor, the setting methods differ. Please refer to "this manual/7.1.3 About using the linear servo motor".

[Example]

When the total speed ratio of the servomotor axis set "Control axis No. of servo" as 1st axis is 25/8(mm/rev),

AXGRTN = 25, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 (Set "25" to the 1st element.)

AXGRTD = 8, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10 (Set "8" to the 1st element.)

The total speed ratio of the direct moving axis is calculated as follows. From the relationship of the gear ratio and ball screw lead of "Fig. 7.1.2 Inside of direct moving unit", the movement amount of the load per rotation of the motor is as follows.

$$5 \times 5/8 = 25/8 \text{ [mm/rev]}$$

Accordingly, since the motor speed when the load is moved 1mm becomes 8/25 rotation, the total speed ratio becomes as follows.

$$\text{AXGRTN/AXGRTD} = 1/ (8/25) = 25/8$$

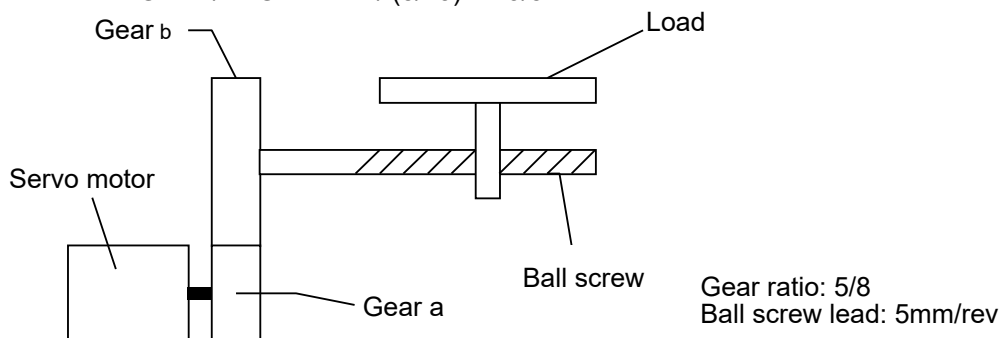


Fig. 7.1.2 Inside of direct moving unit

The total speed ratio of the rotation axis is calculated as follows. When the table of "Fig. 7.1.3 Inside of rotation table" rotated one rotation (360 degrees), the motor speed becomes 10 rotations. Therefore, the total speed ratio becomes as follows.

$$\text{AXGRTN/AXGRTD} = 1/10$$

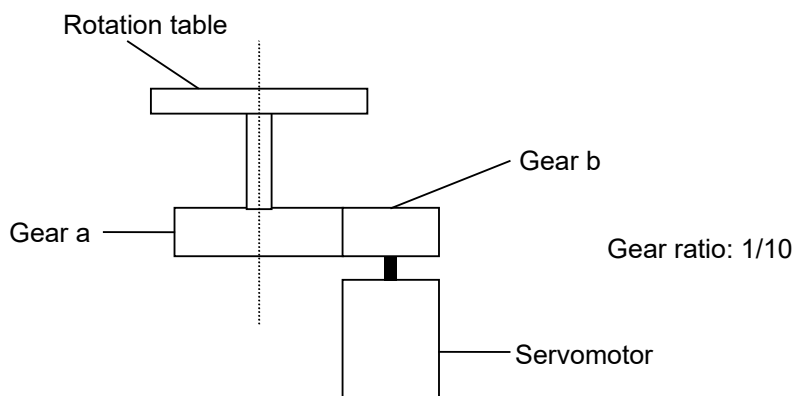


Fig. 7.1.3 Inside of rotation table

7.Setting, Operation and Command Explanation of Robot Additional Axis

- (8) AXMREV (rated rotation speed) · AXJMX (maximum rotation speed) · AXENCR (encoder resolution)

These parameters set the properties of the servomotor, which can be used. Referring to the specifications in "Instruction Manual for Servo Amplifier", set the values which are suitable for the applied servomotor. The default value of AXMREV is 2000(r/min.), the default value of AXJMX is 3000(r/min.) and the default value of AXENCR is 4194304 (pulse/rev). When using the linear servo motor, the setting methods differ. Please refer to "this manual/7.1.3 About using the linear servo motor".

[Example]

When the properties of the servomotor set "Control axis No. of servo" as the 1st axis are as follows.

Rated speed	3000 (r/min)
Maximum speed	4000 (r/min)
Encoder resolution	131072 (pulse/rev)

AXMREV = 3000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
(Set "3000" to the 1st element.)

AXJMX = 4000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
(Set "4000" to the 1st element.)

AXENCR = 131072, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
(Set "131072" to the 1st element.)



CAUTION

In MANUAL mode, the maximum speed of an additional axis is 10% of the value set in parameter AXJMX.

Therefore, when operating the robot mounted on a travel axis (additional axis) in MANUAL mode, set parameter AXJMX so that the operating speed (composite speed) of the robot including the travel axis does not exceed the safe speed (250 mm/s).

- (9) AXJOGTS (JOG smoothening time constant)

Set this parameter to reduce the vibration if it occurs during jog of the additional axis. If any excessive value is set, the acceleration/deceleration time becomes long during jog operation. The settable value is in the range of positive real numbers. The default value is 150.00 (ms).

[Example]

When this parameter value is set to "200.00" against vibration of the axis set "Control axis No. of servo" as the 1st axis,

AXJOGTS = 200.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00
(Set "200.00" to the 1st element.)

(10) MEJAR (joint operating range)

For this parameter, set the motion range of the additional axis in order of minimum value and maximum value. Since the 1st to 12th elements are the values set for the axes of the robot, never change the values. The settable values are real numbers in the range of -131072.00 to +131072.00. The default values are -80000.00 and 80000.00.

[Example]

When the motion range of the additional axis 1 (7th axis) is set for the robot of RV-7FR as follows,

Minimum value -2000mm

Maximum value 3000mm

MEJAR = -240.00, 240.00, -115.00, 125.00, 0.00, 156.00, -200.00, 200.00, -120.00, 120.00,
 -360.00, 360.00, -2000.00, 3000.00, -80000.00, 80000.00
 (+/- value of L1(J7) axis.), (+/- value of L2(J8) axis.)

(Set "-2000.00" to the 13th element and "3000.00" to the 14th element.)

<Note>

Cannot move to the position exceeding operating range as following. Please set up the operating range (MEJAR) in the range which satisfies the following formula sure. Take care since the operating range changes with set-up values of the encoder resolution setup (AXENCR) and the total reduction ratio setup (AXGRTN, AXGRTD)

	Operatingrange
Linear axis (mm)	$-\left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}} \leq x \leq \left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}}$
Rotation axis (deg)	$-360 \times \left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}} \leq x \leq 360 \times \left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}}$

(x : The position which robot moves (coordinate value))

<Example>

If the axis is the rotation type, and if the encoder resolution and the total reduction ratio are the following, the operating range (setting value of MEJAR) is -1663.20 (deg) to +1663.20 (deg).

<Encoder resolution, the total reduction ratio>

AXENCR=4194304

AXGRTN=1

AXGRTD=100



The CR800 series controller does not support motors with an encoder resolution of 26 bits or higher.

If the AXENCR parameter is set to a value equal to or greater than 67108864 [pulse/rev], which corresponds to an encoder resolution of 26 bits, error H179n (operating range setting error: 'n' indicates the axis number) will occur at power-on regardless of the value set in the MEJAR (operating range) parameter.

If you use the MR-J5-B, you can reduce the encoder resolution to 1/16 by setting the basic parameter PA06 of the servo amplifier (CMX, electronic gear numerator) to 16.

Set this parameter when using a motor with an encoder resolution of 26 bits or higher, or if you cannot secure the required operating range.

For further information on the parameter, refer to the instruction manual for the servo amplifier "MELSERVO-J5 MR-J5-B/MR-J5W-B User's Manual (Parameters): IB-0300581"

7.Setting, Operation and Command Explanation of Robot Additional Axis

(11) USERORG (user designated origin)

This parameter sets the origin position set when the user designated origin is set. The origin of the additional axis set here is also reflected on the other origin setting method (mechanical stopper, jig and ABS system). The settable value is in the range of -80000.00 to 80000.00, being a real number in the range set at MEJAR (joint operating range).

[Example]

When the user designated origin of the additional axis 1 (7th axis) is set for the robot of RV-7FR as follows,

Origin position designated by the user 1500mm

USERORG = 0.00, 0.00, 90.00, 0.00, 0.00, 0.00, 1500.00, 0.00

(Set "1500.00" to the 7th element.)

(12) AXAMPMDL (servo amplifier model designation)

Set this parameter for each axis to specify either the servo amplifier model used for the additional axis or the force sense interface connection.

The default value is 0 (MR-J4-B or force sense interface connection).

Model to be connected	Setting value
MR-J4-B or force sense interface (default value)	0
MR-J5-B	1

The MR-J5-B can be connected when controller software version E4 or later is used. This parameter can be set when controller software version E4 or later is used.

The MR-J4-B and MR-J5-B can be used together as shown in [Example 2] below.

[Example 1] When the MR-J5-B is used for a servo amplifier with the servo control axis number set to the first axis,

AXAMPMDL = (1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0) (Set the first element to 1.)

[Example 2] When the MR-J4-B is used for a servo amplifier with the servo control axis number set to the first axis, and the MR-J5-B is used for a servo amplifier with the servo control axis number set to the second axis,

AXAMPMDL = (0, 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0) (Set the second element to 1.)

[Example 3] When the force sense interface is connected and the MR-J5-B is used for a servo amplifier with the servo control axis number set to the second axis,

AXAMPMDL = (0, 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0) (Set the second element to 1.)

(13) AXTRQLMT (additional axis torque limit value)

Set this parameter for each axis to limit the torque generated by the motor. Set the rated torque of the motor to 100%.

The default value is 300%.

The value set by this parameter is transmitted to the servo amplifier when the controller is powered on.

In a robot language program, the torque limit value can be changed by using the "Torq command".

When the controller is powered on, the limit value is changed to the one set by this parameter.

This parameter can be set when controller software version E4 or later is used. The torque limit value can be set only for the MR-J5-B. It cannot be set for the MR-J4-B.

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.1.3 About using the linear servo motor

When using the linear servo motor, set the total speed ratio parameter (AXGRTN/AXGRTD), the encoder resolution parameter (AXENCR), and the rated speed parameter (AXMREV/AXJMX) as follows.

(1) Resolution related parameter (AXGRTN/AXGRTD/AXENCR) setting.

Set up the linear servo motor moving distance per one pulse of linear encoder as follows.

$$\text{Moving distance per one pulse (mm)} = \frac{\text{AXGRTN}}{\text{AXGRTD}} \times \frac{1}{\text{AXENCR}}$$

[Example]

When the resolution of linear servo motor which set the "Control axis No. of servo" to the 1st axis is the following.

Linear encoder resolution: 0.05μm

$$\text{Moving distance per one pulse (mm)} = \frac{0.05 \times 10^{-3} [\text{mm}]}{1 [\text{pulse}]} = \frac{1}{20000}$$

$$\frac{\text{AXGRTN}}{\text{AXGRTD}} \times \frac{1}{\text{AXENCR}} = \frac{1}{20000}$$

[Example of set value]

ACGRTN = 1

AXGRTD = 1

AXENCR = 20000

Therefore, the parameter set value is as follows.

AXGRTN = (1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1) (Set the 1st element to 1.)

AXGRTD = (1, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10) (Set the 1st element to 1.)

AXENCR = (20000, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304) (Set the 1st element to 20000.)

(2) Speed related parameter (AXMREV/ AXJMX) setting

Set the rated speed and maximum speed as the parameter AXMREV (rated speed) and AXJMX (maximum speed)
(Unit: mm/s)

<Note>

When using the linear servo motor, set the set value of parameter AXUNT (unit system) to "2."
(Refer to "this manual/7.1.2 Details of parameters (4) AXUNT (unit system)")

[Example]

When the specification of linear servo motor which set the "Control-axis-No.-of-servo" to 1st axis are the following.

Rated speed 1800 (mm/s)

Maximum speed 2000 (mm/s)

AXMREV = (800, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000)

AXJMX = (2000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000)



CAUTION

In MANUAL mode, the maximum speed of an additional axis is 10% of the value set in parameter AXJMX.

Therefore, when operating the robot mounted on a travel axis (additional axis) in MANUAL mode, set parameter AXJMX so that the operating speed (composite speed) of the robot including the travel axis does not exceed the safe speed (250 mm/s).

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.2 Confirmation of connection

Before use, confirm the following items again.


Confirmation of connection

No.	Confirmation item	Check
1	Is the teaching pendant securely fixed?	
2	Is the exclusive communication cable properly connected between the controller and servo amplifier? (Refer to "Instruction Manual for Servo Amplifier".)	
3	Is the detector cable properly connected between the servo amplifier and motor? (Refer to "Instruction Manual for Servo Amplifier".)	
4	Is the servomotor power cable properly connected between the servo amplifier and motor? (Refer to "Instruction Manual for Servo Amplifier".)	
5	Is the ground wire properly connected between the servo amplifier and motor? (Refer to "Instruction Manual for Servo Amplifier".)	
6	Is the ground cable from the servo amplifier properly grounded? (Refer to "Instruction Manual for Servo Amplifier".)	
7	Is the brake unit properly connected? (Refer to "Instruction Manual for Servo Amplifier".) (When it is used,)	
8	Is the emergency stop circuit properly connected? (Refer to "Instruction Manual for Servo Amplifier".) (When it is used,)	
9	Are the parameters of the additional axis interface properly set? (Refer to "this manual/7.1Description of parameters".)	
10	Are the parameters of the servo amplifier properly set? (Refer to "Instruction Manual for Servo Amplifier".)	
11	Is the basic parameter PA03 ARS of the servo amplifier set to "0001"? (Refer to "Instruction Manual for Servo Amplifier".)	
12	Is the basic parameter PA14 POL of the servo amplifier set to "0"? (Refer to "Instruction Manual for Servo Amplifier".)	
13	Is the power supply of the controller turned OFF once after the parameters are set?	
14	Is the axis selection rotary switch (SW1) of the servo amplifier properly set?	

After the preparation is completed, turn OFF the power supply of the additional axis system.

7.3 Try to use the robot additional axis

Regarding the robot additional axis, this chapter describes the basic operation from power turn-ON through operation to the end.

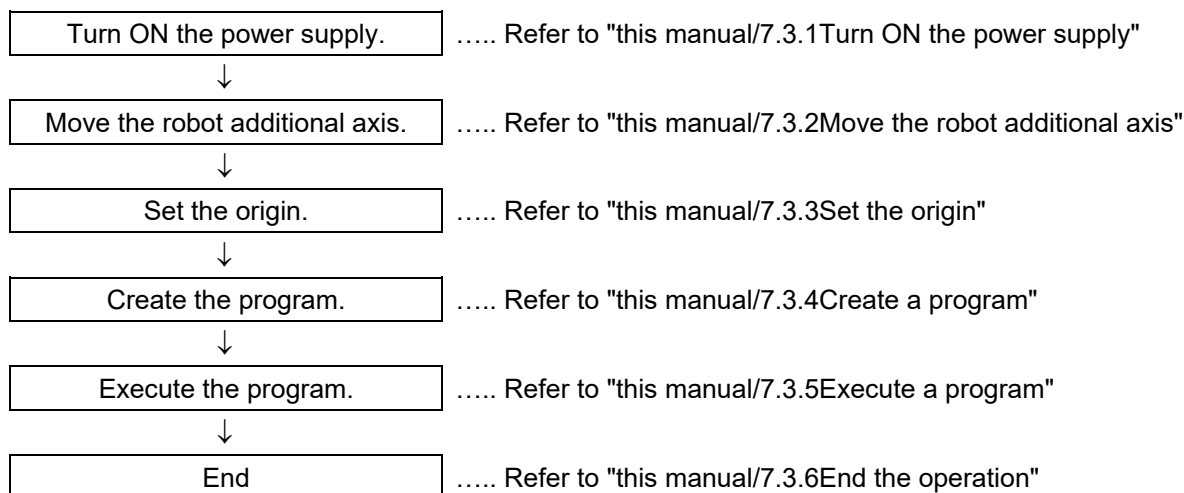

If any vibration occurs or any motion is not satisfied during operation of the additional axis, it is necessary to adjust (tune) the servo system. Referring to "Instruction Manual for Servo Amplifier and Servomotor", adjust it.



If the motor or absolute position detector has been replaced or the parameters related to mechanisms and axis structure have been changed, be sure to check the current position before performing any operation. If the origin position has been displaced, set the origin again. The above parameters are AXUNUM, AXMENO, AXJNO, AXUNT,AXSPOL and AXENCN.

7.3.1 Turn ON the power supply

Confirm the safety around the robot and additional axis and turn ON the power supply.

- (1) Turn ON the power supply of the servo system.
- (2) Turn ON the power supply of the controller.



Turn ON the power supply of the peripheral device earlier than the robot controller. If the power supply of the robot controller is turned ON earlier than the peripheral device, the robot controller may sometimes not recognize the peripheral device.





7.3.2 Move the robot additional axis

Move the axis by jog the additional axis of the teaching pendant.

- (1) Turn the [T/B ENABLE] switch of the teaching pendant to "ENABLE".
- (2) Afterward, operate as follows.

7.Setting, Operation and Command Explanation of Robot Additional Axis

Table 7.3.1 Robot additional axis, jog operation

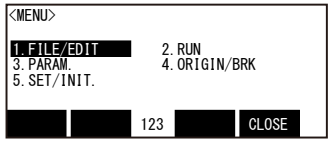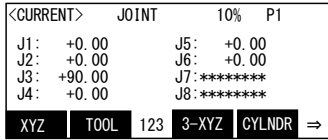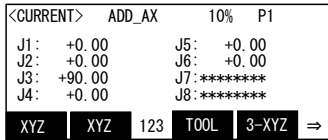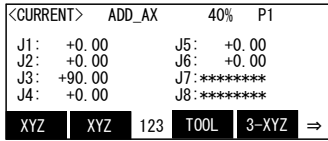NO	Teaching pendant screen display	Work details
1		Pressing the 3-position enable switch on the rear of the teaching pendant, press [SERVO] key and turn ON the servo. Keeping the 3-position enable switch pressed, proceed with the following operation. If the 3-position enable switch is released on the way, the servo will be turned OFF. In this case, repeat this process.
2		Press the key of [JOG], then the jog operation screen will be displayed. Press the key of [FUNCTION], and display the "addition axis" at the screen lowest stage. And press the key of [F1], the jog mode turns into addition axis jog mode (3 screens).
3		<p>[+X(J1)] key : The additional axis 1 moves in the + direction.</p> <p>[-X(J1)] key : The additional axis 1 moves in the - direction.</p> <p>[+Y(J2)] key : The additional axis 2 moves in the + direction.</p> <p>[-Y(J2)] key : The additional axis 2 moves in the - direction.</p> <p>Release the axis designation key, and the additional axis will stop.</p>
4		[OVRD↑] key increases the jog speed. [OVRD↓] key decreases the jog speed. The percentage display of the speed is different depending on each model.

Note 1) When the additional axis 2 is not used, it is not displayed on the screen of the teaching pendant.

Note 2) When the origin has been already set, the current position of the additional axis will be displayed in the "*****" place.

7.3.3 Set the origin

For details of the actual origin setting, etc., refer to the origin setting in "Instruction Manual/ ROBOT ARM SETUP & MAINTENANCE". Here, the correspondence between the origin setting additional axis and the axis No. displayed in the origin setting screen is as follows.

Origin setting axis	Origin setting screen display
Additional axis 1	7th axis
Additional axis 2	8th axis



When setting the origin of the robot additional axis, don't carelessly set the origin of the robot arm. If it is wrongly set, input the origin data referring to the origin setting in "Instruction Manual/ ROBOT ARM SETUP & MAINTENANCE".

7.3.4 Create a program

As an example, a program to move the robot additional axis is created.

```
10 MOV P1
20 MOV P2
30 END
```

For the methods of the program input and position data registration, refer to the programming in "Instruction Manual/ Detailed explanations of functions and operations".

Moreover, for the registration method of the position variables of the robot additional axis, refer to "this manual/7.4.5Operation of position variable".

7.3.5 Execute a program

Try to execute a program created.

From the teaching pendant, confirm the operation in the step feed mode (For the step feed method, refer to Step feed in "INSTRUCTION MANUAL/Detailed explanations of functions and operations"). If any problem does not occur, execute the program in the OPERATION screen of the teaching pendant.

- (1) Press the [T/B ENABLE] switch of the teaching pendant to disable the teaching pendant.
- (2) Select "OPERATION" in the "RUN" screen of the teaching pendant to display the OPERATION screen.
- (3) Press the function key [F4] to which "CHOOSE" in the OPERATION screen has been assigned to display the Select robot program screen.
- (4) Enter the name of the program to be executed and press the [EXE] key.
- (5) When the servo is OFF, press the function key [F1] to which "SVO ON" in the "OPERATION" screen has been assigned to turn ON the servo.
- (6) Press the function key [F1] to which "START" in the OPERATION screen has been assigned to execute the program.

For details of the operation procedure, refer to Starting automatic operation in "INSTRUCTION MANUAL/Detailed explanations of functions and operations".

7.3.6 End the operation

Confirm that the program is interrupted or stopped, proceed with the following operation and turn OFF the power supply of the additional axis system.

- (1) Turn the [T/B ENABLE] switch of the teaching pendant to "DISABLE".
- (2) Select "OPERATION" in the "RUN" screen of the teaching pendant to display the OPERATION screen.
- (3) Press the function key [F2] to which "SVO OFF" in the OPERATION screen has been assigned to turn OFF the robot and the servo of the additional axis.
- (4) Turn OFF the power supply of the controller.
- (5) Turn OFF the power supply of the servo system.

Though an alarm occurs on the servo system side during operation of (4) to (5), continue the operation and shut down the power supply of the servo system, and any problem will not occur.

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.4 Operation of the Robot's Additional Axis

This section describes the procedures for operating the additional axis interface for each of the operating functions.



CAUTION

If any vibration occurs or any motion is not satisfied during operation of the additional axis, it is necessary to adjust (tune) the servo system. Referring to "Instruction Manual for Servo Amplifier and Servomotor", adjust it.

7.4.1 Brake release

The brake of the robot additional axis can not be released from the robot controller. To release the brake, refer to "Instruction Manual for Servo System".

7.4.2 Origin setting

The origin of the robot additional axis is set with the same operation as that of the standard system. For details of the actual origin setting, etc., refer to the origin setting in "Instruction Manual/ ROBOT ARM SETUP & MAINTENANCE". In case of the robot additional axis, the correspondence between the additional axis of the origin setting and the axis number displayed on the origin setting screen is as follows.

Origin setting axis	Origin setting screen display
Additional axis 1	7th axis
Additional axis 2	8th axis



CAUTION

When setting the origin of the robot additional axis, don't carelessly set the origin of the robot arm. If it is wrongly set, input the origin data referring to the origin setting in "Instruction Manual/ ROBOT ARM SETUP & MAINTENANCE".

7.4.3 Servo ON/OFF

[Function]

The servo of the robot additional axis is turned ON/OFF.

The servo of the additional axis is linked with the servo power supply of the robot arm.

The operating method is the same as that of the standard system. For details of the actual servo ON method, refer to the Turning the servo ON/OFF of "Instruction Manual/ Detailed explanations of functions and operations".

7.4.4 Jog operation

[Function]

The robot additional axis is moved.

The screen and content displayed for this operation are as follows. Here, the unit of the additional axis displayed is set with the parameter (AXUNT) (Angle: degree or Length: mm). For the parameter setting method, refer to "this manual/7.1Description of parameters".

<CURRENT>	ADD_AX	100%	M1	T00	B*
J1:	0.00	J5:	-90.00		
J2:	0.00	J6:	180.00		
J3:	90.00	J7:	0.00		
J4:	0.00	J8:	0.00		
XYZ	XYZ	JOG	TOOL	3-XYZ	⇒

→ Display of current jog mode and jog speed

→ Display (additional axis 1) of current position

→ Display (additional axis 2) of current position

Note) Additional axes that are not present are displayed as shown below.

When the additional axis 2 is not present

<CURRENT>	ADD_AX	100%	M1	T00	B*
J1:	0.00	J5:	-90.00		
J2:	0.00	J6:	180.00		
J3:	90.00	J7:	0.00		
J4:	0.00	:			
XYZ	XYZ	JOG	TOOL	3-XYZ	⇒

When the additional axis 1 is not present

<CURRENT>	ADD_AX	100%	M1	T00	B*
J1:	0.00	J5:	-90.00		
J2:	0.00	J6:	180.00		
J3:	90.00	J7:	****		
J4:	0.00	J8:	0.00		
XYZ	XYZ	JOG	TOOL	3-XYZ	⇒

[Method]

The additional axis is moved by the jog operation of the teaching pendant. For details, refer to "this manual/7.3.2 Move the robot additional axis".

[Explanation]

- (1) The moving speed can be switched by pressing [OVRD (upper arrow)] (jog speed UP) or [OVRD(lower arrow)] (jog speed DOWN). For details, refer to the jog feed in "Instruction Manual/ Detailed explanations of functions and operations".
- (2) If any motion range or speed limit may be exceeded, the robot will stop with an error.
- (3) Before the origin is set, "****" is displayed at the current position data of the additional axis of the teaching pendant.



CAUTION

In another jog operation except the additional axis jog mode, the robot arm and mechanical additional axis move and the robot additional axis does not move.

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.4.5 Operation of position variable

The position variable (position No.) can be operated using the teaching pendant like the standard system.

[Function]

The current position is registered at the position variable (position No.).
The current position of the additional axis is registered at the same time.

[Method]

Press [F2](Teach)key,and [F1] (Yes) key of confirmation screen.
For details, refer to "Instruction Manual/ Detailed explanations of functions and operations".

7.4.6 MDI (Manual Data Input) compensation of robot additional axis

[Function]

The registered position data is compensated by operating the key.
 The screen which displays the data of the additional axis is added.
 The screen and content displayed by this operation are as follows.

<CURRENT> ADD_AX		40%	P1
J1: +0.00	J5: +0.00		
J2: +0.00	J6: +0.00		
J3: +90.00	J7: *****		
J4: +0.00	J8: *****		
JOINT	XYZ	123	TOOL 3-XYZ ⇒

→ Position No. which registers the position

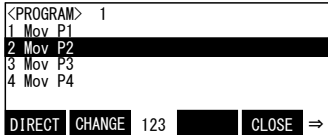
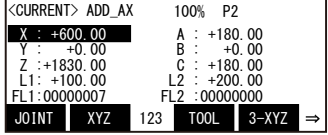
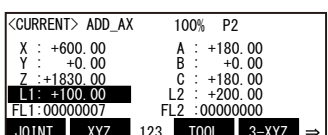
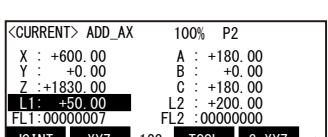
→The coordinate value to register

Fig. 7.4.1 MO position screen

[Method]

A case to change the additional axis 1 of the position variable P3 from +20.00 to +50.00 is described as follows.

Table 7.4.1 MDI compensation operation

NO	Teaching pendant screen	Work details
1		Press the function key corresponding to "Cange"after selecting the line which used P2 of position variable, display the position edit screen. The P2 of position variable is called and display the current registration data.
2		Press the [↓] key three times, move cursor to additional axis 1.
3		Long press the [CLEAR] key, and delete additional axis 1.
4		Press the [5], [0], [EXE] key. Additional axis 1 is set to "+50".

[Explanation]

- (1) The cursor can be moved with [arrow] keys.
- (2) If it is improperly input, press [CLEAR] to delete the character.

7.4.7 Operation

The operation is started like the standard system. For details of the actual operation starting method, etc., refer to separate "Instruction Manual/ Detailed explanations of functions and operations".

7.Setting, Operation and Command Explanation of Robot Additional Axis



CAUTION

Regardless of the type of the interpolation command, the robot additional axis moves from the start point to the end point in the joint interpolation mode. The start and end of the operation of the robot additional axis is simultaneous with the start and end of the operation of the main unit (simultaneous interpolation).



CAUTION

If any program execution is interrupted and the additional axis is moved with the jog or servo OFF, it will return to the interrupted position for motion when the program is restarted.

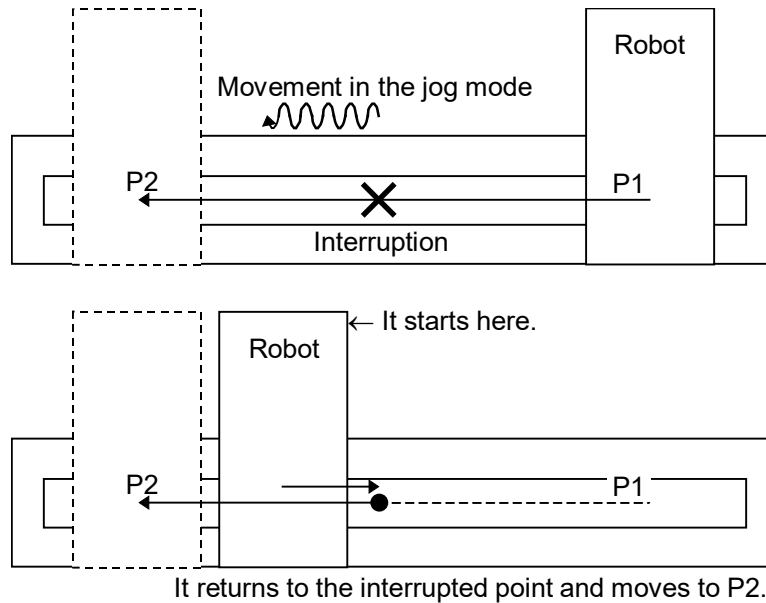


Fig. 7.4.2 Motion when the interruption of the robot additional axis is restarted

7.4.8 Stop

- Stop

The program in running is stopped, and the robot arm and robot additional axis in moving is decelerated and stopped. In this stop mode, the servo is kept ON and the brake is not activated. The stop is operated like the standard system. For details of the actual stop method, refer to the stop in "Instruction Manual/ Detailed explanations of functions and operations".

- Emergency stop

The servo is turned OFF, the brake is activated and the robot arm and robot additional axis are immediately stopped. This is called the emergency stop.

Emergency stop can be performed using the following methods.

- (1) Press [EMG.STOP] key of the teaching pendant.
- (2) Emergency stop with the external emergency stop terminal on the rear of the robot controller.
- (3) Emergency stop with the emergency stop circuit attached to the servo system.
- (4) Emergency stop with the emergency stop switch on the operation panel of the CR860 controller.

Among them, Items (1) and (2) are carried out like the standard system. For details of the actual emergency stop method, etc., refer to the connecting the external emergency stop in "Instruction Manual/ Controller setup, basic operation, and maintenance".

For the using method and others of Item (3), refer to "Instruction Manual for Servo System" purchased.

7.4.9 Error resetting

The error resetting is carried out like the standard system. For details of the actual error resetting method, refer to the error reset operation in "Instruction Manual/ Detailed explanations of functions and operations".

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.5 Explanation of commands

The applied commands are the same as those of the standard system. However, there are some added points about the describing method of the position variables.

7.5.1 Interpolation commands

During execution of the interpolation command, the robot additional axis moves in the speed pattern (acceleration/deceleration motion) like "Fig. 7.5.1 Moving speed of additional axis" from the start point to the end point in all other modes except the circular interpolation, and the start/end of the interpolation is simultaneous with those of the robot arm. (Simultaneous interpolation)

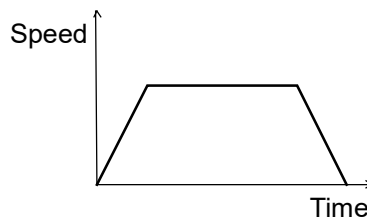


Fig. 7.5.1 Moving speed of additional axis

As the motions of the additional axis are summarized regarding the interpolation commands, they become as shown in "Table 7.5.1 Robot additional axis motion during each interpolation "

Table 7.5.1 Robot additional axis motion during each interpolation

Interpolation method	Motion of robot additional axis	
Joint interpolation (Mov)	Simultaneous interpolation by acceleration/deceleration motion from start point to end point	
Linear interpolation (Mvs)	Simultaneous interpolation by acceleration/deceleration motion from start point to end point	
Circular interpolation (Mvr, Mvr2, Mvr3)	<p>Simultaneous interpolation by acceleration/deceleration operation from start point to end point. At the transit point, center point and reference point except the start point and end point, the registered points of the robot additional axis are ignored. Moreover, the linear interpolation to the start point of the circular interpolation is simultaneously done with the acceleration/ deceleration motion. Mvr, Mvr2 and Mvr3 are all processed under "Linear interpolation to P1 → Circular interpolation from P1 to P3" and the additional axis data of P2 is ignored. (Refer to the right figure.)</p> <p>Moreover, refer to "this manual/7.5.2Synchronous control of robot additional axis (travel axis)" when it is desired to produce an accurate circle by simultaneously moving the robot arm and additional axis.</p>	
Circle interpolation (Mvc)	<p>During circle interpolation, the additional axis does not move. However, the linear interpolation to the start point of the circle interpolation is simultaneous with the acceleration/deceleration motion. Mvc are processed under "Linear interpolation to P1 → Circle interpolation of the robot only without movement of the robot additional axis", and the additional axis data of P2 and P3 is ignored.</p>	

7.Setting, Operation and Command Explanation of Robot Additional Axis

Interpolation method	Motion of robot additional axis
Spline interpolation (MvSpl)	The spline interpolation and Ex-T spline interpolation do not target additional axes. Even if the coordinate value of the additional axis have been set at each path point, the additional axis does not move from the coordinate value at the starting point during spline interpolation or Ex-T spline interpolation.
Ex-T spline interpolation (EMvSpl)	However, when the current position of the additional axis differs from the coordinate value at the starting point, the additional axis moves to the starting point.



Between the interpolation motion of the robot arm and the interpolation motion of the robot additional axis, there is not any other relationship excluding that the start and end of each interpolation are at the same time. Accordingly, if it is used as the travel axis which moves with the robot loaded, the locus of the control point is not assured in the circular interpolation and linear interpolation.

7.5.2 Synchronous control of robot additional axis (travel axis)

If any circular interpolation in which the additional axis position also varies is applied for the robot additional axis, the robot arm will draw an arc and the robot additional axis will be simultaneously accelerated/decelerated. Therefore, the tool tip will not draw any accurate circle but a locus, which is approximate to an ellipse. (Refer to "this manual/7.5.1 Interpolation commands.) If any circular interpolation is applied with the additional axis moved, the synchronous control will be used. Since the robot additional axis and the robot arm move in synchronization with each other due to the synchronous control, the tool tip of the robot can draw an accurate arc. Moreover, the speed of the circular/linear interpolation including the travel axis can be also designated by SPD command. This function is applicable only to the linear drive axis, which moves with the robot loaded like the travel axis. The valid commands are as follows.

- (1) Various circular interpolations (However, the circle interpolation is excluded.)
- (2) Linear interpolation
- (3) Circular pallet

However, this control can not be used on the 5-axis robots.

7.Setting, Operation and Command Explanation of Robot Additional Axis

The examples of the circular interpolation and circular pallet are described as follows.

[Example] Circular interpolation

In case of the circular interpolation, the additional axis and robot arm synchronously moves to draw an arc. The applicable commands are shown in "Table 3.5.3 Applicable commands".

Table 7.5.3 Applicable commands

Language method	Applicable commands
MELFA-BASICVI MELFA-BASICV	Mvr, Mvr2, Mvr3, Mvs (Mvc is not applicable since the start point and end point are the same.)

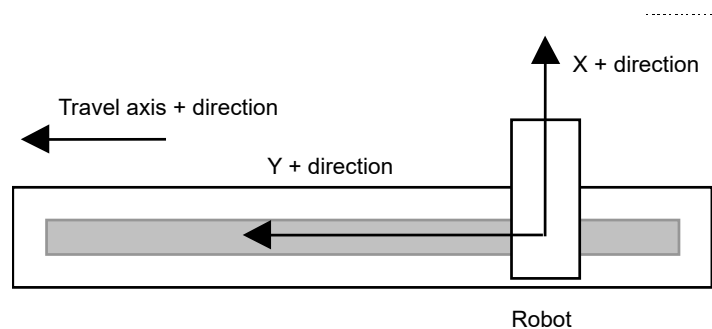


Fig. 7.5.2 Example of circular interpolation

If any circular interpolation is executed in the configuration (travel axis is 8th axis) as shown in "Fig. 7.5.2 Example of circular interpolation",

- 1 P1 = (200, 500, 400, 0, 0, 0, 0, 1000) (7, 0)
- 2 P2 = (200, 300, 800, 0, 0, 0, 0, 800) (7, 0)
- 3 P3 = (200, 100, 400, 0, 0, 0, 0, 600) (7, 0)
- 4 Mvr P1, P2, P3
- 5 End

Move in a semicircle with a radius of 400mm at the posture center of (200, 300, 400, 0, 0, 0, 0, 800).

7.Setting, Operation and Command Explanation of Robot Additional Axis

[Example] Circular pallet

When the circular pallet function is used, the position data on the calculated circular pallet becomes the data for which the position of the additional axis is taken into consideration as shown with the following example.


Def Plt 1, P1, P2, P3, , 7, 1, 3

Plt 1,1 = (200,500,400,0,0,0,0,1000)

Plt 1,2 = (200,300+200*sqrt(3)/2,600,0,0,0,0,800+200*sqrt(3)/2)

Plt 1,3 = (200,400,400+400*sqrt(3)/2,0,0,0,0,900)

Plt 1,4 = (200,300,800,0,0,0,0,800)

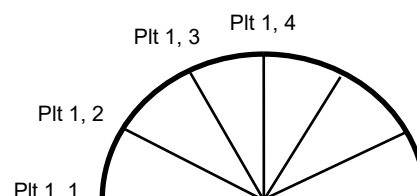

In order to make this function valid, it is necessary to set "Table 7.5.4 Parameter list of synchronous control".

Table 7.5.4 Parameter list of synchronous control

Parameter name	Content	Range of settable value	Default value	Explanation
AXSYNC	Additional axis synchronous control axis	0, 7, 8	0	Among the robot additional axes, the synchronous control axis is set. If any other axis except 7th and 8th axes is set, the function becomes invalid.
AXDIR	Synchronous direction of additional axis	Real number	0.0, 0.0, 0.0	Conversion from the coordinate system in which the travel axis + direction is used as X axis to the robot coordinate. From the 1st element, it is shown around X axis, Y axis and Z axis. As the default value, the robot X + direction matches the travel axis + direction.

[Example]

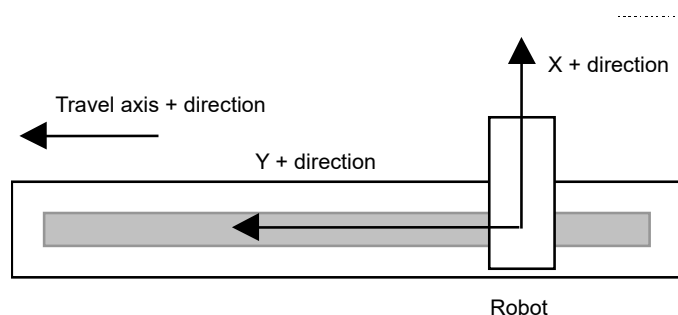


Fig. 7.5.3 Robot X axis direction and travel axis + direction

The parameter AXDIR is "0.0, 0.0, -90.0" in the case shown above.

7.Setting, Operation and Command Explanation of Robot Additional Axis

7.5.3 Position variables

- (1) The position of the robot additional axis is designated as follows.

[Example]

A value including the position of the additional axis to the position variable P1 is substituted at the program line No. 1 as described below.

1 P1 = (100, 50, 300, 180, 0, 180, 500, -300) (7, 0)

Additional axis 1 (7th axis)

Additional axis 2 (8th axis)

- (2) The element data of the robot additional axis is expressed with the value as shown below.

Additional axis 1 (7th axis) L1

Additional axis 2 (8th axis) L2

[Example]

At the program line No. 2, the value of the position of the additional axis 1 of the position variable P3 is changed as described below.

2 P3. L1 = 50 (500mm if the additional axis 1 is a direct moving axis) or
2 P3. L1 = Rad (50) (50deg if the additional axis 1 is a rotation axis)

- (3) The result of the calculation related to the position variable of the additional axis is as follows.

Position variable + (–) Position variable	The element data of the additional axis is also calculated as it is.
Position variable × Position variable	The element data of the additional axis is processed in the addition.
Position variable ÷ Position variable	The element data of the additional axis is processed in the subtraction.
Value variable × (÷) Position variable	The element data of the additional axis is processed as it is.

- (4) The element data of the additional axis of the grid point position of the pallet is calculated like the robot.


7.6 Example of System Configuration of the Robot's Additional Axis

This section shows an example of system configuration using the additional axis interface.

7.6.1 Travel axis system

• System Overview

The following shows an example when the travel axis is used as a robot's additional axis in a system where a standard robot is placed on the travel axis.

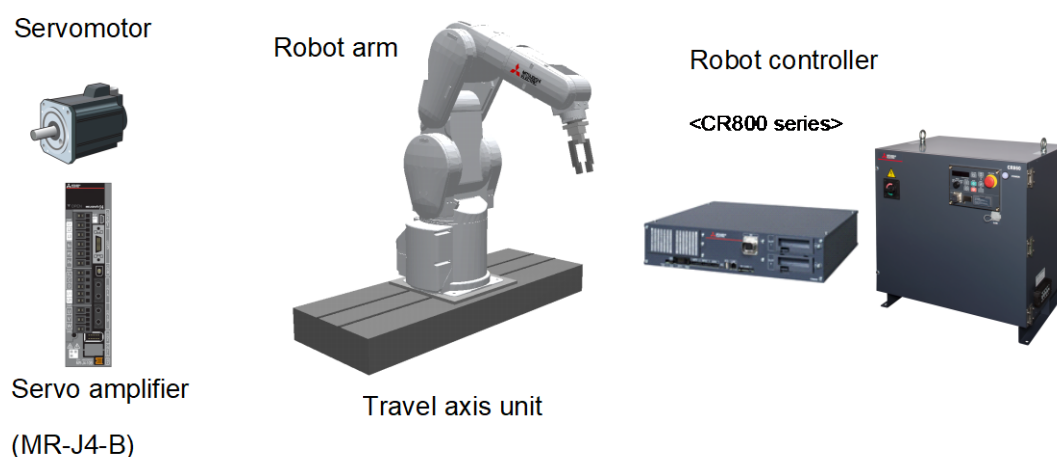

Note) The fig of the robot arm is the vertical multi-joint type 6 axis robot's example.

Fig. 7.6.1 Travel axis system (an example)

Table 7.6.1 Structural equipment

Robot arm	Vertical 6-axis robot
Robot controller	CR800 series controller
Servo amplifier	Prepared by the customer.
Servo motor	Prepared by the customer.
Travel axis unit	Manufactured and prepared by customer

Table 7.6.2 Travel axis specification

Control axis number of servo	1st
Axis number of robot	Additional axis1(7th axis)
Servo amplifier model	MR-J4-B
Unit of additional axis	mm (Direct moving axis)
Rotation direction of additional axis	Forward run (CCW)
Acceleration/deceleration of the additional axis	0.4 seconds per each
Total speed ratio of additional axis	37/2 (Robot's additional axis displacement of 37/2 mm per motor rotation)
Rated speed	3000 (rpm)
Maximum speed	4000 (rpm)
Encoder resolution	4194304 (pulse/rev)
Operating range	-2000~+3000 (mm)
Origin designated by user	0mm (same as the default value)

7.Setting, Operation and Command Explanation of Robot Additional Axis

- Connecting devices

Devices are connected as follows.

- (1) Connect servo amplifier (CN1A connector) with the robot controller by the SSCNETIII cable. Connect the robot controller with the AXIS connector. (Refer to "5.1Connection of Robot CPU and servo amplifier" in this manual.)
- (2) Set the axis selection rotary switch (SW1) of the servo amplifier to "0". (Refer to "6.1Servo amplifier setting" in this manual.)
- (3) Connect the servo amplifier and the servo motor.

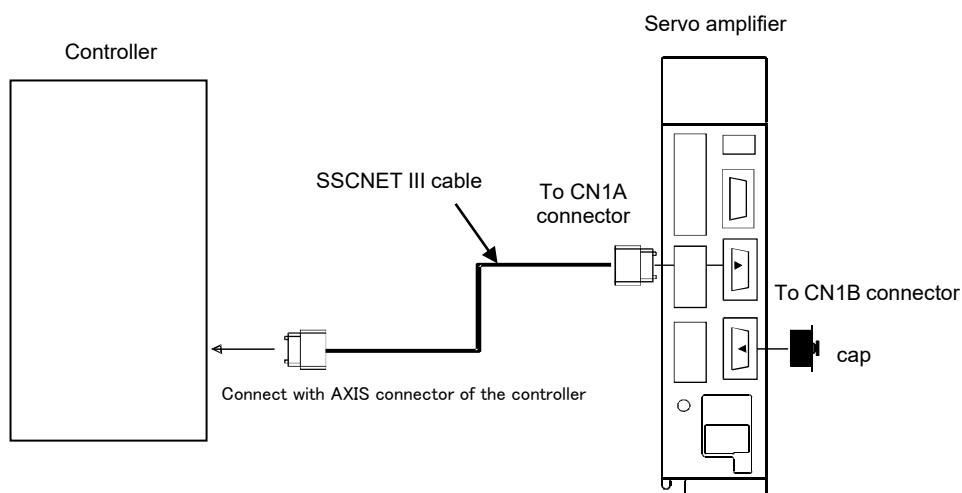


Fig. 7.6.2 Connection of controller and servo amplifier



CAUTION

Please install the connector cap to the connector for communication which does not connect the SSCNETIII cable. There is a possibility of malfunctioning if the cap is not installed. And, if the light from the connector for communication hits upon the eyes, there is a possibility of feeling the incompatibility for the eyes.

- Setting the servo amplifier parameters

Set the servo amplifier parameters by refer to "6.2Parameter setting of servo amplifier."

7.Setting, Operation and Command Explanation of Robot Additional Axis

- Setting the robot controller parameters

Set the parameters related to the system configuration of the robot controller.

For details on how to set these parameters, refer to separate "Instruction Manual/ Detailed explanations of functions and operations".

Table 7.6.3 Setting the travel axis system parameters

Parameter name changed	Before/after change	Value of parameter
AXUNUM	Before	0
	After	0
AXMENO	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>1</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXJNO	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>7</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXAMPMDL	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXUNT	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>1</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXSPOL	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXACC	Before	0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
	After	<u>0.40</u> , 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
AXDEC	Before	0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
	After	<u>0.40</u> , 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
AXGRTN	Before	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
	After	<u>37</u> , 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
AXGRTD	Before	10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10
	After	<u>2</u> , 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10
AXMREV	Before	2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
	After	<u>3000</u> , 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
AXJMX	Before	3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
	After	<u>4000</u> , 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
AXENCR	Before	4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
	After	4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
AXTRQLMT	Before	300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300
	After	300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300, 300
MEJAR (Mechanism No.1)	Before	-, ?, -, ?, -, ?, -, ?, -, ?, -, 80000.00, 80000.00, -80000.00, 80000.00
	After	-, ?, -, ?, -, ?, -, ?, -, ?, -, -2000.00, 3000.00, -80000.00, 80000.00 (Use a value that has previously been registered for the part indicated by "?.")
USERORG (Mechanism No.1)	Before	?, ?, ?, ?, ?, ?, 0.0, 0.0
	After	?, ?, ?, ?, ?, ?, 0.0, 0.0

7.Setting, Operation and Command Explanation of Robot Additional Axis

•Program example


(1) Details of work

The operation of this system consists of a standard robot unloading a work from station A (position "<1>") and transporting the work to station B (position "<2>").

In station B, the time required for teaching will be saved by using the pallet function.

To use the pallet function, it is necessary to enable synchronous control of the robot's additional axis, however.

(For details on synchronous control, refer to "7.5.2Synchronous control of robot additional axis (travel axis).")

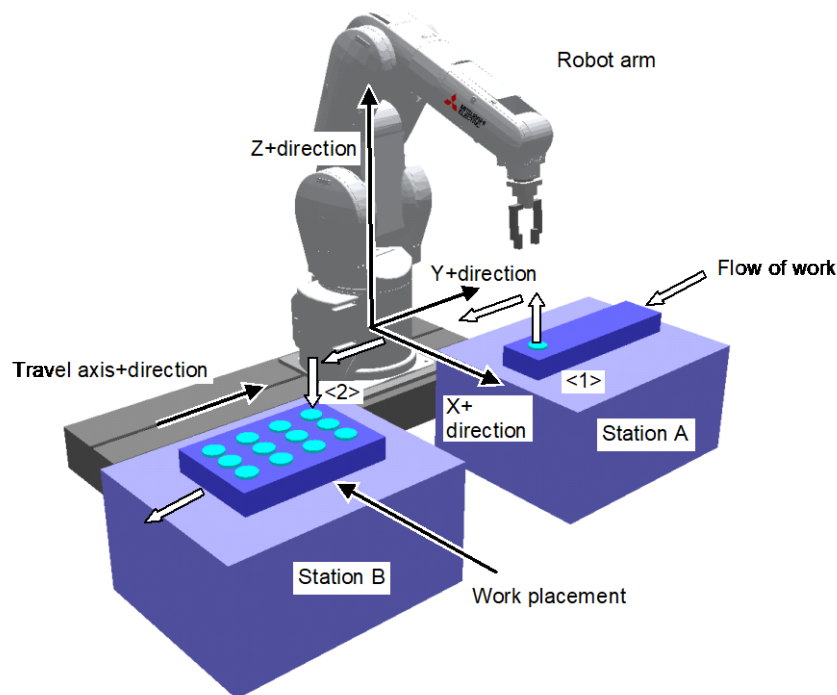

•Flow of work

- A work is transported to station A from the external location.
- When the work is transported, the robot unloads the work from station A, and palletizes the work onto the work placement table of station B.
- When the work placement table of station B becomes full, the works will be transported to the external location.

(2) Robot Program Structure

Prepare one robot program as shown below

Program name	Explanation
1	Operation program of standard robots

7.Setting, Operation and Command Explanation of Robot Additional Axis

(3) Input/Output signal


The general I/O signals to be used are as follows

General purpose in-put/output name	Signal H/L	Explanation
General purpose input 10080	H (1)	Transport of works from the external location to station A has been complete.
	L (0)	No work in station A

General purpose in-put/output name	Signal H/L	Explanation
General purpose output 10080	H (1)	Works are full in station B (work table change request)
	L (0)	Transporting a work to station B

(4) Position variable

The position data is as follows

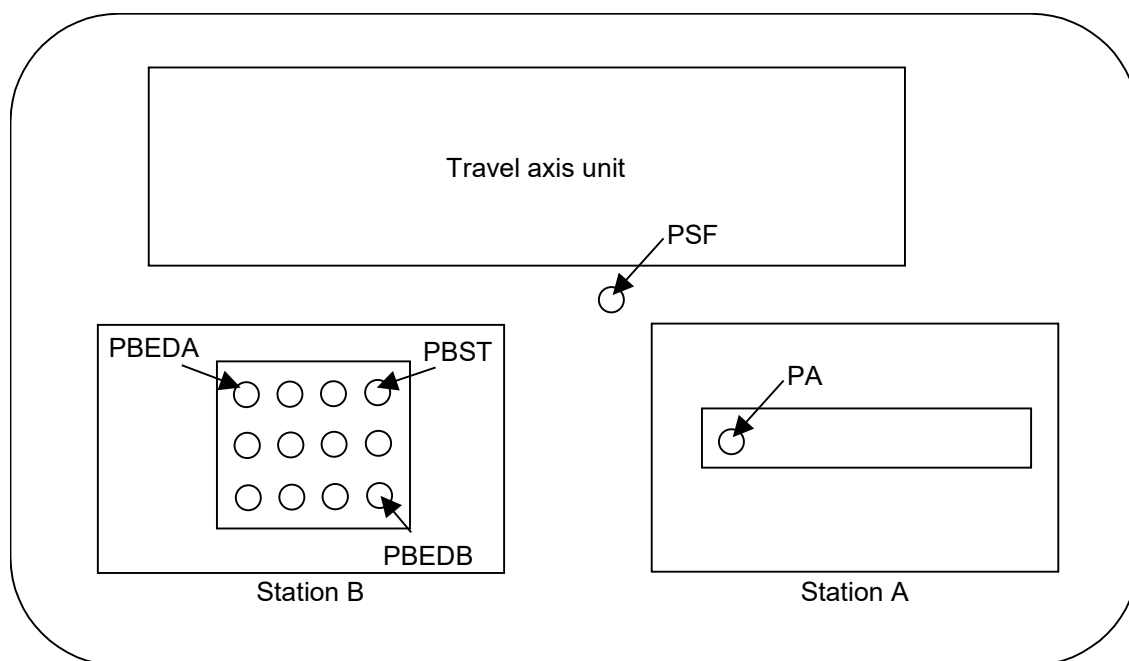

Mechanism name	Position variable name	Explanation
Robot arm	PSF	Safe position
	PA	Position where works are unloaded from station A
	PBST	Position where works are loaded to station B (Start position of pallet)
	PBEDA	Position where works are loaded to station B (End-A position of pallet)
	PBEDB	Position where works are loaded to station B (End-B position of pallet)

7.Setting, Operation and Command Explanation of Robot Additional Axis

(5) Procedure up to program execution

Procedure 1 : Program creation

<1>Program of mechanism number 1 (Program name:1)

1 Def Plt 1,PBST,PBEDA,PBEDB,,4,3,2	' Definition of palette number 1
2 Mov PSF	' Move to safe position
3 HOpen 1	' Open the hand1
4 M1=1	' M1 is used for counter
5 *W1	
6 If M_In(11)=0 Then GoTo *W1	' Waits for the transport of a work
7 M_Out(11)=0	' Transporting a work
8 *LOOP	
9 Mov PA,-50	' Moves to the position of 50 mm back from work unloaded position
10 Mvs PA	' Moves to the position where work is unloaded
11 HClose 1	' Close the hand1
12 Dly 0.5	' Waits for 0.5 sec
13 Mvs PA,-50	' Moves to the position of 50 mm back from work unloaded position
14 PB=(Plt 1,M1)	' Calculates the position in the pallet number 1 indicated by M1
15 Mov PB,-50	' Moves to the position 50 mm back from the work placing position
16 Mvs PB	' Moves to the work placing position
17 HOpen 1	' Open the hand1
18 Dly 0.5	' Waits for 0.5 sec
19 Mvs PB,-50	' Moves to the position 50 mm back from the work placing position
20 M1=M1+1	' Advances the counter
21 If M1<=12 Then *LOOP	' Loops as many as the number of works
22 M_Out(11)=1	' Work full
23 End	

Procedure 2 : Setting synchronous control of the robot's addition axis

Set the parameters as shown below.

For more details, refer to "7.5.2Synchronous control of robot additional axis (travel axis)."

Parameter	Default value	Setting value
AXSYNC	0	7
AXDIR	0.0, 0.0, 0.0	0.0, 0.0, -90.0

Procedure 3 : Reflecting the parameters

Turn off the power to enable the AXSYNC and AXDIR parameters, and then turn on the power again.

Procedure 4 : Starting

Run the program 1 in the OPERATION screen of the teaching pendant.

8. User Mechanism Settings, Operation, and Commands

When the additional axis is used as a multi-mechanism (controlled asynchronously with the robot arm), each axis of the mechanism is called a user mechanism.

This section describes a series of operating procedures including parameter settings, activating and quitting the user mechanism, as well as the commands that have been added and changed.

8.1 Procedure for Setting the Parameters of the User Mechanism

To use the additional axis as a multi-mechanism (user mechanism), perform setup according to the procedures below

- (1) Set the parameters shown in "Table 8.2.1 Parameter List."
However, MEJAR (Joint Movement Range) and USERORG (User-Designated Origin) are set in Procedure 4, so they are not set here.
- (2) Turn off the power once and then turn it on again. Check that error H7613 ("Turn the power off and on once") occurs. However, this error occurs only when the number of mechanisms is increased.
- (3) If error H7613 occurs, turn off the power once and then turn it on again.
- (4) On the parameter setting screen for the target mechanism, set MEJAR (Joint Movement Range) and USERORG (User-Designated Origin).
- (5) Set the servo system parameters with the servo amplifier's option, "Servo Support Software". Refer to "6.2 Parameter setting of servo amplifier". For setup method and values of the servo system program, refer to the Servo Amplifier Instruction Manual.

8.2 Description of parameters

Before use, it is necessary to surely set the following parameters. The parameters set at the robot controller are shown in "Table 8.2.1 Parameter list". For the method to set the parameters, refer to "Instruction Manual/ Detailed explanations of functions and operations".



After changing the parameters, turn the power supply of the controller from OFF to ON. Unless this is done, the changed parameters will not become valid.



If any motor, absolute position detector, etc., is replaced or any parameter related to the mechanism and the axis configuration is changed, be sure to confirm the current position. If the origin is dislocated, set the origin again. The parameters related to the axis configuration are the multi mechanism applied quantity (AXUNUM), mechanism No. designation (AXMENO), setting axis No. (AXJNT), unit system (AXUNT), rotation direction (AXSPOL) and endoder resolution (AXENCR).



Because to prevent the collision to peripheral equipment, the mechanical stopper, etc., sure set up the operating range (MEJAR) before moving the additional axis.

8. User Mechanism Settings, Operation, and Commands

8.2.1 Parameter list

The parameters are listed in the following "Table 8.2.1 Parameter list". For details of the parameters, refer to "this manual/8.2.2Details of parameters".

Table 8.2.1 Parameter list

Parameter name	Content	Settable range	Number of elements	Number of elements per axis	Default value	Explanation
AXUNUM	Number of multi mechanisms used	0 to 2	1	–	0	The number of multi-mechanism to use. (The robot and the mechanism of mechanism number 1 are exclude.)
AXMENO	Mechanism No. designation	0 to 3	16	1 (per control axis of servo)	0	Input the mechanism No. to the element which corresponds to the servo control axis No. used and be sure to set "0" for the axis not used.
AXJNO	Setting axis No.	0 to 8	16	1 (Same as above)	0	Designate what number of the axis of the robot arm is used for the additional axis.
AXUNT	Unit system	0 or 1	16	1 (Same as above)	0	Unit system of additional axis 0 ... Angle (degree) 1 ... Length (mm) 2 ... Length (mm) Linear servo use (Set up "2", when using the linear servo)
AXSPOL	Rotation direction	0 or 1	16	1 (Same as above)	0	Set the rotation direction of the motor. 1 ... Forward run (CCW) 0 ... Reverse run (CW) Be sure to set "0" (CCW) at the "POL" parameter of the basic parameter No. 7 of the servo amplifier.
AXACC	Acceleration time	Positive real number	16	1 (Same as above)	0.20	Acceleration time (Unit: second) of additional axis
AXDEC	Deceleration time	Positive real number	16	1 (Same as above)	0.20	Deceleration time (Unit: second) of additional axis
AXGRTN	Total speed ratio numerator	Positive integer	16	1 (Same as above)	1	Total speed ratio numerator of additional axis
AXGRD	Total speed ratio denominator	Positive integer	16	1 (Same as above)	10	Total speed ratio denominator of additional axis
AXMREV	Rated speed	Positive integer	16	1 (Same as above)	2000	Rated speed (Unit: r/min.) of motor or Rated speed (Unit: mm/s.) of linear motor
AXJMX	Maximum speed	Positive integer	16	1 (Same as above)	3000	Maximum speed (Unit: r/min.) of motor or Maximum speed (Unit: mm/s.) of linear motor
AXENCR	Encoder resolution	Positive integer	16	1 (Same as above)	4194304	Encoder resolution of motor (Unit: pulse/rev)
AXJOGTS	JOG smoothening time constant	Positive real number	16	1 (Same as above)	150.00	If it vibrates at JOG, set a larger value. (Unit: ms)
MEJAR	Joint operating range	A real number of -131072.00 to +131072.00	16	2 (per axis of robot)	–80000.0, 80000.0	Operating range. The minimum values and maximum values are described in this order. (Unit: degree or mm)
USERORG	User designated origin	A real number of –80000.00 to 80000.00	8	1 (per control axis of servo)	0.00	Designate the origin position designated by the user. Set a value within the range set in MEJAR (joint operating range). (Unit: degree or mm)

8. User Mechanism Settings, Operation, and Commands

Parameter name	Content	Settable range	Number of elements	Number of elements per axis	Default value	Explanation
AREA*CS (* is 1 to 32)	User definition area	0, 1	1	---	0	Specify the coordinate system of the area. World coordinate system/Base coordinate system: 0/1
AREA*P1 (* is 1 to 32)		A real number of -80000.00 to 80000.00	8	1 (Same as above)	XYZ=0 ABC=-360	Position data of the area's first point: XYZ (Unit: degree or mm)
AREA*P2 (* is 1 to 32)		A real number of -80000.00 to 80000.00	8	1 (Same as above)	XYZ=0 ABC=360	Position data of the area's second point: XYZ (Unit: degree or mm)
AREA*ME (* is 1 to 32)		0 to 3	1	---	0	Target mechanism number
AREA*AT (* is 1 to 32)		0 to 2	1	---	0	Specify the behavior upon entering the area. Disable/signal output/error: 0/1/2
USRAREA		-1 (disabled) The signal number differs depending on the system configuration.	2	---	-1,-1	Define the number of the signal that outputs the status.
MnSRVOFF (n = 1 to 3)		-1 (disabled) The signal number differs depending on the system configuration.	2	---	-1,-1	Element 1: Set the input signal number. This signal turns OFF the servo for each mechanism. n=1 to 3. The servo cannot be turned ON while this signal is being input. Element 2: Set the output signal number. Outputs the servo ON disabled state. (Echo back)
MnSRVON (n = 1 to 3) (Operation right required)		-1 (disabled) The signal number differs depending on the system configuration.	2	---	-1,-1	Element 1: Set the input signal number. Turns the servo for each mechanism ON. n=1 to 3. Element 2: Set the output signal number. Outputs the servo ON state. n=1 to 3.

8. User Mechanism Settings, Operation, and Commands

8.2.2 Details of parameters

Here, the parameters are described in details.

- (1) AXUNUM (number of multi mechanisms used)
- (2) AXMENO (mechanism No. designation)
- (3) AXJNO (Setting axis No.)
- (4) AXUNT (unit system)
- (5) AXSPOL (motor rotation direction)
- (6) AXACC (acceleration time) · AXDEC (deceleration time)
- (7) AXGRTN (total speed ratio numerator) · AXGRTD (total speed ratio denominator)
- (8) AXMREV (rated rotation speed) · AXJMX (maximum rotation speed) · AXENCR (encoder resolution)
- (9) AXJOGTS (JOG smoothing time constant)
- (10) MEJAR (joint operating range)
- (11) USERORG (user designated origin)
- (12) About the User Definition Area

Moreover, the parameter elements of (2) to (9) correspond to the control axis Nos. of the servo as shown in "Fig. 8.2.1 Control axis No. and parameter element of servo". If any personal computer support software (which enables the program editing, parameter setting, various monitors and so on of the robot) is used, (10) and (11) are the mechanical parameters and the others are arranged in the common parameters.

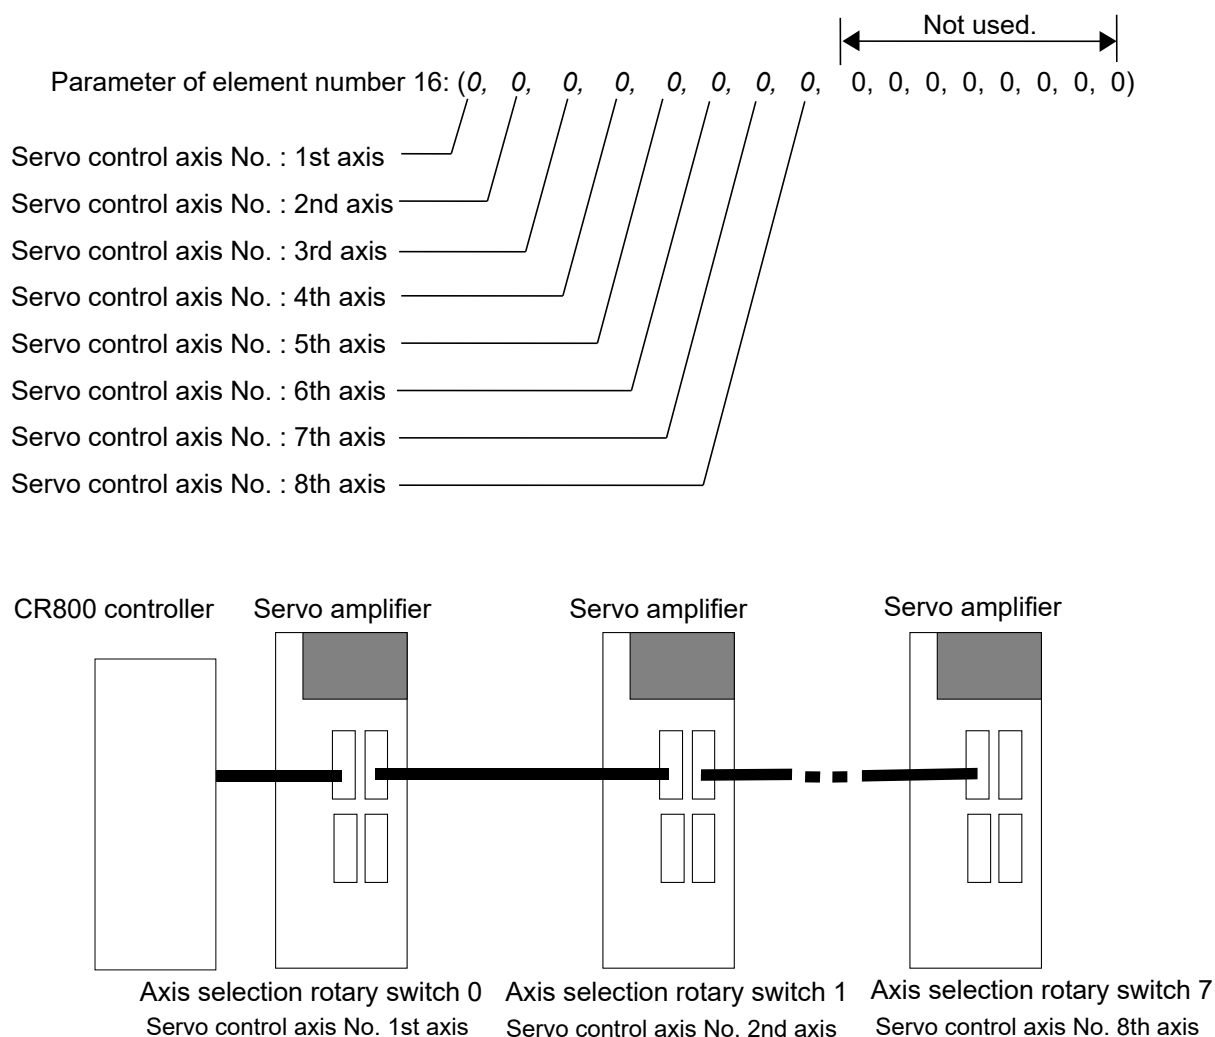


Fig. 8.2.1 Control No. and parameter element of servo

8. User Mechanism Settings, Operation, and Commands

(1) AXUNUM (number of multi mechanisms used)

This parameter designates how many mechanisms are connected when the additional axis is used as the multi mechanism. Max. 2 mechanisms can be connected. When one multi mechanism is connected, the mechanism No. of the connected mechanism automatically become 2. When two mechanisms are connected, the mechanism Nos. become 2 and 3. Moreover, when a mechanism is once set but is deleted, change AXUNUM and set "0" to the AXMENO which corresponds to the mechanism No. deleted.

Any additional axis is not used.	0
One additional axis is used as the multi mechanism.	1
Two additional axes are used as the multi mechanisms.	2

(2) AXMENO (mechanism No. designation)

This parameter sets which mechanism the servomotor connected to the servo amplifier is connected to regarding each axis.

Not used.	0
Used as 1st mechanism axis.	1
Used as 2nd mechanism axis.	2
Used as 3rd mechanism axis.	3

[Example]

When the servomotor set "Control axis No. of servo" as the 1st axis is used as the multi mechanism (number of mechanisms: 1 unit and number of mechanism axes: 1 axis), set the parameter AXMENO as follows.

AXMENO = 2, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "2" to the 1st element.)

(3) AXJNO (Setting axis No.)

Regarding each axis, this parameter sets what number axis of the robot or mechanism the servomotor is used as. To change an axis No. which has been set once (example: 1st axis → 2nd axis), first set "0" at AXMENO and turn the power supply of the controller from OFF to ON. The default value is "0".

1st axis of mechanism	1
2nd axis of mechanism	2
3rd axis of mechanism	3

[Example]

When the servomotor set "Control axis No. of servo" as the 1st axis is used as the 1st axis of the mechanism,

AXJNO = 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "1" to the 1st element.)

8. User Mechanism Settings, Operation, and Commands

(4) AXUNT (unit system)

Regarding each axis, this parameter sets the unit system of the servomotor, which can be used.

Used as the rotation axis. (Unit: degree) (Default value)	0
Used as the linear drive axis (Unit: mm)	1
Use the linear servo (Unit: mm)	2

[Example]

When the servomotor set "Control axis No. of servo" as the 1st axis is used as the linear drive axis (Unit: mm),

AXJNO = 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "1" to the 1st element.)

When linear servo is connected to the axis which set to 2nd axis as the "Control axis No. of servo"

AXUNT = 0, 2, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "2" to the 2nd element.)

(5) AXSPOL (motor rotation direction)

Regarding each axis, this parameter sets in which direction the servomotor is rotated when the joint position data is increased. The rotation direction is illustrated in the parameter details of "Instruction Manual for Servo Amplifier".

Moreover, set the rotation direction with the robot controller.

Forward run (CCW) (default value) as the value of the joint coordinate is increased	0
Reverse run (CW) as the value of the joint coordinate is increased	1

Here, be sure to set "POL" parameter of the basic parameter No. 7 of the servo amplifier to "0" (CCW).

[Example]

When the rotation direction of the servomotor set "Control axis No. of servo" as the 1st axis is reversed as the joint position data is increased,

AXSPOL = 1, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0 (Set "1" to the 1st element.)

(6) AXACC (acceleration time) · AXDEC (deceleration time)

Regarding each axis, these parameters set the acceleration/deceleration time from the stop state to the maximum speed when the override of the servomotor which can be used is 100%. The default value is 0.20 (seconds).

[Example]

When the acceleration/deceleration time of the servomotor set "Control axis No. of servo" as the 1st axis is set as follows,

Acceleration time	0.40 (seconds)
Deceleration time	0.40 (seconds)

AXACC = 0.40, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20 (Set "0.40" to the 1st element.)

AXDEC = 0.40, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20 (Set "0.40" to the 1st element.)

(7) AXGRTN (total speed ratio numerator) · AXGRTD (total speed ratio denominator)

These parameters set the numerator and denominator of the total speed ratio of the servomotor which can be used. As the total speed ratio, set a reduced fraction of the integers of the numerator and denominator ($1/18.5 \rightarrow 2/37$). The default value of AXGRTN is "1", and the default value of AXGRTD is "10". When using the linear servo motor, the setting methods differ. Please refer to "this manual/8.2.3 About using the linear servo motor".

[Example]

When the total speed ratio of the servomotor axis set "Control axis No. of servo" as 1st axis is $25/8(\text{mm/rev})$,

AXGRTN = 25, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1 (Set "25" to the 1st element.)

AXGRTD = 8, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10 (Set "8" to the 1st element.)

The total speed ratio of the direct moving axis is calculated as follows. From the relationship of the gear ratio and ball screw lead of "Fig. 8.2.2 Inside of direct moving unit", the movement amount of the load per rotation of the motor is as follows.

$$5 \times 5/8 = 25/8 [\text{mm/rev}]$$

Accordingly, since the motor speed when the load is moved 1mm becomes $8/25$ rotation, the total speed ratio becomes as follows.

$$\text{AXGRTN/AXGRTD} = 1 / (8/25) = 25/8$$

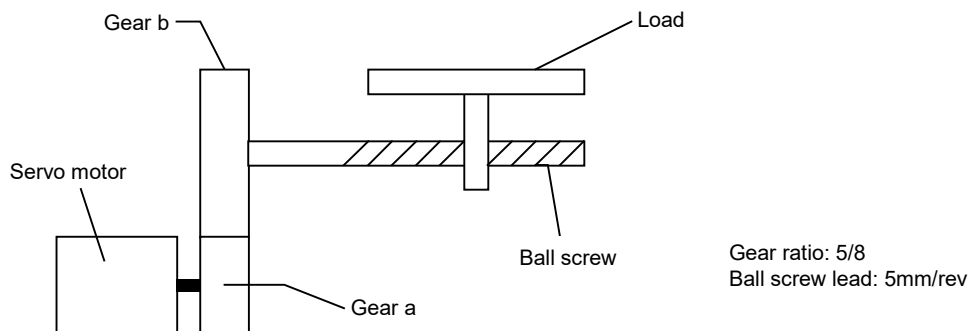


Fig. 8.2.2 Inside of direct moving unit

The total speed ratio of the rotation axis is calculated as follows. When the table of "Fig. 8.2.3 Inside of rotation table" rotated one rotation (360 degrees), the motor speed becomes 10 rotations. Therefore, the total speed ratio becomes as follows.

$$\text{AXGRTN/AXGRTD} = 1/10$$

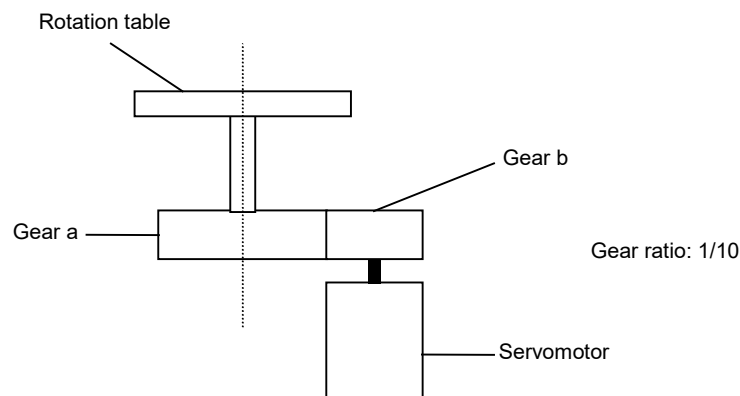


Fig. 8.2.3 Inside of rotation table

8. User Mechanism Settings, Operation, and Commands

- (8) AXMREV (rated rotation speed) · AXJMX (maximum rotation speed) · AXENCR (encoder resolution)

These parameters set the properties of the servomotor, which can be used. Referring to the specifications in "Instruction Manual for Servo Amplifier", set the values which are suitable for the applied servomotor. The default value of AXMREV is 2000(r/min.), the default value of AXJMX is 3000(r/min.) and the default value of AXENCR is 4194304 (pulse/rev). When using the linear servo motor, the setting methods differ. Please refer to "this manual/8.2.3 About using the linear servo motor".

[Example]

When the properties of the servomotor set "Control axis No. of servo" as the 1st axis are as follows.

Rated speed	3000 (r/min)
Maximum speed	4000 (r/min)
Encoder resolution	131072 (pulse/rev)

AXMREV = 3000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
(Set "3000" to the 1st element.)

AXJMX = 4000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
(Set "131072" to the 1st element.)

AXENCR = 131072, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
(Set "131072" to the 1st element.)



CAUTION

In MANUAL mode, the maximum speed of an additional axis is 10% of the value set in parameter AXJMX.

Therefore, when operating the robot mounted on a travel axis (additional axis) in MANUAL mode, set parameter AXJMX so that the operating speed (composite speed) of the robot including the travel axis does not exceed the safe speed (250 mm/s).

- (9) AXJOGTS (JOG smoothening time constant)

Set this parameter to reduce the vibration if it occurs during jog of the additional axis. If any excessive value is set, the acceleration/deceleration time becomes long during jog operation. The settable value is in the range of positive real numbers. The default value is 150.00 (ms).

[Example]

When this parameter value is set to "200.00" against vibration of the axis set "Control axis No. of servo" as the 1st axis,

AXJOGTS = 200.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00, 150.00
(Set "200.00" to the 1st element.)

(10) MEJAR (joint operating range)

For this parameter, set the motion range of the additional axis in order of minimum value and maximum value. To set the additional axis of multi-mechanisms, change all parameters excluding the user designated origin (USERORG) parameters, and then turn the power from off to on. Next, select a user mechanism to be used, and then set this parameter. The settable values are real numbers in the range of -131072.00 to +131072.00. The default values are -80000.00, 80000.00.

[Example]

When it is used as the multi mechanism (number of mechanism axes: 1 axis), set the motion range as follows.

Minimum value -2000mm
Maximum value 3000mm

MEJAR = -2000.00, 3000.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00

(Set -2000.00 at the 1st element and 3000.00 at the 2nd element.)

<Note>

Cannot move to the position exceeding operating range as following. Please set up the operating range (MEJAR) in the range which satisfies the following formula sure. Take care since the operating range changes with set-up values of the encoder resolution setup (AXENCR) and the total reduction ratio setup (AXGRTN, AXGRTD)

	Operatingrange
Linear axis (mm)	$-\left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}} \leq x \leq \left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}}$
Rotation axis (deg)	$-360 \times \left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}} \leq x \leq 360 \times \left(\frac{2^{31}}{\text{AXENCR}} - 50\right) \times \frac{\text{AXGRTN}}{\text{AXGRTD}}$

(x : The position which robot moves (coordinate value))

<Example>

If the axis is the rotation type, and if the encoder resolution and the total reduction ratio are the following, the operating range (setting value of MEJAR) is -1663.20 (deg) to +1663.20 (deg).

<Encoder resolution, the total reduction ratio>

AXENCR=4194304

AXGRTN=1

AXGRTD=100

(11) USERORG (user designated origin)

This parameter sets the origin position set when the user designated origin is set. The origin of the additional axis set here is also reflected on the other origin setting method (mechanical stopper, jig and ABS system). To set the additional axis of multi-mechanisms, change all parameters excluding the joint operating range (MEJAR) parameter, and then turn the power from off to on. Next, select a user mechanism to be used, and then set this parameters. The settable value is in the range of -131072.00 to +131072.00, being a real number in the range set at MEJAR (joint operating range).

[Example]

When it is used as the multi mechanism (number of mechanism axes: 1 axis), set the user designated origin as follows.

Origin position designated by the user 1500mm

USERORG = 1500.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00, 0.00 (Set "1500.00" to the 1st element.)




CAUTION

The MEJAR (joint operating range) and USERORG (user designated origin) parameters must be set for each user mechanism selected. When setting the values for the additional axis to be used as multi-mechanisms, exercise caution so as not to change the robot axes by mistake.


8. User Mechanism Settings, Operation, and Commands

(12) About the User Definition Area

When working together with peripheral devices, the range of work may be shared. It is necessary to notify others that one is in the shared area. In such a case, a signal can be output by setting the applicable parameter while the user mechanism is within an arbitrary range. An example using the following user mechanism (mechanism number 2) will be explained.

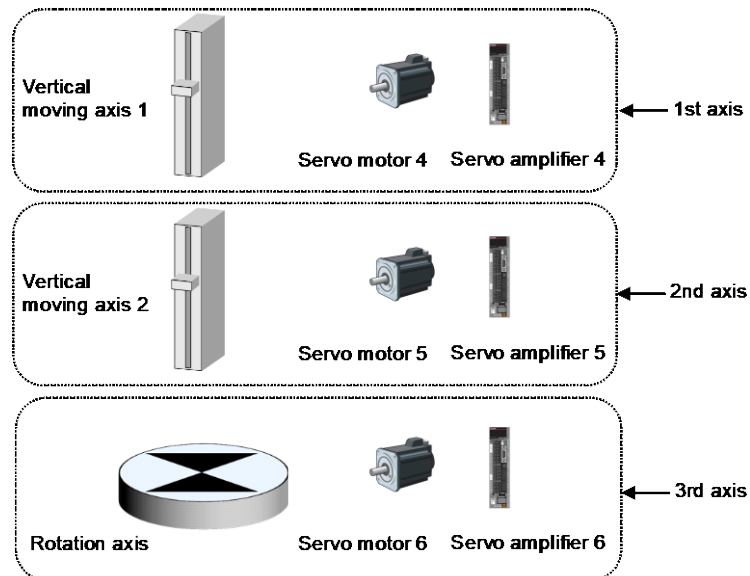

To output the output number 10080 when the first axis is working in the range 1, the output number 10081 when the second axis is working in the range 2, and the output number 10082 when the third axis is working in the range 3, set the parameters as follows.

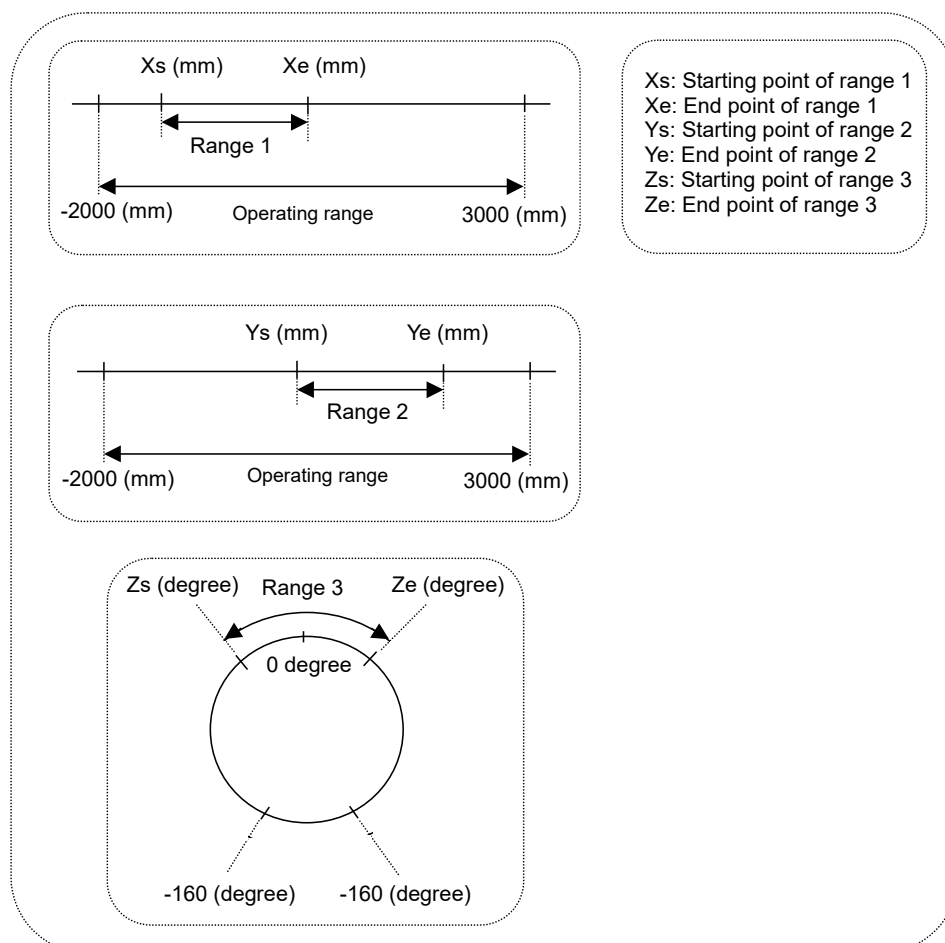

8. User Mechanism Settings, Operation, and Commands

Parameter name	Meaning of the value	Value
AREA1CS	Specify the coordinate system of the area. World coordinate system/Base coordinate system: 0/1	0
AREA1P1	Position data for the first point: X,Y,Z Unit: degree or mm	Xs,-10000,-360,-360,-360,-360,0,0
AREA1P2	Position data for the second point: X,Y,Z Unit: degree or mm	Xe,10000,360,360,360,360,0,0
AREA1ME	Target mechanism number. In this case the value is 2.	2
AREA1AT	Specify the behavior upon entering the area. Invalid /signal output/error: 0/1/2 Invalid : This function will be invalid. Signal output : The dedicated output signal USRAREA will turn ON. Error: An error is generated when entering the area.	1
AREA2CS	Specify the coordinate system of the area. World coordinate system/Base coordinate system: 0/1	0
AREA2P1	Position data for the first point: X,Y,Z Unit: degree or mm	-10000,Ys,-360,-360,-360,-360,0,0
AREA2P2	Position data for the second point: X,Y,Z Unit: degree or mm	10000,Ye,360,360,360,360,0,0
AREA2ME	Target mechanism number. In this case the value is 2.	2
AREA2AT	Specify the behavior upon entering the area. Invalid /signal output/error: 0/1/2 Invalid : This function will be invalid. Signal output : The dedicated output signal USRAREA will turn ON. Error: An error is generated when entering the area.	1
AREA3CS	Specify the coordinate system of the area. World coordinate system/Base coordinate system: 0/1	0
AREA3P1	Position data for the first point: X,Y,Z Unit: degree or mm	-10000, -10000, Zs,-360,-360,-360,0,0
AREA3P2	Position data for the second point: X,Y,Z Unit: degree or mm	10000,10000,Ze,360,360,360,0,0
AREA3ME	Target mechanism number. In this case the value is 2.	2
AREA3AT	Specify the behavior upon entering the area. Invalid /signal output/error: 0/1/2 Invalid : This function will be invalid. Signal output : The dedicated output signal USRAREA will turn ON. Error: An error is generated when entering the area.	1

8. User Mechanism Settings, Operation, and Commands

Parameter name	Meaning of the value	Value
USRAREA	Define the number of the signal that outputs the status. Output signal: starting number, end number	10080,10082 (Information on whether it is within AREA1* is output to the signal 100080, information on whether it is within AREA2* is output to the signal 10081, and information on whether it is within AREA3* is output to the signal 10082.)

*1 Enter the coordinates of each axis in each of Xs, Xe, Ys, Ye, Zs and Ze.

*2 Set a value exceeding the movement range for the axis to be disabled, so that it will be always working within the area.

*3 When the base coordinate system of the user mechanism is not changed, AREA*CS does not need to be changed. For the differences of the user-defined area functions by specifying the coordinate system, refer to About user-defined area in "INSTRUCTION MANUAL/Detailed explanations of functions and operations".

8.2.3 About using the linear servo motor

When using the linear servo motor, set the total speed ratio parameter (AXGRTN/AXGRTD), the encoder resolution parameter (AXENCR), and the rated speed parameter (AXMREV/AXJMX) as follows.

(1) Resolution related parameter (AXGRTN/AXGRTD/AXENCR) setting.

Set up the linear servo motor moving distance per one pulse of linear encoder as follows.

$$\text{Moving distance per one pulse (mm)} = \frac{\text{AXGRTN}}{\text{AXGRTD}} \times \frac{1}{\text{AXENCR}}$$

[Example]

When the resolution of linear servo motor which set the "Control axis No. of servo" to the 1st axis is the following.

Linear encoder resolution: 0.05μm

$$\text{Moving distance per one pulse (mm)} = \frac{0.05 \times 10^{-3} [\text{mm}]}{1 [\text{pulse}]} = \frac{1}{20000}$$

$$\frac{\text{AXGRTN}}{\text{AXGRTD}} \times \frac{1}{\text{AXENCR}} = \frac{1}{20000}$$

[Example of set value]

ACGRTN = 1

AXGRTD = 1

AXENCR = 20000

Therefore, the parameter set value is as follows.

AXGRTN = (1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1) (Set the 1st element to 1.)

AXGRTD = (1, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10) (Set the 1st element to 1.)

AXENCR = (20000, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304) (Set the 1st element to 20000.)

8. User Mechanism Settings, Operation, and Commands

(2) Speed related parameter (AXMREV/ AXJMX) setting

Set the rated speed and maximum speed as the parameter AXMREV (rated speed) and AXJMX (maximum speed)
(Unit: mm/s)

<Note>

When using the linear servo motor, set the set value of parameter AXUNT (unit system) to "2."
(Refer to "this manual/8.2.2 Details of parameters (4) AXUNT (unit system)")

[Example]

When the specification of linear servo motor which set the "Control-axis-No.-of-servo" to 1st axis are the following.

Rated speed 1800 (mm/s)

Maximum speed 2000 (mm/s)

AXMREV = (800, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000)

AXJMX = (2000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000)



CAUTION

In MANUAL mode, the maximum speed of an additional axis is 10% of the value set in parameter AXJMX.

Therefore, when operating the robot mounted on a travel axis (additional axis) in MANUAL mode, set parameter AXJMX so that the operating speed (composite speed) of the robot including the travel axis does not exceed the safe speed (250 mm/s).

8.3 Confirmation of connection

Before use, confirm the following items again.

Confirmation of connection


No.	Confirmation item	Check
1	Is the teaching pendant securely fixed?	
2	Is the exclusive communication cable properly connected between the controller and servo amplifier? (Refer to "Instruction Manual for Servo Amplifier".)	
3	Is the detector cable properly connected between the servo amplifier and motor? (Refer to "Instruction Manual for Servo Amplifier".)	
4	Is the servomotor power cable properly connected between the servo amplifier and motor? (Refer to "Instruction Manual for Servo Amplifier".)	
5	Is the ground wire properly connected between the servo amplifier and motor? (Refer to "Instruction Manual for Servo Amplifier".)	
6	Is the ground cable from the servo amplifier properly grounded? (Refer to "Instruction Manual for Servo Amplifier".)	
7	Is the brake unit properly connected? (Refer to "Instruction Manual for Servo Amplifier".) (When it is used,)	
8	Is the emergency stop circuit properly connected? (Refer to "Instruction Manual for Servo Amplifier".) (When it is used,)	
9	Are the parameters of the additional axis interface properly set? (Refer to "this manual/8.2Description of parameters".)	
10	Are the parameters of the servo amplifier properly set? (Refer to "Instruction Manual for Servo Amplifier".)	
11	Is the basic parameter PA03 ABS of the servo amplifier set to "0001"? (Refer to "Instruction Manual for Servo Amplifier".)	
12	Is the basic parameter PA14 POL of the servo amplifier set to "0"? (Refer to "Instruction Manual for Servo Amplifier".)	
13	Is the power supply of the controller turned OFF once after the parameters are set?	
14	Is the axis selection rotary switch (SW1) of the servo amplifier properly set?	

After the preparation is completed, turn OFF the power supply of the additional axis system.

8. User Mechanism Settings, Operation, and Commands

8.4 Try to use the mechanical additional axis.

This chapter describes the basic operation from the power turn-ON through operation to end using the user mechanism.

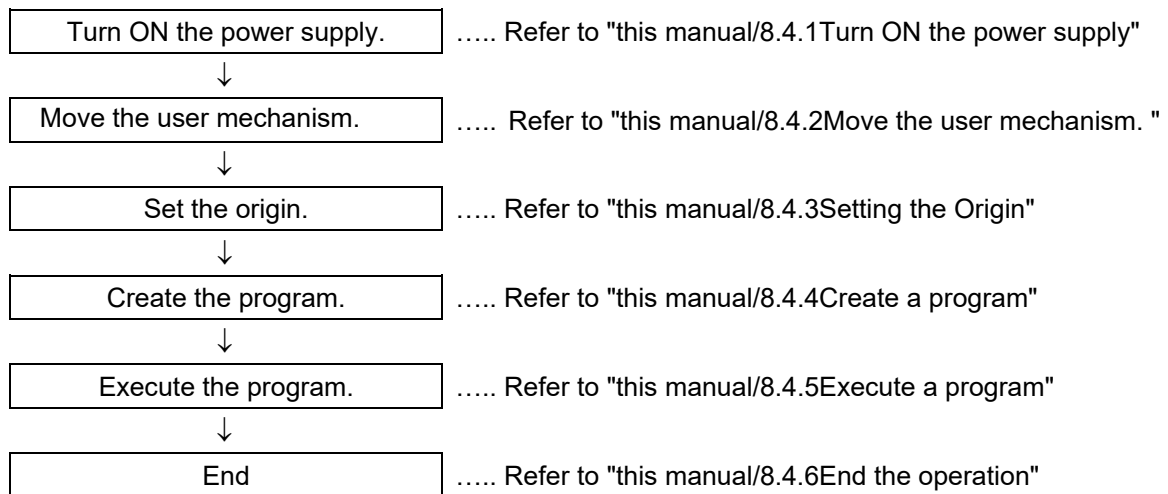

CAUTION

If any vibration occurs or any operation is not satisfied during operation of the additional axis, it is necessary to adjust (tune) the servo system. Referring to "Instruction Manual for Servo Amplifier and Servomotor", adjust it.

CAUTION

If any motor, absolute position detector, etc., is replaced or any parameter related to the mechanism or axis configuration is changed, be sure to confirm the current position before moving. If any origin position deviation, etc., is found, set the origin again. The above parameters are the multi mechanism applied quantity (AXUNUM), mechanism No. designation (AXMENO), setting axis No. (AXJNO), unit system (AXUNT), rotation direction (AXSPOL) and endoder resolution (AXENCR).

8.4.1 Turn ON the power supply

Confirm the safety around the robot and additional axis and turn ON the power supply.

- (1) Turn ON the power supply of the servo system.
- (2) Turn ON the power supply of the controller.

CAUTION




Turn ON the power supply of the peripheral device earlier than the robot controller. If the power supply of the robot controller is turned ON earlier than the peripheral device, the robot controller may sometimes not recognize the peripheral device.

8.4.2 Move the user mechanism.

Move the axis by jog the additional axis of the teaching pendant. The following describe such a case as the mechanical additional axis of the 3-axis XYZ coordinate mechanism (mechanism No. 2) is operated.

- (1) Turn the [T/B ENABLE] switch of the teaching pendant to "ENABLE".
- (2) Then, proceed with "this manual/Table 8.4.1 User mechanism, jog operation".

Table 8.4.1 User mechanism, jog operation

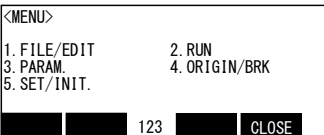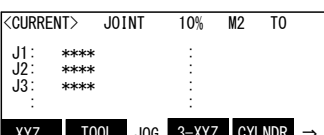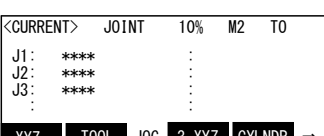N O	Teaching pendant screen display	Work details
1		Press [EXE] key to display screen 2.
2	 <p>Example: The robot's type is RV-7FR-D</p>	Press [2] key to select USER of the mechanism No.2.
3		Pressing the 3-position enable switch on the rear of the teaching pendant, press [SERVO] key and turn ON the servo. Keeping the 3-position enable switch pressed, proceed with the following operation. If the 3-position enable switch is released in the middle of processing, the servo will be turned OFF. In this case, restart this process from the beginning.
4		Press the key of [JOG], and the jog screen will be displayed . Use the key of [FUNCTION] (change of the jog mode menu), and press the key of [F1] to [F4], and select the "joint" jog mode.
5		<p>[+X(J1)] key : The axis 1 moves in the + direction. [-X(J1)] key : The axis 1 moves in the - direction. [+Y(J2)] key : The axis 2 moves in the + direction. [-Y(J2)] key : The axis 2 moves in the - direction. [+Z(J3)] key : The axis 3 moves in the + direction. [-Z(J3)] key : The axis 3 moves in the - direction.</p> <p>Release the axis designation key, and the user mechanism will stop.</p>
6		<p>[OVRD ↑] key increases the jog speed. [OVRD ↓] key decreases the jog speed.</p> <p>The percentage display of the speed is different depending on each model.</p>

Note 1) A mechanism which is not used is not displayed on the teaching pendant screen.

Note 2) An axis which is not used is not displayed on the teaching pendant screen.

Note 3) When the origin has been already set, the current position of the additional axis will be displayed in the "****" place.

8. User Mechanism Settings, Operation, and Commands







8.4.3 Setting the Origin

Set the origin via the origin operation of the teaching pendant.

The following explains how to set the origin of the three-axis user mechanism (mechanism number 2).

- (1) Set the [T/B ENABLE] switch of the teaching pendant to [ENABLE].
- (2) Determine the user origin position. Move the mechanism to the desired origin position by jog operation.
- (3) Mark the position used in (2) above, such as with a label or mark, so that it can be used for the alignment of all axes by jog operation later when it may be necessary to perform origin setting again.
- (4) Enter the origin position in the USERORG (User-Designated Origin) parameter, and turn off the power to the controller and then turn it on. For details on parameter settings, refer to "8.2 Description of parameters."
- (5) Then, operate as shown below

Table 8.4.2 User origin setting operation

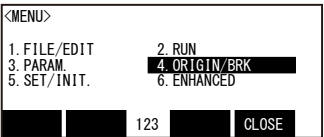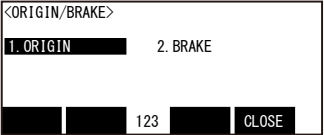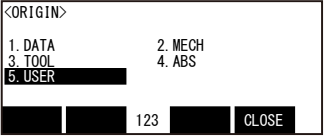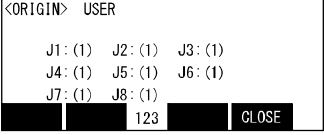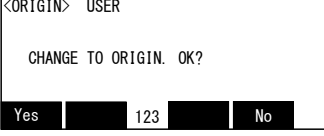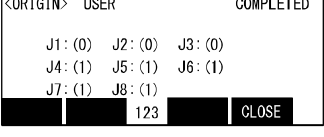N O	Teaching pendant screen display	Work details
1		Press [EXE] key to display screen 2.
2	 <p>Example: The robot's type is RV-7FR-D</p>	Press [2] key to select USER of the mechanism No.2.
3		Press the [4] key to select "4.ORIGIN/BRK".
4		Press the [1] key to select "1.ORIGIN".
5		Press the [5] key to select "5.USER".
6		Press the [↓] key, enter "1" in the axis to set the origin with axis specification, and press the [EXE] key.
7		Press the [F1] (Yes) key to perform origin setting.
8		This completes the setting of the origin with the user origin method.

8.4.4 Create a program

As an example, a program to operate the robot additional axis is created. For the methods of the program input and position data registration, refer to the programming in "Instruction Manual/ Detailed explanations of functions and operations". For the mechanical additional axis, it is necessary to designate the mechanism No. (GETM command). The following shows such a case as the mechanism No. 2 is designated.

```
1 GetM 2
2 Mov P1
3 Dly 1.0
4 Mov P2
5 Dly 1.0
6 End
```

**CAUTION**

Don't use the joint variable for the designation of the position. Use the position variable.

8.4.5 Execute a program

Try to execute a program created.

From the teaching pendant, confirm the operation in the step feed mode. (For the step feed method, refer to Step feed in the instruction manual of the robot controller.) If any problem does not occur, execute the program in the OPERATION screen of the teaching pendant.

- (1) Press the [T/B ENABLE] switch of the teaching pendant to disable the teaching pendant.
- (2) Select "OPERATION" in the "RUN" screen of the teaching pendant to display the OPERATION screen.
- (3) Press the function key [F4] to which "CHOOSE" in the OPERATION screen has been assigned to display the Select robot program screen.
- (4) Enter the name of the program to be executed and press the [EXE] key.
- (5) When the servo is OFF, press the function key [F1] to which "SVO ON" in the "OPERATION" screen has been assigned to turn ON the servo.
- (6) Press the function key [F1] to which "START" in the OPERATION screen has been assigned to execute the program.

For details of the operation procedure, refer to Starting automatic operation in "INSTRUCTION MANUAL/Detailed explanations of functions and operations".

8.4.6 End the operation

Confirm that the program is interrupted or stopped, proceed with the following operation and turn OFF the power supply of the additional axis system.

- (1) Turn the [T/B ENABLE] switch of the teaching pendant to "DISABLE".
- (2) Select "OPERATION" in the "RUN" screen of the teaching pendant to display the OPERATION screen.
- (3) Press the function key [F2] to which "SVO OFF" in the OPERATION screen has been assigned to turn OFF the robot and the servo of the additional axis.
- (4) Turn OFF the power supply of the controller.
- (5) Turn OFF the power supply of the servo system.

Though an alarm occurs on the servo system side during operation of (4) to (5), continue the operation and shut down the power supply of the servo system, and any problem will not occur.

8. User Mechanism Settings, Operation, and Commands

8.5 Operation of the User Mechanism

This section describes the procedures for operating the additional axis interface for each of the operating functions.

When the additional axis is operated first time after assembling a system, perform origin setting.



CAUTION

If any vibration occurs or any operation is not satisfied during operation of the additional axis, it is necessary to adjust (tune) the servo system. Referring to "Instruction Manual for Servo Amplifier and Servomotor", adjust it.

8.5.1 Brake release

The brake of the robot additional axis can not be released from the robot controller. To release the brake, refer to "Instruction Manual for Servo System".

8.5.2 Origin setting

[Function]

Perform origin setting of the user mechanism.

[Method]

The origin setting of the mechanical additional axis is the same as the origin is set in the standard system. As for the origin setting method, however, use the user origin setting method. For more details, refer to "8.4.3 Setting the Origin."

8.5.3 Servo ON/OFF

[Function]

Turn ON and OFF the servo of the user mechanism.

The servo of the user mechanism is linked with the servo power supply of the robot arm.

The operating method is the same as that of the standard system. For details of the actual servo ON method, refer to the Turning the servo ON/OFF of "Instruction Manual/ Detailed explanations of functions and operations".

8.5.4 Jog operation

[Function]

Move the user mechanism.

The screen and content displayed for this operation are as follows. Here, the unit of the additional axis displayed is set with the parameter (AXUNT) (Angle: degree or Length: mm). For the parameter setting method, refer to "this manual/8.2 Description of parameters".

<CURRENT>	ADD_AX	100%	M2	T00	B*
J1:	0.00	:			
J2:	0.00	:			
J3:	0.00	:			
:		:			
JOINT	XYZ	JOG	TOOL	3-XYZ	⇒

→ Display of the current jog mode and mechanism No.

→ Display of the current position

[Method]

The additional axis is operated by the jog operation of the teaching pendant. For details, refer to "this manual/8.4.2 Move the user mechanism. ".

[Explanation]

- (1) The operating speed can be switched by pressing [OVRD(upper arrow)] (jog speed UP) or [OVRD(lower arrow)] (jog speed DOWN). For details, refer to the jog feed in "Instruction Manual/ Detailed explanations of functions and operations".
- (2) If any operation range or speed limit may be exceeded, the robot will stop with an error.
- (3) Before the origin is set, "****" is displayed at the current position data of the additional axis of the teaching pendant.
- (4) In case of the user mechanism, it becomes the same operation regardless of the jog mode (joint, XYZ, tool, cylinder, 3-axis XYZ, or work).

8.5.5 Operation of position variable

The position variable (position No.) can be operated using the teaching pendant like the standard system.

[Function]

The current position is registered at the position variable (position No.).

[Method]

Press [F2](teach) key, and [F1] (YES) key of confirmation screen.

For details, refer to "Instruction Manual/ Detailed explanations of functions and operations".

8.5.6 Operation

The operation is started like the standard system. For details of the actual operation starting method, etc., refer to separate "Instruction Manual/ Detailed explanations of functions and operations".



If any program execution is interrupted and the additional axis is moved with the jog or servo OFF, it will return to the interrupted position for motion when the program is restarted.

8.5.7 Stop

- Stop

The program in running is stopped, and the robot arm and robot additional axis in moving is decelerated and stopped. In this stopping mode, the servo is kept ON and the brake is not activated. The stop is operated like the standard system. For details of the actual stop method, refer to the stop in "Instruction Manual/ Detailed explanations of functions and operations".

8. User Mechanism Settings, Operation, and Commands

- Emergency stop

The servo is turned OFF, the brake is activated and the robot arm and robot additional axis are immediately stopped. This is called the emergency stop.

Emergency stop can be performed using the following methods.

- (1) Press [EMG.STOP] key of the teaching pendant.
- (2) Emergency stop with the external emergency stop terminal on the rear of the robot controller.
- (3) Emergency stop with the emergency stop circuit attached to the servo system.
- (4) Emergency stop with the emergency stop switch on the operation panel of the CR860 controller.

Among them, Items (1) and (2) are carried out like the standard system. For details of the actual emergency stop method, etc., refer to the connecting the external emergency stop in "Instruction Manual/ Controller setup, basic operation, and maintenance".

For the using method and others of Item (3), refer to "Instruction Manual for Servo System" purchased.



Since "Emergency Stop" immediately stops the system, the mechanisms and works may vibrate. Instead, if the situation allows, use "Stop" that employs deceleration stop.

8.5.8 Error resetting

The error resetting is carried out like the standard system. For details of the actual error resetting method, refer to the error reset operation in "Instruction Manual/ Detailed explanations of functions and operations".

8.6 Explanation of commands

The language specifications added and changed are herein described to install the additional axis interface. The applied commands are the same as those of the standard system. However, there are some added points about the describing method of the position variables.



CAUTION Note that there are some commands that cannot be used in the user mechanism as shown in "8.6.2 Commands".

8.6.1 Position variables



CAUTION Do not use joint variables to specify the position. Use position variables (including status variables).

(1) The following is described to designate the position of the mechanical additional axis.

[Example]

10 P1=(100, 0, 0, 0, 0, 0)(0, 0)

If the mechanical additional axis is a configuration of 1 axis, the following is described to substitute the value into the position variable P1 at the program step No. 10.

10 P1 = (100,) (0, 0)

"," is necessary after 100.

If the mechanical additional axis is a configuration of 2 axes, the following is described to substitute the value into the position variable P1 at the program step No. 10.

10 P1 = (100, 200) (0, 0)

User mechanism
(1st axis)
User mechanism
(2nd axis)

"," can be omitted after 200.

(2) Describe as shown below when specifying the element data of each axis.

1 axisX, 2 axisY, 3 axisZ, 4 axisA, 5 axisB, 6 axisC

[Example]

To change to 50 the Z (J3 axis) value of position variable P3 with program line number 20, describe as shown below

20 P3.Z=50

To specify element data, describe both the rotary axis and linear drive axis as shown above.

(3) The result of the calculation related to the position variable of the additional axis is as follows.

Position variable + (–) Position variable	The element data of the additional axis is also calculated as it is.
Position variable × Position variable	The element data of the additional axis is processed in the addition.
Position variable ÷ Position variable	The element data of the additional axis is processed in the subtraction.
Value variable × (÷) Position variable	The element data of the additional axis is processed as it is.

(4) The element data of the additional axis of the grid point position of the pallet is calculated like the robot.

8. User Mechanism Settings, Operation, and Commands

8.6.2 Commands

The user mechanism offers instructions, built-in functions and status variables of which operation cannot be guaranteed, as listed below.

In addition, joint variables cannot be used to specify the position. Instead, use the position variable (including status variables).

- Torq command
- Optimum acceleration/deceleration related (Oadl/LoadSet)
- High accuracy mode related (Prec)
- Compliance related (Cmp/CmpG/M_CmpDst)
- Structure flag, multi-rotation information related (RDFL1/RDFL2/SETFL1/SETFL2)
- Align function
- Fine command ^{Note)}
- Spd command
- Mvs command
- Circular interpolation instruction related (Mvr/Mvr2/Mvr3/Mvc)
- DISTfunction, ZONE2 function
- M_RDst (remaining distance), M_Ratio (arrival ratio), M_Spd/M_NSpd/M_RSpd (XYZ speed related) status variables
- Fram function
- Joint variables (including status variables of joint variable type)
- Impact detection function (ColChk/ColLvl)
- Singular point passage function (Type 0, 2)
- Spline interpolation command (MvSpl)
- Ex-T spline interpolation command (EMvSpl)
- Force function related commands (Fsc, FsGChg, FsCTrg, etc.)

Note) The Fine instruction can set whether the function is enabled/disabled, but cannot set the number of pulses. If you are using the Fine instruction, set the number of pulses using the servo amplifier's INP parameter. For more details, refer to separate "Instruction Manual/ Detailed explanations of functions and operations" and the Servo Amplifier Instruction Manual.

8. User Mechanism Settings, Operation, and Commands

The following shows a list of status variables, built-in functions and instruction languages that can be used without any problems

(1) Robot status variables that operate without any problem in the user mechanism

Variable name	Array designation Note1)	Details	Attribute Note2)	Data type, Unit
P_Curr	Mechanism No.(1 to 3)	Current position (XYZ)	R	Position type
P_Fbc	Mechanism No.(1 to 3)	XYZ position generated based on the feedback value from the servo	R	Position type
P_Tool	Mechanism No.(1 to 3)	Currently designated tool conversion data	R	Position type
P_Base	Mechanism No.(1 to 3)	Currently designated base conversion data	R	Position type
P_NTool	Mechanism No.(1 to 3)	System default value (tool conversion data)	R	Position type
P_NBase	Mechanism No.(1 to 3)	System default value (base conversion data)	R	Position type
M_OPovrd	None	Current speed override on the operation panel (0 to 100%)	R	Integer type, %
M_Ovrd	Slot No.(1to 32)	Current override in designated program (0 to 100%)	R	Integer type, %
M_JOvrd	Slot No.(1to 32)	Current joint override (0 to 100%)	R	Integer type, %
M_NOvrd	Slot No.(1to 32)	System default value (default value of M_Ovrd) (%)	R	Single-precision real number type, %
M_NJovrd	Slot No.(1to 32)	System default value (default value of M_JOvrd) (%)	R	Single-precision real number type, %
M_SkipCq	Slot No.(1to 32)	A value of 1 is input if execution of an instruction is skipped as a result of executing the line that includes the last executed Skip command, otherwise a value of 0 is input.	R	Integer type
M_Acl	Slot No.(1to 32)	Current specified acceleration rate (%)	R	Single-precision real number type, %
M_DAcI	Slot No.(1to 32)	Current specified deceleration rate (%)	R	Single-precision real number type, %
M_NAcI	Slot No.(1to 32)	System default value (default value of M_Acl) (%)	R	Single-precision real number type, %
M_NDAcl	Slot No.(1to 32)	System default value (default value of M_DAcI) (%)	R	Single-precision real number type, %
M_AclSts	Slot No.(1to 32)	Current acceleration/deceleration status 0 = Stopped, 1 = Accelerating, 2 = Constant speed, 3=Decelerating	R	Integer type
M_Run	Slot No.(1to 32)	Operation status (1: Operating, 0: Not operating)	R	Integer type
M_Wai	Slot No.(1to 32)	Pause status (1: Pausing, 0: Not pausing)	R	Integer type
M_Psa	Slot No.(1to 32)	Specifies whether or not the program selection is possible in the specified task slot. (1: Selection possible, 0: Selection not possible, in pause status)	R	Integer type
M_Cys	Slot No.(1to 32)	Cycle operation status (1: Cycle operation, 0: Non-cycle operation)	R	Integer type
M_Cstp	None	Cycle stop operation status (1: Cycle stop, 0: Not cycle stop)	R	Integer type
C_Prg	Slot No.(1to 32)	Execution program name	R	Character string type
M_Line	Slot No.(1to 32)	Currently executed line No.	R	Integer type
M_Err	None	Error occurring (1: An error has occurred, 0: No errors have occurred)	R	Integer type
M_ErrLvl	None	Reads an error level. caution/low/high1/high2 = 1/2/3/4	R	Integer type
M_Errno	None	Reads an error number.	R	Integer type

8. User Mechanism Settings, Operation, and Commands

Variable name	Array designation Note1)	Details	Attribute Note2)	Data type, Unit
M_Svo	Mechanism No.(1 to 3)	Servo motor power on (1: Servo power on, 0: Servo power off)	R	Integer type
M_Uar	Mechanism No.(1 to 3)	Bit data. (1: Within user specified area, 0: Outside user specified area) (Bit 0: area 1 to Bit 7: area 8)	R	Integer type
M_In	Input No.(0 to 32767)	Use this variable when inputting external input signals (bit units). General-purpose bit device: bit signal input 0=off 1=on The signal numbers will be 6000s for CC-Link	R	Integer type
M_Inb	Input No.(0 to 32767)	Use this variable when inputting external input signals (8-bit units) General-purpose bit device: byte signal input The signal numbers will be 6000s for CC-Link	R	Integer type
M_Inw	Input No.(0 to 32767)	Use this variable when inputting external input signals (16-bit units) General-purpose bit device: word signal input The signal numbers will be 6000s for CC-Link	R	Integer type
M_Out	Output No.(0 to 32767)	Use this variable when inputting external output signals (bit units). General-purpose bit device: bit signal input 0=off 1=on The signal numbers will be 6000s for CC-Link	RW	Integer type
M_Outb	Output No.(0 to 32767)	Use this variable when inputting external output signals (8-bit units) General-purpose bit device: byte signal input The signal numbers will be 6000s for CC-Link	RW	Integer type
M_Outw	Output No.(0 to 32767)	Use this variable when inputting external output signals (16-bit units) General-purpose bit device: word signal input The signal numbers will be 6000s for CC-Link	RW	Integer type
M_DIn	Input No.(from 6000)	CC-Link's remote register: Input register	R	Integer type
M_DOut	Output No.(from 6000)	CC-Link's remote register: output register	RW	Integer type
M_HndCq	Input No.(1 to 8)	Returns a hand check input signal.	R	Integer type
P_Safe	Mechanism No.(1 to 3)	Returns a safe point position.	R	Position type
C_Mecha	Slot No.(1 to 32)	Returns the type name of the robot.	R	Character string type
C_Maker	None	Shows manufacturer information (a string of up to 64 characters).	R	Character string type
C_User	None	Returns the content of the parameter "US-ERMSG."(a string of up to 64 characters).	R	Character string type
C_Date	None	Current date expressed as "year/month/date".	R	Character string type
C_Time	None	Current time expressed as "time/minute/second".	R	Character string type
M_BTime	None	Returns the remaining battery capacity time (hours).	R	Integer type, Time
M_Timer	Timer No. (1 to 8)	Constantly counting. Value can be set. [ms] It is possible to measure the precise execution time by using this variable in a program.	RW	Single-precision real number type
P_Zero	None	A variable whose position coordinate values (X, Y, Z, A, B, C, FL1, FL2) are all 0	R	Position type
M_Pi	None	Circumference rate (3.1415...)	R	Double-precision real number type

8. User Mechanism Settings, Operation, and Commands

Variable name	Array designation Note1)	Details	Attribute Note2)	Data type, Unit
M_Exp	None	Base of natural logarithm (2.71828...)	R	Double-precision real number type
M_G	None	Specific gravity constant (9.80665)	R	Double-precision real number type
M_On	None	1 is always set	R	Integer type
M_Off	None	0 is always set	R	Integer type

Note1) Mechanism No.1 to 3, Specifies a mechanism number corresponding to the multitask processing function.

Slot No.1 to 32, Specifies a slot number corresponding to the multitask function.

Input No.0 to 32767: (theoretical values). Specifies a bit number of an input signal.

Output No.0 to 32767: (theoretical values). Specifies a bit number of an output signal.

Note2) ROnly reading is possible.

RWBoth reading and writing are possible.

8. User Mechanism Settings, Operation, and Commands

(2) Built-in functions that operate without any problem in the user mechanism

Class	Function name (format)	Functions	Result
Numeric functions	Abs (<Numeric expression>)	Produces the absolute value	Numeric value
	CInt (<Numeric expression>)	Rounds off the decimal value and converts into an integer.	
	Deg (<Numeric expression:radian>)	Converts the angle unit from radian (rad) to degree (deg).	
	Exp (<Numeric expression>)	Calculates the value of the expression's exponential function	
	Fix (<Numeric expression>)	Produces an integer section	
	Int (<Numeric expression>)	Produces the largest integer that does not exceed the value in the expression.	
	Len(<Character string expression>)	Produces the length of the character string.	
	Ln (<Numeric expression>)	Produces the logarithm.	
	Log (<Numeric expression>)	Produces the common logarithm.	
	Max (<Numeric expression>...)	Obtains the maximum value from a random number of arguments.	
	Min (<Numeric expression>...)	Obtains the minimum value from a random number of arguments.	
	Rad (<Numeric expression: deg.>)	Converts the angle unit from radian (rad) to degree (deg).	
	Sgn (<Numeric expression>)	Checks the sign of the number in the expression	
	Sqr (<Numeric expression>)	Calculates the square root	
	Strpos (<Character string expression>, <Character string expression>)	Obtains the 2nd argument character string position in the 1st argument character string.	
	Rnd (<Numeric expression>)	Produces the random numbers.	
	Asc(<Character string expression>)	Provides a character code for the first character of the character string in the expression.	
	Cvi(<Character string expression>)	Converts a 2-byte character string into integers.	
	Cvs(<Character string expression>)	Converts a 4-byte character string into a single-precision real number.	
	Cvd(<Character string expression>)	Converts an 8-byte character string into a double-precision real number.	
	Val(<Character string expression>)	Converts a character string into a numeric value.	
Trigonometric functions	Atn(<Numeric expression>)	Calculates the arc tangent. Unit: radian Definition range: Numeric value, Value range: $-\pi/2$ to $+\pi/2$	Numeric value
	Atn2(<Numeric expression>, <Numeric expression>)	Calculates the arc tangent. Unit: radian $\theta = \text{Atn2}(\angle y, \angle x)$ Definition range: Numeric value of $\angle y$ or $\angle x$ that is not 0 Value range: $-\pi$ to $+\pi$	
	Cos(<Numeric expression>)	Calculates the cosine Unit: radian Definition range: Numeric value range, Value range: -1 to +1	
	Sin(<Numeric expression>)	Calculates the sine Unit: radian Definition range: Numeric value range, Value range: -1 to +1	
	Tan(<Numeric expression>)	Calculates the tangent. Unit: radian Definition range: Numeric value range, Value range: Range of numeric value	Numeric value

8. User Mechanism Settings, Operation, and Commands

Class	Function name (format)	Functions	Result
Character string functions	Bin\$(<Numeric expression>)	Converts numeric expression value into binary character string.	Character string
	Chr\$(<Numeric expression>)	Provides character having numeric expression value character code.	
	Hex\$(<Numeric expression>)	Converts numeric expression value into hexadecimal character string.	
	Left\$(<Character string expression>, <Numeric expression>)	Obtains character string having length designated with 2nd argument from left side of 1st argument character string.	
	Mid\$(<Character string expression>, <Numeric expression>, <Numeric expression>)	Obtains character string having length designated with 3rd argument from the position designated with the 2nd argument in the 1st argument character string.	
	Mirror\$(<Character string expression>)	Mirror reversal of the character string binary bit is carried out.	
	MKi\$(<Numeric expression>)	Converts numeric expression value into 2-byte character string.	
	MKs\$(<Numeric expression>)	Converts numeric expression value into 4-byte character string.	
	MKd\$(<Numeric expression>)	Converts numeric expression value into 8-byte character string.	
	Right\$(<Character string expression>, <Numeric expression>)	Obtains character string having length designated with 2nd argument from right side of 1st argument character string.	
	Str\$(<Numeric expression>)	Converts the numeric expression value into a decimal character string.	
	CkSum(<Character string expression>, <Numeric expression>, <Numeric expression>)	Creates the checksum of a character string. Returns the value of the lower byte obtained by adding the character value of the second argument position to that of the third argument position, in the first argument character string.	Numeric value
Position variables	Inv(<Position>)	Obtains the reverse line.	Position
	PtoJ(<Position>)	Converts the position data into joint data.	Joint
	JtoP(<Position>)	Converts the joint data into position data.	Position
	Zone(<Position 1>, <Position 2>, <Position 3>)	Checks whether position 1 is within the space (Cube) created by the position 2 and position 3 points. Outside the range=0, Within the range=1 For position coordinates that are not checked or non-existent, the following values should be assigned to the corresponding position coordinates: If the unit is degrees, assign -360 to position 2 and 360 to position 3 If the unit is mm, assign -10000 to position 2 and 10000 to position 3	Numeric value

(3) Instructions related to movement control that operate without any problem in the user mechanism

Command	Explanation
Mov(Move)	Joint interpolation
Mva(Move Arch)	Arch motion interpolation
Ovrd(Override)	Overall speed specification
JOvrd(J Override)	Speed specification during joint interpolation movement
Cnt (Continuous)	Continuous path mode specification
Accel (Accelerate)	Acceleration/deceleration rate specification
Jrc(Joint Roll Change)	Enables multiple rotation of the tip axis

8. User Mechanism Settings, Operation, and Commands

Command	Explanation
Fine(Fine)	Robot's positioning range specification
Servo(Servo)	Servo motor power ON/OFF
Wth(With)	Addition instruction of movement instruction
WthIf(With If)	Additional conditional instruction of movement instruction

(4) Instructions related to program control that operate without any problem in the user mechanism

Command	Explanation
If...Then...Else...EndIf(If Then Else)	Conditional branching
Select Case	Enables multiple branching
GoTo(Go To)	Jump
GoSub (RETURN) (Go Subroutine)	Subroutine jump
Reset Err(Reset Error)	Resets an error (use of default is not allowed)
CallP(Call P)	Program call
FPrm(FPRM)	Program call argument definition
Dly(Delay)	Timer
Hlt(Halt)	Suspends a program
End(End)	End a program
On...GoSub(ON Go Subroutine)	Subroutine jump according to the value
On...GoTo(On Go To)	Jump according to the value
For - Next (For-next)	Repeat
While-Wend(While End)	Conditional repeat
Open(Open)	Opens a file or communication line
Print(Print)	Outputs data
Input(Input)	Inputs data
Close(Close)	Closes a file or communication line
Com On/Com Off/Com Stop (Communication ON/OFF/STOP)	Enables, disables or pauses communication interrupt
On Com GuSub (ON Communication Go Subroutine)	Communication interrupt subroutine jump
HOpen / HClose(Hand Open/Hand Close)	Hand's open/close
Error(error)	User error
Skip(Skip)	Skip while moving
Wait(Wait)	Waiting for conditions
Clr(Clear)	Signal clear

(5) Definition instructions that operate without any problem in the user mechanism

Command	Explanation
Dim(Dim)	Array variable declaration
Def Plt(Define pallet)	Pallet declaration
Plt(Pallet)	Pallet position calculation
Def Act(Define act)	Interrupt definition
Act(Act)	Starts or ends interrupt monitoring
Def Jnt(Define Joint)	Joint type position variable definition
Def Pos(Define Position)	XYZ type position variable definition
Def Inte/Def Float/Def Double (Define Integer/Float/Double)	Integer or real number variable definition
Def Char(Define Character)	Character variable definition

8. User Mechanism Settings, Operation, and Commands

Command	Explanation
Def IO(Define IO)	Signal variable definition
Def FN(Define function)	User function definition
Tool(Tool)	Hand length setting
Base(Base)	Robot base position setting

(6) Multi-tasks that operate without any problem in the user mechanism

Command	Explanation
XLoad(X Load)	Loads a program to another task slot
XRun (X Run)	Execute the program in another task slot
XStp(X Stop)	Stop the program in another task slot
XRst(X Reset)	Resets the program in another task slot being suspended
XClr(X Clear)	Cancels the loading of the program from the specified task slot
GetM (Get Mechanism)	Obtains mechanical control right
RelM (Release Mechanism)	Releases mechanical control right
Priority(Priority)	Changes the task slot priority
Reset Err(Reset Error)	Resets an error (use of default is not allowed)

8.6.3 Limitation when using user mechanism

When using the addition axis as a user mechanism, the robot arm has the following limitation.

- The collision detection function and the interference avoidance function cannot be used.
- The control cycle of the robot controller becomes twice as long as that of the standard robot.

And also, the user mechanism does not correspond to the collision detection function and the interference avoidance function.

8. User Mechanism Settings, Operation, and Commands


8.7 Example of System Configuration of the User Mechanism

This section shows an example of system configuration using the additional axis interface.

8.7.1 Rotation table system

- System Overview

This example shows a system using a standard robot and a rotary table in which the rotary table functions as a multi-mechanism (controlled asynchronously with the robot arm).

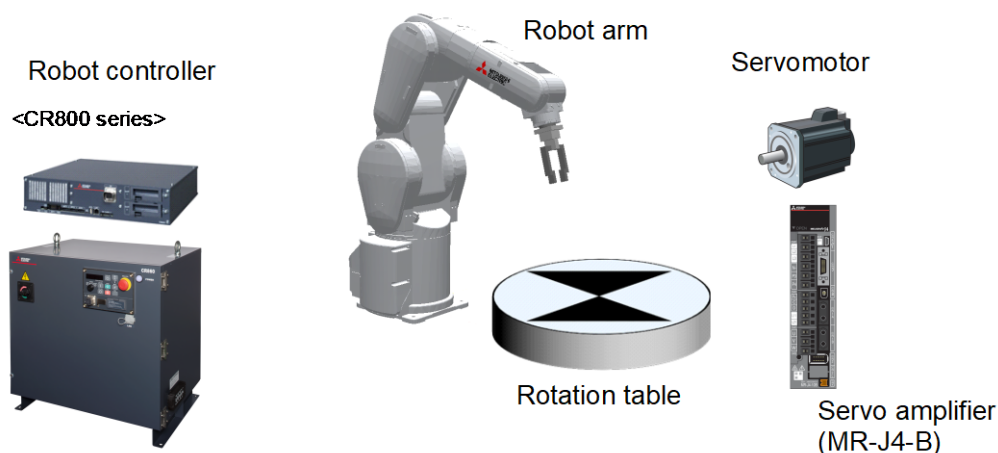

Note) The fig of the robot arm is the vertical multi-joint type 6 axis robot's example.

Fig. 8.7.1 Rotation table system

Table 8.7.1 Structural equipment

Robot arm	Vertical 6-axis robot
Robot controller	CR800 series controller
Servo amplifier	Prepared by the customer.
Servo motor	Prepared by the customer.
Rotation table	Manufactured and prepared by customer.

Table 8.7.2 Rotation axis specification

Control axis number of servo	1st
Number of mechanisms and number of axis	1 mechanism and 1 axis
Unit of additional axis	degree (rotation axis)
Rotation direction of additional axis	Forward run (CCW)
Acceleration/deceleration of the additional axis	0.4 seconds per each
Total speed ratio of additional axis	1/20 (1/20 rotation of additional axis per rotation of motor)
Rated speed	3000 (rpm)
Maximum speed	4000 (rpm)
Encoder resolution	4194304 (pulse/rev)
Operating range	-160 to +160 (degree)
Origin designated by user	90 (degree)

- Connecting devices

Devices are connected as follows.

- (1) Connect servo amplifier (CN1A connector) with the robot controller by the SSCNETIII cable. Connect the robot controller with the AXIS connector. (Refer to "5.1 Connection of Robot CPU and servo amplifier" in this manual.)
- (2) Set the axis selection rotary switch (SW1) of the servo amplifier to "0". (Refer to "6.1 Servo amplifier setting" in this manual.)
- (3) Connect the servo amplifier and the servo motor. (Refer to "5.4 Connection example of servo amplifier and servo motor.")

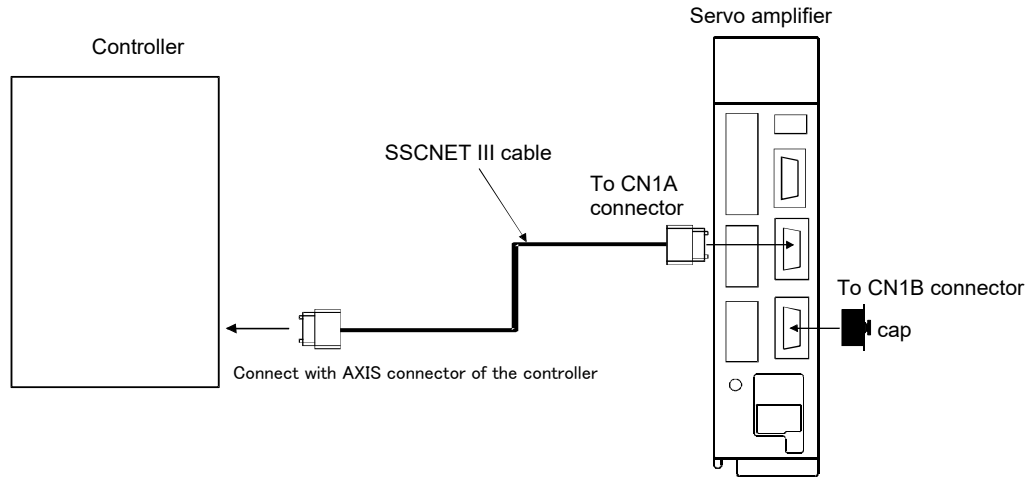


Fig. 8.7.2 Connection of controller and servo amplifier

⚠ CAUTION

Please install the connector cap to the connector for communication which does not connect the SSCNETIII cable. There is a possibility of malfunctioning if the cap is not installed. And, if the light from the connector for communication hits upon the eyes, there is a possibility of feeling the incompatibility for the eyes.

- Setting the servo amplifier parameters

Set the servo amplifier parameters by refer to "6.2 Parameter setting of servo amplifier."

8. User Mechanism Settings, Operation, and Commands

- Setting the robot controller parameters

Set the parameters related to the system configuration of the robot controller.

For details on how to set these parameters, refer to separate "Instruction Manual/ Detailed explanations of functions and operations".

Table 8.7.3 Setting the rotation table system parameters


Parameter name changed	Before/after change	Value of parameter
AXUNUM	Before	0
	After	<u>1</u>
AXMENO	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>2</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXJNO	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>1</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXUNT	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXSPOL	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXACC	Before	0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
	After	<u>0.40</u> , 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
AXDEC	Before	0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
	After	<u>0.40</u> , 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
AXGRTN	Before	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
	After	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
AXGRTD	Before	10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10
	After	<u>20</u> , 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10
AXMREV	Before	2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
	After	<u>3000</u> , 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
AXJMX	Before	3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
	After	<u>4000</u> , 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
AXENCR	Before	4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
	After	4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
MEJAR (Mechanism No.2)	Before	-80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00
	After	<u>-160.00</u> , <u>160.00</u> , -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00
USERORG (Mechanism No.2)	Before	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0
	After	<u>90.0</u> , 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0

8. User Mechanism Settings, Operation, and Commands

• Program example

(1) Details of work

In this system, a standard robot unloads a work from a rotary axis (position "<1>") and transports it to a station (position "<2>").

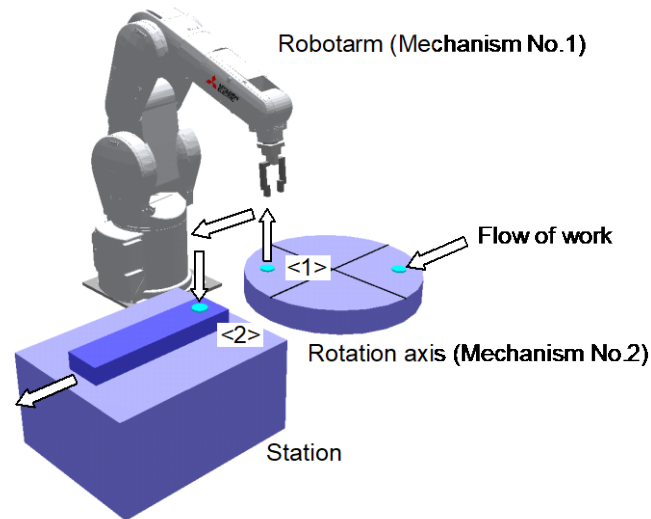

• Flow of work

- A work is transported to rotation axis from the external location.
- The rotary axis rotates and transports a work to the position from which the robot unloads the work.
- The robot unloads the work from the rotary axis and transports the work to the station.
- The work is transported from the station to the external location.

(2) Robot Program Structure

Provide one robot program for each mechanism, as shown below

Program name	Explanation
1	Operation program of standard robots
2	Operation program of rotation axis

8. User Mechanism Settings, Operation, and Commands

(3) Input/Output signal


The general I/O signals to be used are as follows

General purpose input/output name	Signal H/L	Explanation
General purpose input 10080	H (1)	Transport of works from the external location to rotation axis has been complete.
	L (0)	Work not transported from the external location to the rotary axis.

General purpose input/output name	Signal H/L	Explanation
General purpose output 10080	H (1)	Transport of works from the external location to rotation axis has been complete.
	L (0)	Work not transported from the external location to the rotary axis.

(4) Position variable

The position data is as follows

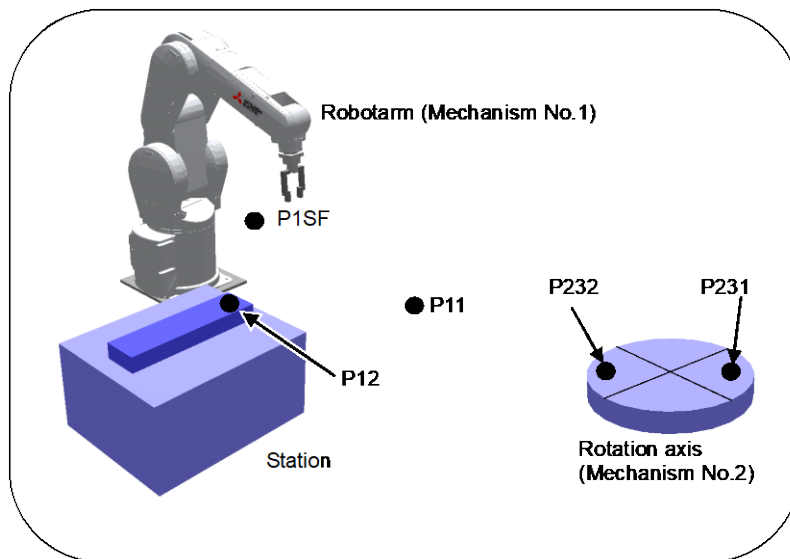

Mechanism name	Position variable name	Explanation
Robot arm (Mechanism No.1)	P1SF	Safe position
	P11	Position where works are unloaded from rotation axis (Mechanism No.2)
	P12	Position where works are loaded to station.
Rotation axis (Mechanism No.2)	P231	Position to which the work is to be transported
	P232	Position from which the standard robot (mechanism number 1) unloads the work


(5) Program External Variables

Program external variables are used as interlock variables between mechanisms.
The following variables are used.

Variable name	Variable (0/1)	Explanation
M_01	0	Preparation of work on rotary axis incomplete
	1	Preparation of work on rotary axis complete
M_02	0	Unloading of work by robot from rotary axis incomplete
	1	Unloading of work by robot from rotary axis complete

The following flow illustrates only the interlock between mechanisms:

Note that programs 1 and 2 in the diagram start simultaneously. (Refer to "Procedure 2: Setting the task slot parameter " in "(6) Procedure up to program execution.")

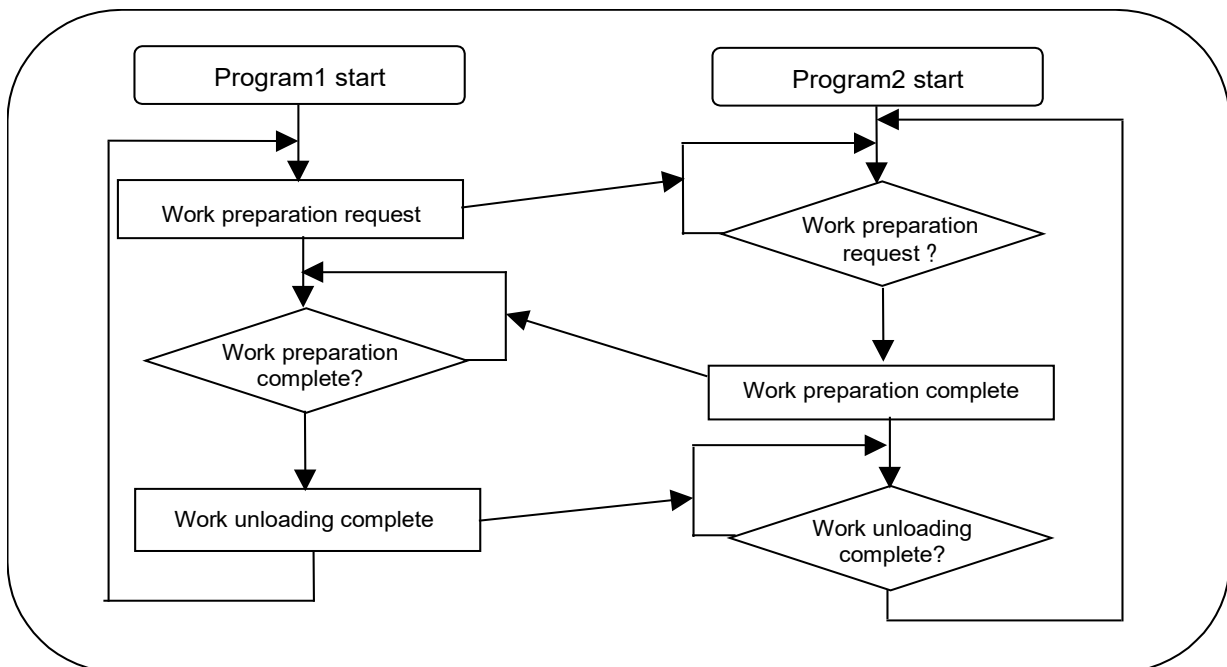

8. User Mechanism Settings, Operation, and Commands

(6) Procedure up to program execution

Procedure 1 : Program creation

<1>Program of mechanism number 1 (Program name:1)

100 GetM 1	' Gets mechanism 1
110 M_01#=0	' Interlock variable is initialized
120 *LOOP	
130 M_01#=1	' Requests for preparation of work on rotary axis
140 If M_01#=1 Then GoTo 140	' Waits for completion of preparation of work on rotary axis
150 Mov P11,-50	' Moves to 50 mm above P11
160 Mvs P11	' Moves to position from which work is unloaded from rotary axis
170 HClose 1	' Pickup work piece
180 Dly 0.5	' Waits for 0.5 sec
190 Mvs P11,-50	' Moves to 50 mm above P11
200 M_02#=1	' Unloading of work from rotary axis is complete.
210 Mov P12,-50	' Moves to 50 mm above P12
220 Mvs P12	' Moves work placement position of positioning device
230 HOpen 1	' Places work
240 Dly 0.5	' Waits for 0.5 sec
250 Mva P12,-50	' Moves to 50 mm above P12
260 GoTo *LOOP	

<2>Program of mechanism number 2 (Program name:2)

100 GetM 2	' Gets mechanism 2
110 M_Out(11)=0	' Prohibits work transport to external location
120 Mov P231	' Moves to work transport position
130 Dly 0.1	' Waits for completion (static) of operation (set values must be adjusted)
140 *LOOP	
150 If M_01#=0 Then GoTo 150	' Waits for request of preparation of work on rotary axis
160 M_Out(11)=1	' Permits work transport to external location
170 If M_In(11)=0 Then GoTo 170	' Waits for completion of work transport from external location
180 M_Out(11)=0	' Prohibits work transport to external location
190 Mov P232	' Rotates to position where robot unload the work
200 Dly 0.1	' Waits for completion (static) of operation (set values must be adjusted)
210 M_02#=0	' Rotary axis requests unloading of work
220 M_01#=0	' Preparation of work by rotary axis is complete.
230 If M_02#=0 Then GoTo 230	' Waits for completion of unloading of work from rotary axis
240 Mov P231	' Moves to work transport position
250 GoTo *LOOP	

Procedure 2 : Setting the task slot parameters

Set the slot parameters as follows.

Parameters	Program name	Operation mode	Operation format	Number of executed lines
SLT1	1	REP	START	1
SLT2	2	REP	START	1

8. User Mechanism Settings, Operation, and Commands

The slot parameters have the format shown below.

For details refer to "Instruction Manual/ Detailed explanations of functions and operations".

SLT* = 1. Program name, 2. Operation format, 3. Starting conditions, 4. Order of priority

Item of parameter	Default value	Setting value
1. Program name	-	Possible to set a registered program name
2. Operation format	REP	REP : Continuous Operation
		CYC : One cycle operation
3. Starting conditions	START	START : Execution of a program using the START button on the operation panel or the I/O START signal
		ALWAYS : Execution of a program when the controller's power is turned on
		ERROR : Execution of a program when the controller is in error status
4. Order of priority	1	1 to 31: Number of lines executed at one time at multitask operation

Procedure 3 : Reflecting the task slot parameters

Turn off the power to enable the SLT1 and SLT2 parameters, and then turn on the power again.

Procedure 4 : Starting


Run the program 1 in the OPERATION screen of the teaching pendant. When the program 1 is started, the program 2 starts its operation simultaneously.

8. User Mechanism Settings, Operation, and Commands

8.7.2 System with multiple axes

- System Overview

This example shows a system consisting of a standard robot, a vertical moving axis and a rotary axis in which the vertical moving axis and the rotary axis function as multi-mechanisms (controlled asynchronously with the robot arm).

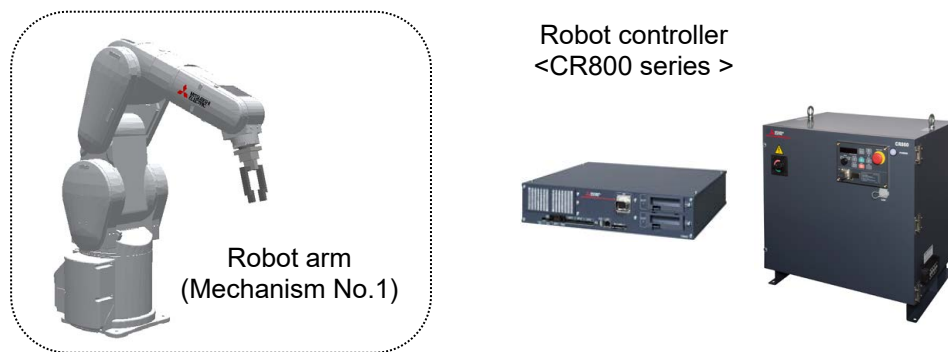

Note) The fig of the robot arm is the vertical articulated 6 axis robot's example.

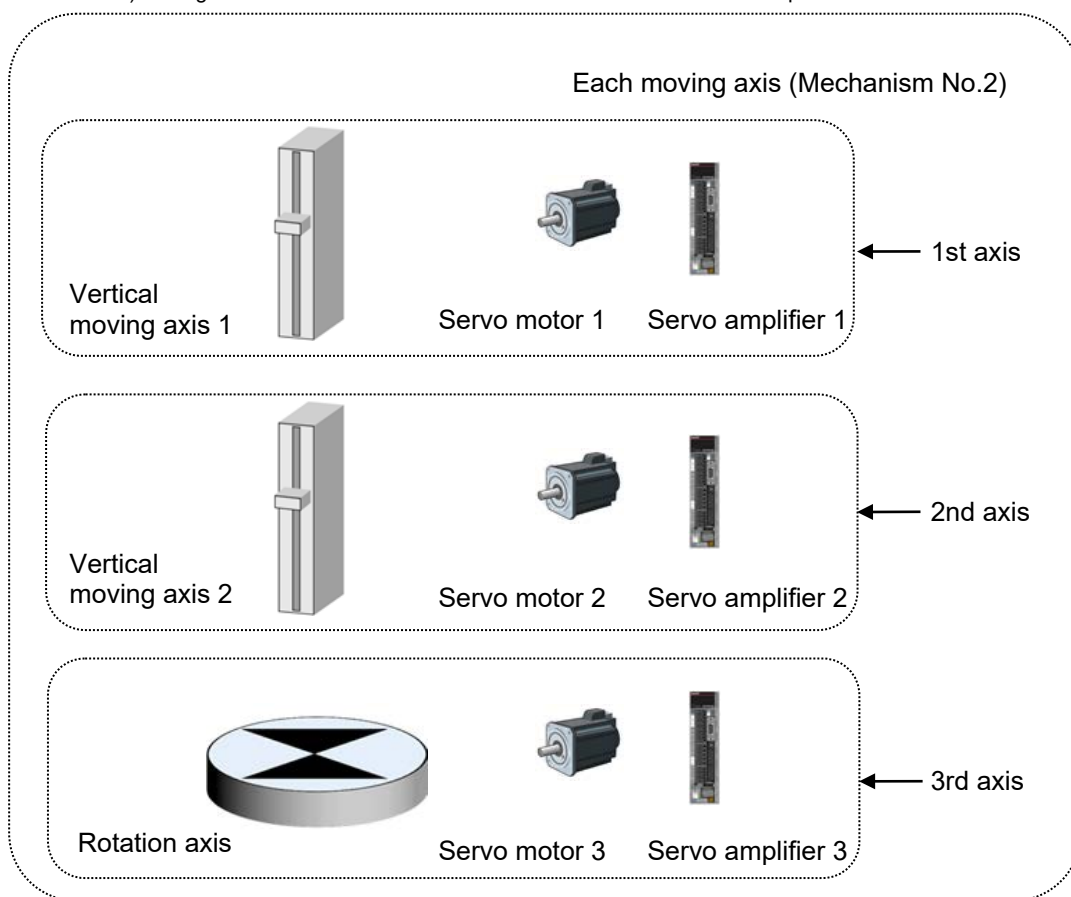


Fig. 8.7.4 System with multiple axes

8. User Mechanism Settings, Operation, and Commands

Table 8.7.3 Structural equipment

Robot arm	Vertical 6-axis robot
Robot controller	CR800 series controller
Servo amplifier	Prepared by the customer.
Servo motor	Prepared by the customer.
Vertical moving axis 1	Manufactured and prepared by customer.
Vertical moving axis 2	Manufactured and prepared by customer.
Rotation table	Manufactured and prepared by customer.

Table 8.7.4 Multiple axes specifications

Mechanism number	2		
Name of mechanism	Vertical moving axis 1	Vertical moving axis 2	Rotation axis
Axis number of mechanism	1 axis (J1)	2 axis (J2)	3 axis (J3)
Control axis number of servo	1st	2nd	3rd
Unit of additional axis	mm (Direct moving axis)	mm (Direct moving axis)	degree (rotation axis)
Rotation direction of additional axis	Forward run (CCW)		
Acceleration/deceleration of the additional axis	0.4 seconds per each		
Total speed ratio of additional axis	37/2	37/2	1/20 (1/20 rotation of additional axis per rotation of motor)
Rated speed	3000 (rpm)		
Maximum speed	4000 (rpm)		
Encoder resolution	4194304 (pulse/rev)		
Operating range	-2000 to +3000 (mm)	-2000 to +3000 (mm)	-160 to +160 (degree)
Origin designated by user	0 (mm)	0 (mm)	90 (degree)

8. User Mechanism Settings, Operation, and Commands

• Connecting devices

Devices are connected as follows.

- (1) Connect servo amplifier (CN1A connector) with the robot controller by the SSCNETIII cable. Connect the robot controller with the AXIS connector. (Refer to "5.1 Connection of Robot CPU and servo amplifier" in this manual.)
- (2) Set the axis selection rotary switch (SW1) of the servo amplifier to the following: 0 for the first axis, 1 for the second axis, and 2 for the third axis closest from the robot controller. (Refer to "6.1 Servo amplifier setting" in this manual.)
- (3) Connect the servo amplifier and the servo motor. (Refer to "5.4 Connection example of servo amplifier and servo motor.")

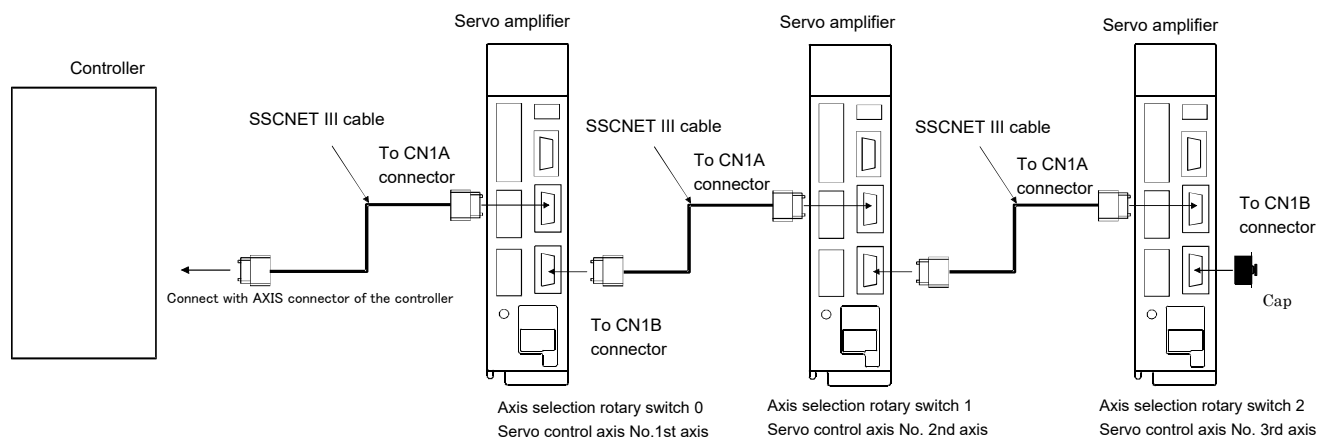


Fig. 8.7.5 Connection of controller and servo amplifier

⚠ CAUTION

Please install the connector cap to the connector for communication which does not connect the SSCNETIII cable.

There is a possibility of malfunctioning if the cap is not installed. And, if the light from the connector for communication hits upon the eyes, there is a possibility of feeling the incompatibility for the eyes.

• Setting the servo amplifier parameters

Set the servo amplifier parameters by refer to "6.2 Parameter setting of servo amplifier."

- Setting the robot controller parameters

Set the parameters of robot controller.

For details on how to set these parameters, refer to "Instruction Manual/ Detailed explanations of functions and operations".

Table 8.7.5 Setting the multiple axes system parameters


Parameter name changed	Before/after change	Value of parameter
AXUNUM	Before	0
	After	<u>1</u>
AXMENO	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>2</u> , <u>2</u> , <u>2</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXJNO	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>1</u> , <u>2</u> , <u>3</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXUNT	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	<u>1</u> , <u>1</u> , 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXSPOL	Before	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
	After	0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0
AXACC	Before	0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
	After	<u>0.40</u> , <u>0.40</u> , <u>0.40</u> , 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
AXDEC	Before	0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
	After	<u>0.40</u> , <u>0.40</u> , <u>0.40</u> , 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20, 0.20
AXGRTN	Before	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
	After	<u>37</u> , <u>37</u> , 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
AXGRTD	Before	10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10
	After	<u>2</u> , <u>2</u> , <u>20</u> , 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10, 10
AXMREV	Before	2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
	After	<u>3000</u> , <u>3000</u> , <u>3000</u> , 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000, 2000
AXJMX	Before	3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
	After	<u>4000</u> , <u>4000</u> , <u>4000</u> , 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000, 3000
AXENCR	Before	4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
	After	4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304, 4194304
MEJAR (Mechanism No.2)	Before	-80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00
	After	<u>-2000.00</u> , <u>3000.00</u> , <u>-2000.00</u> , <u>3000.00</u> , <u>-160.00</u> , <u>160.00</u> , -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00, 80000.00, -80000.00
USERORG (Mechanism No.2)	Before	0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0
	After	0.0, 0.0, <u>90.0</u> , 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0, 0.0

8. User Mechanism Settings, Operation, and Commands

• Program example

(1) Details of work

In this system, works are transported between the standard robot and the rotary axis by utilizing interlock. Each mechanism repeats the following operation.

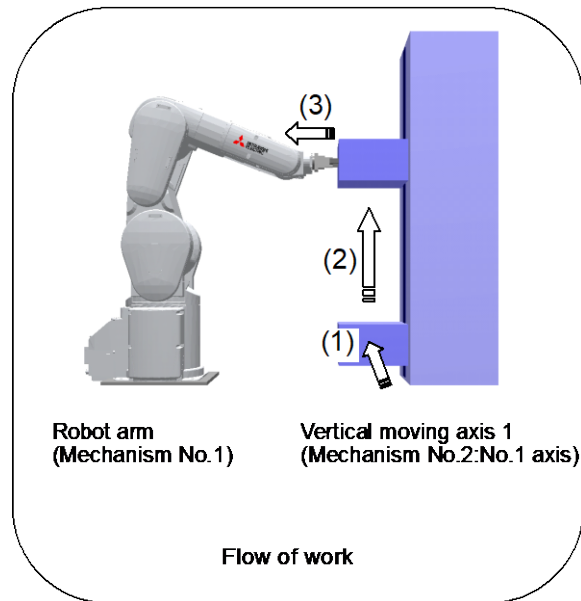

• Flow of work

- A work is transported to the vertical moving axis 1.
- The vertical moving axis 1 raises and transports the work to the position from which the standard robot unloads the work.
- The standard robot unloads the work from the vertical moving axis 1.

(2) Robot Program Structure

Provide one robot program for each mechanism, as shown below

Program name	Explanation
1	Operation program of standard robots
2	Operation program of mechanism No. 2.

(3) Input/Output signal


The general I/O signals to be used are as follows

General purpose in-put/output name	Signal H/L	Explanation
General purpose input 10081	H (1)	Transport of works from the external location to vartical moving axis 1 has been complete.
	L (0)	Work not transported from the external location to the vartical moving axis 1.

General purpose in-put/output name	Signal H/L	Explanation
General purpose output 10080	H (1)	Places workpiece
	L (0)	Pickup workpiece
General purpose output 10081	H (1)	Permits work transport to external location.
	L (0)	Prohibits work transport to external location.

(4) Position variable

The position data is as follows

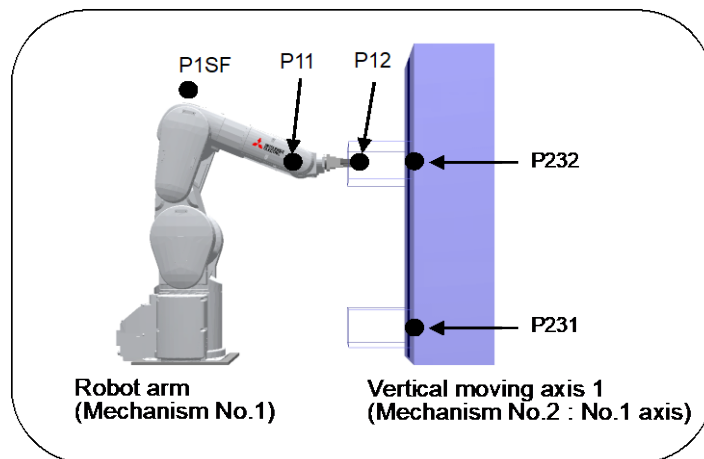

Mechanism name	Position variable name	Explanation
Robot arm (Mechanism No.1)	P1SF	Safe position
	P11	Front of the position where the standard robot unloads the work from the vertical moving axis 1 (mechanism number 2).
	P12	Position where works are unloaded from vartical moving axis 1 (Mechanism No.2)
Rotation axis (Mechanism No.2 : No.1 axis)	P231	Position to which the work is to be transported
	P232	Position from which the standard robot (mechanism number 1) unloads the work

8. User Mechanism Settings, Operation, and Commands


(5) Program External Variables

Program external variables are used as interlock variables between mechanisms.
The following variables are used.

Variable name	Variable (0/1)	Explanation
M_01	0	Preparation of work on vertical moving axis 1 complete
	1	Preparation of work on vertical moving axis 1 incomplete
M_02	0	Unloading of work by standard robot from vertical moving axis 1 incomplete
	1	Unloading of work by standard robot from vertical moving axis 1 complete

The following flow illustrates only the interlock between mechanisms:

Note that programs 1 and 2 in the diagram start simultaneously. (Refer to " Procedure 2: Setting the task slot parameter " in "(6) Procedure up to program execution".)

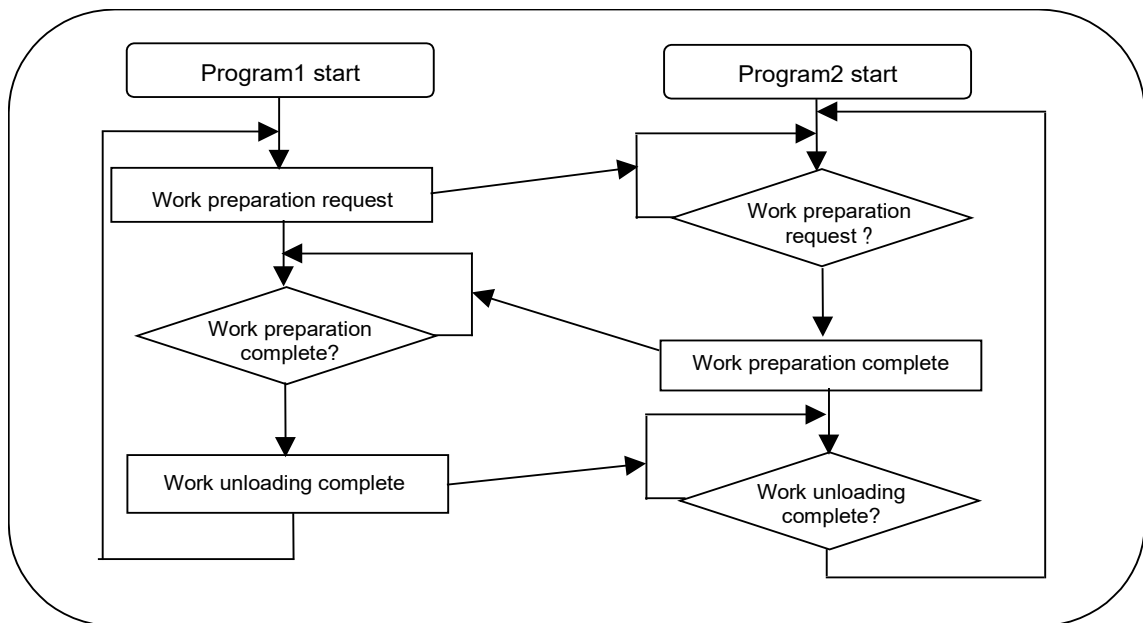

(6) Procedure up to program execution

Procedure 1 : Program creation

<1>Program of mechanism number 1 (Program name:1)

100 GetM 1	' Gets mechanism 1
110 M_01#=0	' Interlock variable is initialized
120 M_02#=0	' Interlock variable is initialized
130 Mov P1SF	' Moves to safe position
140 *LOOP	
150 M_01#=1	' Requests for preparation of work on vertical moving axis
160 If M_01#=1 Then GoTo 160	' Waits for completion of preparation of work on vertical moving axis
170 Mov P11,-10	' Moves 10 mm below P11
180 Mvs P12,-10	' Moves 10 mm below P12
190 Mvs P12	' Move to P12
200 M_Out(10)=0	' Pickup workpiece
210 Dly 0.05	' Waits for 0.05 sec of vacuum timer
220 Mvs P12,10	' Moves 10 mm above P12
230 Mvs P11,10	' Moves 10 mm above P11
240 Dly 0.1	' Waits for completion (static) of operation (set values must be adjusted)
250 M_02#=1	' Unloading of work from vertical moving axis is complete.
260 Mov P1SF	' Move to safe position
270 GoTo *LOOP	

<2>Program of mechanism number 2 (Program name:2)

100 GetM 2	' Gets mechanism 2
110 M_Out(11)=0	' Prohibits work transport to external location
120 PMV=P_Curr(2)	' Reads current position
130 PMV.X=P231.X	' Rewrites element of axis 1 (vertical moving axis 1) of current position
140 Mov PMV	' Moves to work transport position
150 Dly 0.1	' Waits for completion (static) of operation (set values must be adjusted)
160 *LOOP	
170 If M_01#=0 Then GoTo 170	' Waits requests for request of preparation of work on vertical moving axis 1
180 M_Out(11)=1	' Permits work transport to external location
190 If M_In(11)=0 Then GoTo 190	' Waits for completion of work transport from external location
200 M_Out(11)=0	' Prohibits work transport to external location
210 PMV=P_Curr(2)	' Reads current position
220 PMV.X=P232.X	' Rewrites element of axis 1 (vertical moving axis 1) of current position
230 Mov PMV	' Moves to the position where robot unload work
240 Dly 0.1	' Waits for completion (static) of operation (set values must be adjusted)
250 M_02#=0	' Requests to unload the work from the moving axis.
260 M_01#=0	' Preparation of work on vertical moving axis 1 incomplete.
270 If M_02#=0 Then GoTo 270	' Waits for completion of unload the work from vertical moving axis
280 PMV=P_Curr(2)	' Reads current position
290 PMV.X=P231.X	' Rewrites elements of axis 1 (vertical moving axis 1) of current position
300 Mov PMV	' Moves to work transport position
310 GoTo *LOOP	

8. User Mechanism Settings, Operation, and Commands

Procedure 2 : Setting the task slot parameter
Set the slot parameters as follows.

Parameters	Program name	Operation mode	Operation format	Number of executed lines
SLT1	1	REP	START	1
SLT2	2	REP	START	1

The slot parameters have the format shown below.
For details refer to separate "Instruction Manual/ Detailed explanations of functions and operations".

SLT* = 1. Program name, 2. Operation format, 3. Starting conditions, 4. Order of priority

Item of parameter	Default value	Setting value
1. Program name	-	Possible to set a registered program name
2. Operation format	REP	REP : Continuous Operation
		CYC : One cycle operation
3. Starting conditions	START	START : Execution of a program using the START button on the operation panel or the I/O START signal
		ALWAYS : Execution of a program when the controller's power is turned on
		ERROR : Execution of a program when the controller is in error status
4. Order of priority	1	1 to 31: Number of lines executed at one time at multitask operation

Procedure 3 : Reflecting the task slot parameters

Turn off the power to enable the SLT1 and SLT2 parameters, and then turn on the power again.

Procedure 4 : Starting

Run the program 1 in the OPERATION screen of the teaching pendant. When the program 1 is started, the program 2 starts its operation simultaneously.

9. Such a Case

- (1) An initializing error occurs on the servo amplifier.
 - Check the connection of the cable and connector. (Refer to "this manual/5 Connection and Wiring".)
 - Check the setting of the axis selection switch and robot parameter (AXNUM, AXMENO, AXJNO) of the amplifier. (Refer to "this manual/6 Servo system setting".)
- (2) The moving direction of the additional axis is reversed.
 - Check the setting of the parameter AXSPOL of the robot. (Refer to "this manual/7.1 Description of parameters, 8.2 Description of parameters".)
 - Check the setting of the parameter PA14 POL of the servo amplifier. (Refer to "this manual/6.2 Parameter setting of servo amplifier".)
- (3) The position varies every time when the power supply is turned ON and OFF.
 - Check the setting of the parameter PA03 ABS of the servo amplifier. (Refer to "this manual/6.2 Parameter setting of servo amplifier".)
 - Check the setting of the parameter PA14 POL of the servo amplifier. (Refer to "this manual/6.2 Parameter setting of servo amplifier".)
- (4) The additional axis does not move smoothly or satisfactorily.
 - Adjust the parameter of the servo amplifier. For details, refer to "Instruction Manual for Servo Amplifier".

10. Appendix

10.1 Error list

When an error occurs, the error LED in the front of the controller will light or flash.

Also the error No, and message will appear on the T/B LCD display.


The error numbers, messages, cause and measures to be taken related to the additional axis function are displayed in the following table.

For the errors not listed here, refer to separate "Instruction Manual/ Troubleshooting".

Also, a detailed message will be displayed on the Error History screen of the T/B, depending on the error No. of the error occurred. Check by displaying the Error History screen after resetting the error.

If the error recurs even after the measures in the table are taken, contact your dealer.

[Note] The meaning of the error number in the following table are shown below.

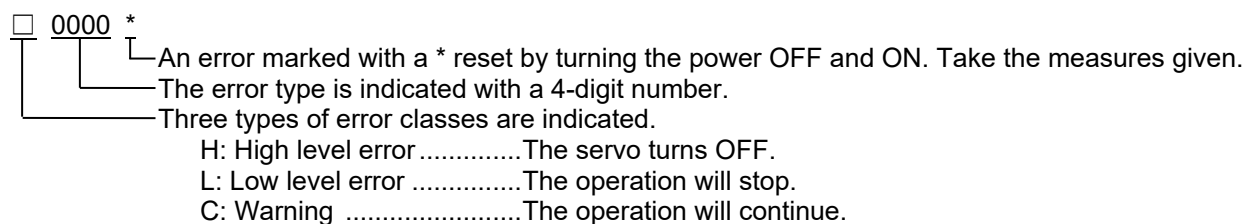

Error No.	Error cause and measures	
H7600*	Error message)	Mechanism number of additional axis is illegal.
	Cause)	The value of AXMENO (mechanism No. used) parameter is illegal.
	Countermeasure)	On the mechanical additional axis, change "0" to a value which is smaller than set to AXUNUM (number of mechanisms used).
H7601*	Error message)	Axis number of additional axis is illegal.
	Cause)	The value of AXJNO (setting axis No.) is illegal.
	Countermeasure)	Change the value of this parameter from 1 to 3. Change the value of this parameter to a order from 1.
H7602*	Error message)	Axis numbers of additional axis are overlap.
	Cause)	As the parameter value of AXJNO (setting axis No.), the same value is set at two or more elements.
	Countermeasure)	Change the values of the element Nos. which set the same values at this parameter AXMENO, to all different values.
H7603*	Error message)	Unit of additional axis is illegal.
	Cause)	The value of AXUNT (unit axis) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to "0" or "1".
H7604*	Error message)	Acceleration time of additional axis is illegal.
	Cause)	The value of AXACC (acceleration time) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to positive real numbers.
H7605*	Error message)	Deceleration time of additional axis is illegal.
	Cause)	The value of AXDEC (deceleration time) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to positive real numbers.
H7606*	Error message)	Gear ratio numerator of additional axis is illegal.
	Cause)	The value of AXGRTN (total speed ratio numerator) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to positive integers.
H7607*	Error message)	Gear ratio denominator of additional axis is illegal.
	Cause)	The value of AXGRD (total speed ratio denominator) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to positive integers.

Error No.	Error cause and measures	
H7609*	Error message)	Motor rated speed of additional axis is illegal.
	Cause)	The value of AXMREV (rated speed) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to positive integers.
H7610*	Error message)	Motor maximum speed of additional axis is illegal.
	Cause)	The value of AXJMX (maximum speed) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to positive integers.
H7611*	Error message)	Encoder pulse of additional axis is illegal.
	Cause)	The value of AXENCR (encoder resolution) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to positive integers.
H7612*	Error message)	JOG smoothening time constant of additional axis is illegal.
	Cause)	The value of AXJOGTS (JOG smoothening time constant) parameter is illegal.
	Countermeasure)	Change the values of all elements of this parameter to 0 or positive real number.
H7613*	Error message)	Turn OFF the power supply once, and turn ON it again.
	Cause)	It is necessary to turn OFF the power supply once.
	Countermeasure)	Turn OFF the power supply of the controller, and turn it ON again.

10.2 Add axis limit switch function

10.2.1 Outline

Add axis limit switch function watches the state of the limit switch connected to the servo amplifier (MR-J4-□B), and when the switch was input, this function stops the robot by the error.

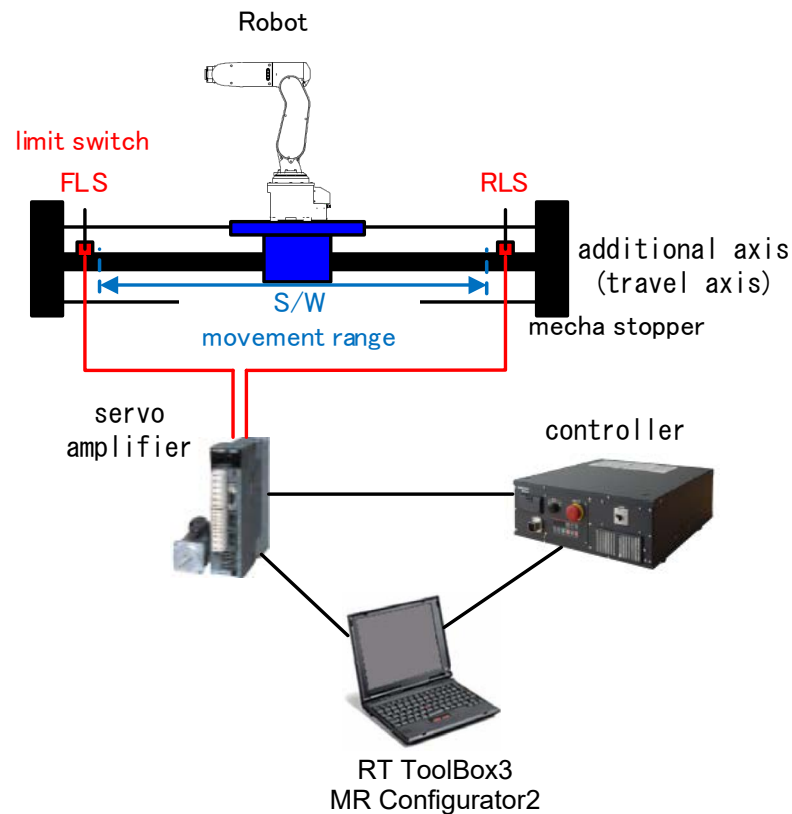


Fig. 11.2.1 Example of equipment constitution

Like the figure above, when the additional axis was installed as the robot travel axis and the limit switch (FLS/RLS) installed on the travel axis was input, the function which brings about an error, does servo off and suspends movement of the robot.

This figure is an example of the robot additional axis. When using the additional axis as the user mechanism, this function can be used.

When it's restored from the state that FLS/RLS was input, release the brake and move the arm by hand. Or, referring to "Operation to Temporarily Reset an Error that Cannot Be Canceled" in the separate volume "Instruction Manual/Detailed Explanation of Functions and Operations", reset the error and move the axis "n" within the operation range using JOG operation.

10.2.2 Setting

(1) FLS/RLS connection setting

When using this function, the limit switch (FLS/RLS) is connected to the servo amplifier (MR-J4-B).

How to connect the FLS / RLS and servo amplifier, please refer to the instruction manual of the MR-J4-□B (SH-030101) "3. SIGNALS AND WIRING".

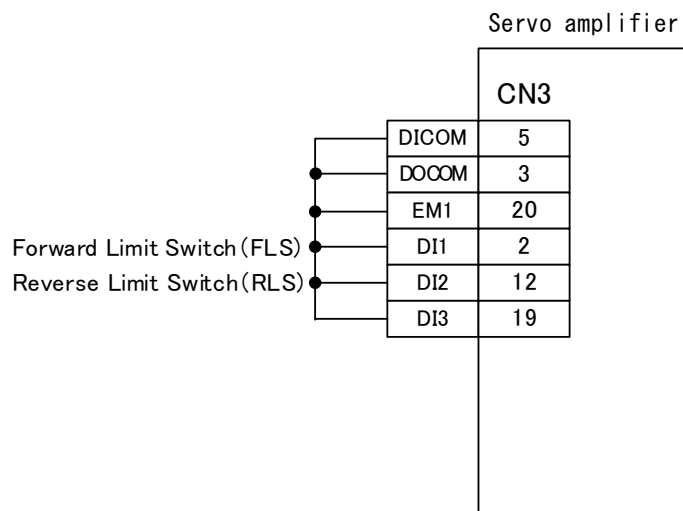


Fig. 11.2.2 FLS/RLS signal connection

Please change the parameters of the servo amplifier like the following table by refer to "6.2 Parameter setting of servo amplifier".

Table 11.2.1 Parameter configuration of the servo amplifier

No.	Name	Initial value	Change value
PD03	For manufacturer setting	0000h	0020h
PD04	For manufacturer setting	0000h	0021h

(2) Parameter

When using this function, set the following parameter.

Table 11.2.2 Parameter configuration of robot controller

Parameter name	Description	Type Number of arrays	Details explanation	Factory setting
AXLSIN	Enable / Disable of the Add axis limit switch function.	integer 16	Define the enable or disable of the Add axis limit switch function for each additional axis. (Enable / Disable = 1 / 0) When additional axis doesn't exist, this setting becomes invalid. 1st element : additional axis No.1 2nd element : additional axis No.2 3rd element : additional axis No.3 4th element : addition axis No.4 5th element : addition axis No.5 6th element : addition axis No.6 7th element : addition axis No.7 8th element : addition axis No.8 9th to 16th element : Not Used	0,0,0,0,0,0,0,0, 0,0,0,0,0,0,0,0
AXLSINB	Normal Open or Normal Close designation of the limit switch input.	integer 1	Change the limit switch input between the normal open and normal close. This setting is common in FLS/RLS of all servo amplifiers. (Normal open/Normal close = 0/1)	0 (normal open)

When the state of FLS/RLS signal is output as Dedicated input/output, set the following parameter.

Table 11.2.3 Parameter configuration of robot controller

Parameter name	Description	No. of arrays	Details explanation	Factory setting
AXFLSST	Output signal number of FLS state.	integer 2	Specify the dedicated output signal number to output the state of the FLS signal. (start No. , end No.) [Setting example] AXFLSST = 16, 16 : The output of the state of the only No.1 add axis. AXFLSST = 16, 17 : The output of the state of the No.1 and 2 add axis. AXFLSST = 16, 23 : The output of the state of the all add axis. Incorrect settings example) AXFLSST = -1, -1 : Setting invalid(No outputs) AXFLSST = -1, 16 : to Setting invalid(No Error) AXFLSST = 16, -1 : to Setting invalid(No Error) AXFLSST = 17, 16 : to Setting invalid(Error L7081)	-1,-1
AXRLSST	Output signal number of RLS state.	integer 2	Specify the dedicated output signal number to output the state of the RLS signal. (start No. , end No.) [Setting example] Refer to AXFLSST for setting example.	-1,-1

[Setting example]

When using this function on the servo amplifier set "Control axis No. of servo" as the 1st axis, and the limit switch is closed, set the following parameter.

Table 11.2.4 Example of parameter configuration

Parameter name	Meaning of the value	Value
AXLSIN	Add axis limit switch function Enable(1)/Disable (0)	1,0,0,0,0,0,0,0,0,0,0,0,0,0,0,0 (Set "1" to the 1st element.)
AXLSINB	Add axis limit switch input signal normally close(1) /open(0)	1 (normal close)

When the state of the FLS signal is output in output signal number 10 and the state of the RLS signal is output in output signal number 11, set the following parameter.

Table 11.2.5 Example of parameter configuration

Parameter name	Meaning of the value	Value
AXFLSST	State of Add axis FLS signal (start, end) OUTPUT	10,10
AXRLSST	State of Add axis RLS signal (start, end) OUTPUT	11,11

10.2.3 Error list

Table 11.2.6 Error list

Error No.	Error cause and measures	
H264n (n indicates the axis number (1 to 8))	Error message	Add axis FLS signal is input
	Cause	Add axis FLS signal is input
	Measures	Release the brake and move the arm by hand. Or, referring to "Operation to Temporarily Reset an Error that Cannot Be Canceled" in the separate volume "Instruction Manual/Detailed Explanation of Functions and Operations", reset the error and move the axis "n" within the operation range using JOG operation.
H265n (n indicates the axis number (1 to 8))	Error message	Add axis RLS signal is input
	Cause	Add axis RLS signal is input
	Measures	Release the brake and move the arm by hand. Or, referring to "Operation to Temporarily Reset an Error that Cannot Be Canceled" in the separate volume "Instruction Manual/Detailed Explanation of Functions and Operations", reset the error and move the axis "n" within the operation range using JOG operation.

Trademarks

- No part of this manual may be reproduced by any means or in any form, without prior consent from Mitsubishi.
- The details of this manual are subject to change without notice.
An effort has been made to make full descriptions in this manual. However, if any discrepancies or unclear points are found, please contact your dealer.
- The information contained in this document has been written to be accurate as much as possible. Please interpret that items not described in this document "cannot be performed" or "error may occur".
Please contact your nearest dealer if you find any doubtful, wrong or skipped point.
- This is the original document.
- All company names and production names in this document are the trademarks or registered trademarks of their respective owners.

Copyright (C) 2017 MITSUBISHI ELECTRIC CORPORATION

Copyrights

- The screens (screenshots) are used in accordance with the Microsoft Corporation guideline.

mitsubishi electric corporation

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA 461-8670, JAPAN